 


SWITCHING REMOTE CONTROLLER CUSTOM CODES

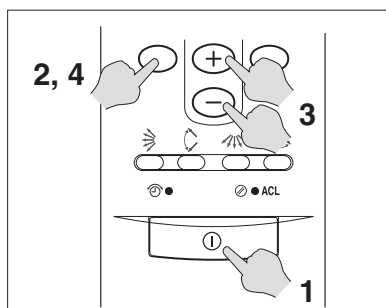

1. Press the button and display only the clock.
2. Press the button for more than 5 seconds to display the current custom code. (Initially set to A)
3. Press the button.
Change the custom code between A-b-c-d to match the code on the display to the air conditioner custom code.
4. Press the button again to return to the clock display. (The custom code will be changed.)

NOTES

- (1) If no buttons are pressed within 30 seconds after the custom code is displayed, the system returns to the original clock display. In this case, start again from step 1.
- (2) The remote controller resets to custom code A when the batteries in the remote controller are replaced. If you use a custom code other than custom code A, reset the custom code after replacing the batteries.
If you do not know the air conditioner custom code setting, try each of the custom codes (A-b-c-d) until you find the code which operates the air conditioner.

OPERATING TIPS

Cooling / heating priority (AIRSTAGE™ (VRF system) Heat Pump model only)

- If another indoor unit in the same system is already operating in the cooling mode or dry mode, heating mode settings cannot be performed.
- If another indoor unit in the same system is already operating in the heating mode, cooling mode or dry mode settings cannot be performed.

TROUBLE SHOOTING

Before requesting service, perform the following checks:

	Symptom	Cause and Action
CHECK ONCE MORE	Doesn't operate at all.	• Has there been a power failure? • Has a fuse blown out, or a circuit breaker been tripped? • Is the main power switch set to the OFF position? • Is the timer operating?
	The unit operates differently from the remote controller's setting.	• Are the remote controller's batteries dead? • Are the remote controller's batteries loaded properly? • Has the remote controller's custom code been reset?

If the problem persists after performing these checks, or if you notice burning smells, or the TIMER indicator flashes, immediately stop operation, turn off the electrical breaker and consult authorized service personnel.

SPECIFICATIONS

MODEL	POWER	DIMENSION & WEIGHT			
		HEIGHT [mm]	WIDTH [mm]	DEPTH [mm]	WEIGHT [g]
UTB-□VB	DC3V	158	56	20	70

 
AIRSTAGE™

AIR CONDITIONER

KEEP THIS OPERATING MANUAL FOR
FUTURE REFERENCE

OPERATING MANUAL

REMOTE CONTROLLER
(WIRELESS TYPE)

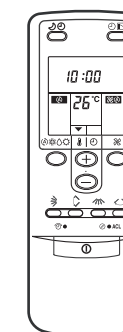

P/N 9374136018 English

FUJITSU GENERAL LIMITED

SAFETY PRECAUTIONS

Before using the appliance, read these "PRECAUTIONS" thoroughly and operate in the correct way.
The instructions in this section all related to safety; be sure to maintain safe operating conditions.

⚠ DANGER!

This mark indicates procedures which, if improperly performed, are most likely to result in the death of or serious injury to the user or service personnel.

- This controller contains no user-serviceable parts. Always consult authorized service personnel for repairs.
- If a problem (burning smell, etc.) occurs, turn off the electrical breaker immediately to stop operation, and then consult authorized service personnel.
- Never place fingers or foreign objects inside the outlet port. Doing so could cause personal injury.

⚠ WARNING!

This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

 
⚠ CAUTION!

This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

- Do not expose the controller directly to water.
- Do not operate the controller with wet hands.
- Do not touch the switches with sharp objects.
- Always turn off the electrical breaker whenever cleaning the controller, the air conditioner or the air filter.
- Check the condition of the installation stand for damage.
- Ensure that any electronic equipment is at least one meter away from the controller.
- Avoid installing the controller near a fireplace or other heating apparatus.
- When installing the controller, take precautions to prevent access by infants.
- Do not use inflammable gases near the controller.
- Take care to prevent infants from accidentally swallowing batteries.

PREPARATION

LOAD BATTERIES (R03/LR03 x 2)

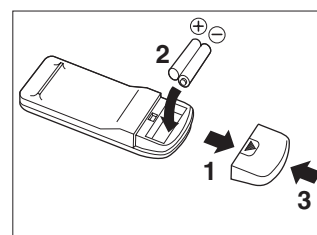


1. Press and slide the lid.
2. Insert batteries.
Be sure to follow the polarity markings indicated in the compartment.
3. Slide back the lid.

⚠ CAUTION

- (1) When not using the remote controller for an extended period, remove the batteries to avoid possible leakage and damage to the unit.
- (2) Never mix new and used batteries, or batteries of different types.
- (3) Batteries should last about one year under normal use. If the remote controller's operating range becomes appreciably reduced, replace the batteries and press the ACL button.


PREPARATION

 REMOTE CONTROLLER HOLDER

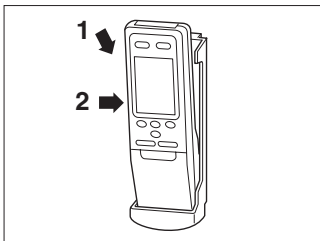

To set the remote controller in the holder

 
1. Insert.
2. Press in.

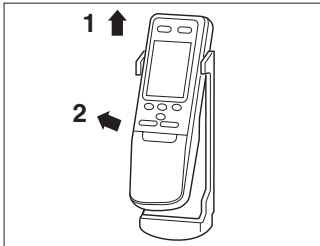

To take out the remote controller from the holder

1. Slide up.
2. Pull out.

 SET THE CURRENT TIME

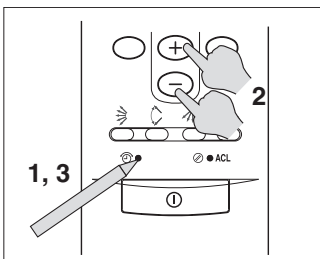

1. Press the TIME ADJUST button.
2. Press the + / - button.
3. Press the TIME ADJUST button.

NOTES

- (1) The remote controller must be pointed at signal receiver to operate correctly.
- (2) Operating range : About 7 meters.
- (3) Beeping sound
 - When a signal is properly received by the air conditioner, a beeping sound will be heard twice.
 - If an invalid signal is received by the air conditioner, a beeping sound will be heard 5 times.
 - If no beeping sound is heard, press the remote controller button again.
- (4) The buttons except the SLEEP, TIME ADJUST and ACL buttons can only be selected while in operation mode.
- (5) PROGRAM timer
 - The PROGRAM timer allows you to integrate OFF timer and ON timer operations in a single sequence.
 - The first timer function to operate will be the one set nearest to the current time.
- (6) SLEEP timer
 - To prevent excessive warming or cooling during sleep, the SLEEP timer function automatically modifies the set temperature in accordance with the time setting. When the set time has elapsed, the air conditioner completely stops.
- (7) When connecting with other controllers, the indoor unit might be controlled by the other controllers.
- (8) The wired remote controller or the simple remote controller can also be used with this unit.

SLEEP TIMER

To set or change the SLEEP Timer

1. Press the (SLEEP) button.
2. Press the + / - button.

 
To cancel the SLEEP Timer

Press the button.
Select (TIMER RESET).
The air conditioner will return to normal operation.

MASTER CONTROL

Press the button while in operation.

NOTES

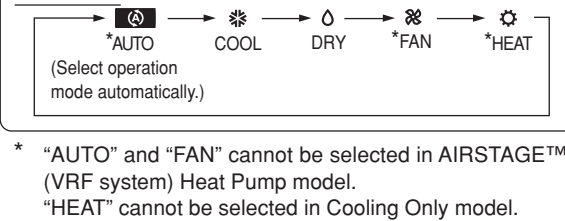

TEMPERATURE

Press the + / - button while in operation.

NOTES

Temperature setting range
 AUTO 18 to 30 °C
 HEAT 16 to 30 °C
 COOL/DRY 18 to 30 °C
 The thermostat setting should be considered a standard value, and may differ somewhat from the actual room temperature.

AIR DIRECTION (UPPER AND LOWER)

Press the button while in operation.

For swing operation:

Press the button while in operation.
Stop the setting by pressing it again.

NOTES

 
Refer to the operating manual of the indoor unit for range of swing.

OPERATION

ON / OFF TIMER

1. Press the button.
Select (OFF TIMER) or (ON TIMER).

NOTES



2. Press the + / - button.
Adjust the OFF or ON TIME.

PROGRAM TIMER

To set or change the PROGRAM Timer

1. Press the button.
Select (OFF TIMER).
2. Press the + / - button.
Adjust the OFF time.
3. Repeat Step 1 and 2 to adjust ON time.
4. Press the button.
Select (PROGRAM TIMER).
(If the ON timer has been selected to operate first, the unit will stop operating at this point.)

 
To cancel the PROGRAM Timer

Press the button.
Select (TIMER RESET).
The air conditioner will return to normal operation.

FAN SPEED

Press the button while in operation.

NOTES



AIR DIRECTION (RIGHT AND LEFT)

Press the button while in operation.

For swing operation:

Press the button while in operation.
Stop the setting by pressing it again.

NOTES

Refer to the operating manual of the indoor unit for range of swing.

START / STOP

Each press of the button alternates operation and stop.