

# OPERATING MANUAL

## WEB MONITORING TOOL for VRF System

UTY-AMGX

Ver. 1.0



### CAUTION

Please read the LICENSE AGREEMENT in the manual first.

9708314013-01

FUJITSU GENERAL LIMITED



# LICENSE AGREEMENT for “WEB MONITORING TOOL for VRF SYSTEM” (Version 1.0)

## IMPORTANT-READ CAREFULLY

This “WEB MONITORING TOOL for VRF SYSTEM” License Agreement (LICENSE AGREEMENT) is a legal agreement between you and Fujitsu General Limited (FGL) for the use of VRF WEB MONITORING TOOL products designated below, which includes computer software and printed materials, and may include online or electronic documentation (SOFTWARE PRODUCT or SOFTWARE). By installing, copying, or otherwise using the SOFTWARE PRODUCT, you accept to be bound by all of the terms and conditions of this LICENSE AGREEMENT. If you do not agree to all of the terms and conditions of this LICENSE AGREEMENT, you may not use the SOFTWARE PRODUCT and shall promptly return the SOFTWARE PRODUCT to the place from which you have obtained it.

### 1. SOFTWARE PRODUCT LICENSE.

The SOFTWARE PRODUCT is protected by copyright laws and international copyright treaties, as well as by other intellectual property laws and treaties. The SOFTWARE PRODUCT is licensed to you, not sold. FGL owns the title, copyright, and other intellectual property rights in the SOFTWARE PRODUCT.

### 2. GRANT OF LICENSE.

FGL hereby grants you the limited, non-exclusive and non-transferable rights only for the purpose of controlling the VRF air-conditioning system products (VRF) provided you comply with all terms and conditions of this LICENSE AGREEMENT.

### 3. COPYRIGHT.

All right, title, and copyright in and to the SOFTWARE PRODUCT, and any copies of the SOFTWARE PRODUCT are owned by FGL. The SOFTWARE PRODUCT is protected by copyright laws and international treaty provisions. Therefore, you may copy the SOFTWARE PRODUCT solely for backup or archival purposes.

### 4. DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

#### (1) LIMITATIONS ON REVERSE ENGINEERING, DECOMPILATION, AND DISASSEMBLY.

You may not reverse engineer, decompile, or disassemble the SOFTWARE PRODUCT, except and only to the extent that applicable law expressly permits such activity notwithstanding this limitation.

#### (2) RENTAL.

You may not rent or lease the SOFTWARE PRODUCT.

#### (3) SOFTWARE TRANSFER.

You may not transfer the SOFTWARE PRODUCT to any person and/or entity (-ies) either payable or free of charge.

#### (4) TERMINATION.

Without prejudice to any other rights, FGL may terminate this LICENSE AGREEMENT if you fail to comply with the terms and conditions of this LICENSE AGREEMENT. In such an event, you shall promptly return all originals and copies of the SOFTWARE PRODUCT to FGL.

### 5. USE OF SOFTWARE PRODUCT.

You may install and use the enclosed SOFTWARE PRODUCT on a single terminal connected to a single computer. You may not network the SOFTWARE or otherwise use it on more than one computer terminal at the same time. The infrastructure necessary to use this software (PC, accessories, etc.), shall be prepared separately by you.

## **6. NO WARRANTY.**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, FGL EXPRESSLY DISCLAIMS ANY WARRANTY FOR THE SOFTWARE PRODUCT. THE SOFTWARE PRODUCT AND ANY RELATED DOCUMENTATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OR MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK ARISING OUT OF USE OR PERFORMANCE OF THE SOFTWARE PRODUCT REMAINS WITH YOU.

## **7. LIMITATION OF LIABILITY AND CUSTOMER REMEDIES.**

FGL'S ENTIRE LIABILITY AND YOUR EXCLUSIVE REMEDY UNDER THIS LICENSE AGREEMENT SHALL BE, AT FGL'S OPTION, REPLACEMENT OF THE SOFTWARE WHICH IS RETURNED TO FGL. THIS LICENSE AGREEMENT SHALL ALSO APPLY TO THE REPLACEMENT SOFTWARE SUPPLIED UNDER THIS SECTION 7.

## **8. NO LIABILITY FOR CONSEQUENTIAL DAMAGES.**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL FGL BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFIT, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) DIRECT OR INDIRECT, TO YOU OR TO ANY THIRD PARTY, ARISING OUT OF THE USE OR INABILITY TO USE THIS PRODUCT, EVEN IF FGL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## **9. ENTIRE AGREEMENT.**

This LICENSE AGREEMENT (including any addendum or amendment to this LICENSE AGREEMENT included with the SOFTWARE PRODUCT) is the entire agreement between you and FGL relating to the SOFTWARE PRODUCT and supersedes all prior contemporaneous oral or written communications, proposals and representations with respect to the SOFTWARE PRODUCT or any other subject covered by this LICENSE AGREEMENT.

## **10. INDEMNITY.**

You agree to indemnify and hold FGL, and its subsidiaries, affiliates, officers, agents, co-branders or other partners, and employees, harmless from any damage, claim or demand, including without limitation reasonable attorneys' fees, made by any third party due to or arising out of your violation of the terms and conditions of this LICENSE AGREEMENT, or your violation of any rights of another person or entity.

## **11. GOVERNING LAW AND JURISDICTION.**

To the maximum extent permitted by applicable law, this LICENSE AGREEMENT is governed by the laws of JAPAN. To the maximum extent permitted by applicable law, you and FGL hereby irrevocably submit to the exclusive jurisdiction of the Tokyo District Court and other higher courts having jurisdiction in Japan for the settlement of disputes arising under or in connection with this LICENSE AGREEMENT.



# Contents

<b>1. Safety precautions</b> .....	<b>4</b>
<hr/>	
1-1 Safety precautions .....	4
1-2 Precautions when using the Web Monitoring Tool .....	5

# 1. Safety precautions


## 1-1 Safety precautions

- Before using Web Monitoring Tool, read this “Safety precautions” thoroughly to ensure the correct operation.
- This section describes the important safety information to operate Web Monitoring Tool.
- The meanings of “WARNING” and “CAUTION” are explained as follows.

 <b>WARNING!</b>	This mark indicates the procedures, which might result in the death of or serious injury to the user or service personnel if improperly performed.
 <b>CAUTION!</b>	This mark indicates the procedures, which might result in personal harm to the user or damage to property if improperly performed.

**This manual is for service personnel authorized to use the Web Monitoring Tool. Always keep this manual in an easily accessible place for use by authorized service personnel.**

 <b>WARNING!</b>
<ol style="list-style-type: none"> <li>1. When using U10 USB network adaptor, follow the instructions given in the manual that comes with product.</li> </ol>

 <b>CAUTION!</b>
<p>Web Monitoring Tool can control the air-conditioner system on a personal computer. Be careful not to turn off the power supply of the personal computer, or not to finish the application compulsorily during operation. Otherwise, Web Monitoring Tool might malfunction. For personal computer used as Web Monitoring Tool, refer to the instruction manual.</p>

## 1-2 Precautions when using the Web Monitoring Tool

1. Please read and fully understand the Operating Manual. Fujitsu General Limited is not responsible for improper use.
2. Fujitsu General Limited is not responsible if the settings in this software or data used for the controlling are deleted. We request that the customer take responsibility for the administration of the settings and control data.
3. If the personal computer operating this software stops, immediately restart the computer and restart this software. Also, if the unit equipment stops due to a power supply interruption, restart this software immediately as there is the potential for malfunctioning.
4. The master CD for this software and the WIBU-key (Software protection key) will not be reissued. Store the master CD in a safe place after installing.
5. For information about operating your personal computer, refer to the operating manual for the PC and the store that sold it.
6. Never start this software simultaneously with other software as this may cause malfunctioning. The PC running this software must be dedicated for the use of this product.
7. When Web Monitoring Tool program is running, do not set/adjust the time and date of the PC to prevent data becoming inconsistent.  
If time has been adjusted backward toward the past, wait for the time to elapse until the adjusted time catches up with the original time before adjustment. You may then start the Web Monitoring Tool, again.
8. Web Monitoring Tool is tested to install and operate under new Windows environment.
9. When program executional environment of Windows is corrupted or abnormal, or other softwares that interfere with the operation of Web Monitoring Tool is installed or running, Web Monitoring Tool may not install or run properly. It is usually extremely difficult to detect such conditions, if it occurs.
10. Web Monitoring Tool product is provided with softwares, drivers, components listed below.
11. If the same kind of softwares, drivers, components with different version is installed on the same PC, Web Monitoring Tool may not install or run properly.
  - 1) .NET Framework
  - 2) Internet Information Services (IIS)
  - 3) Microsoft Data Access Components (MDAC)
  - 4) Microsoft SQL Server 2005 Express




# Contents

**2. Outline..... 8**

---

# 2. Outline

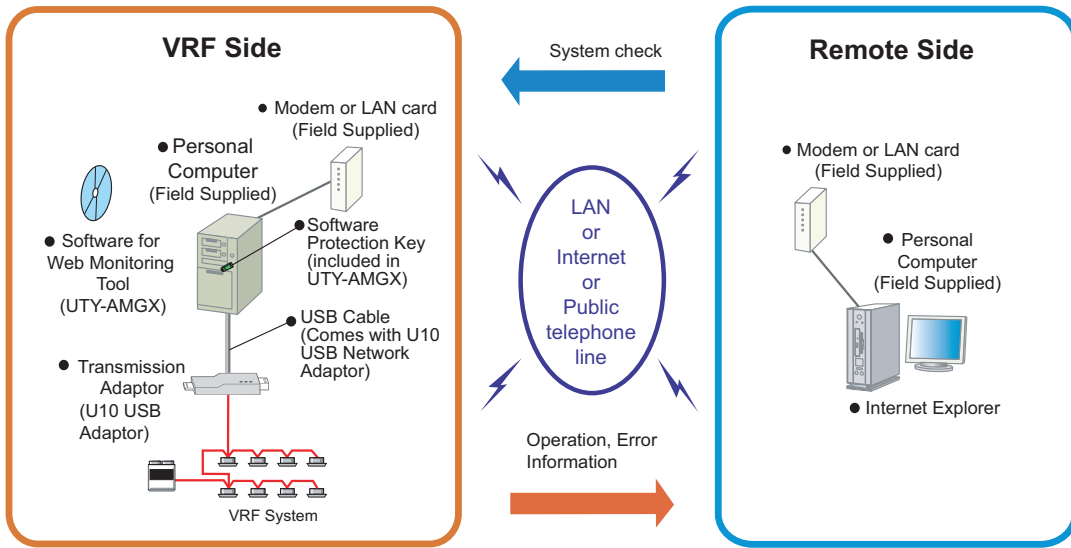

This operating manual explains the operating procedures for the software of Web Monitoring Tools for the VRF control system.

This tool lets you check a VRF System installed at a distant place from the remote side by LAN, internet, public telephone line, and other communications method. If a personal computer connectable to the network and Internet Explorer are available at the remote side, VRF System checks can be carried out at the same level as the Service Tool by simply selecting the time and place.

When an error occurs in the VRF System, the error is displayed at the remote side monitor. If internet is selected as the communications method, the error can be reported to a pre-registered address by e-mail. Moreover, since unit data for up to the last past week is recorded at the VRF side, defect phenomena for on-site repair can be grasped in advance by checking the unit data from a remote place when a defect occurred.


## ■ Software construction

The Web Monitoring Tool software consists of the two applications **Data acquisition application** and **WEB application** .

The **Data acquisition application** is a program which resides and run in a background when the Web Monitoring Tool is started, and exchanges data with the VRF System transmission line. It also records the received unit data to a database.



The **WEB application** is a Web server and a collection of server side program and scripts which converts the acquired Unit data to Table and Graph, and displays them to a browser (Internet Explorer) upon request from remote side. It also converts operations input from the User and passes them to the Data acquisition application through the Database. In this manual, Web application will refer to the collection of server side program and scripts.

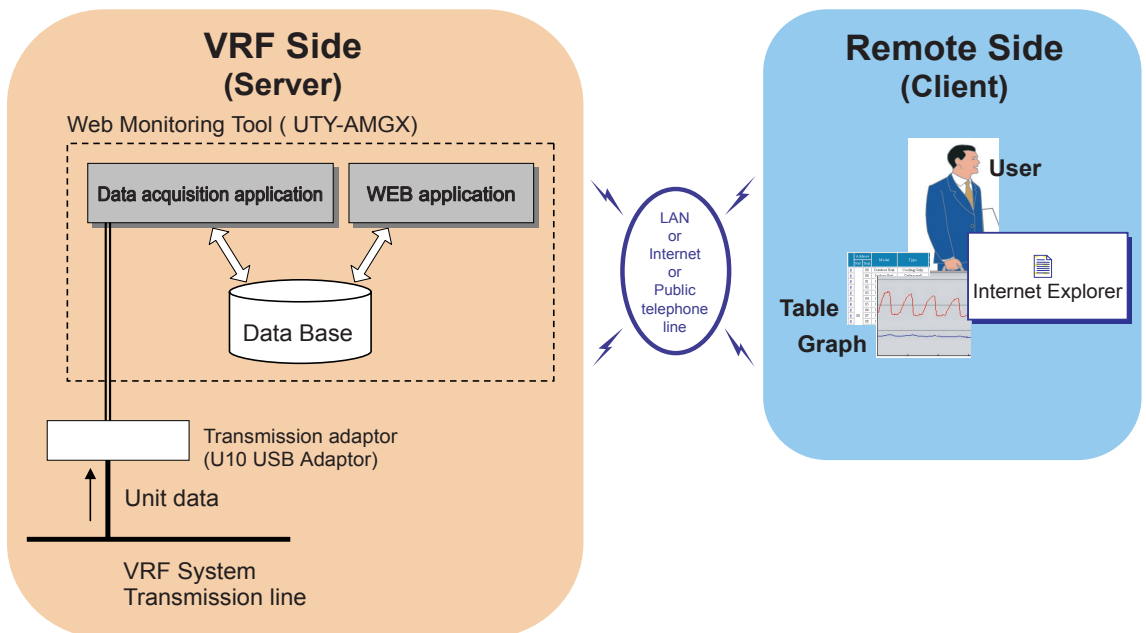

- Note**
- Hereinafter, the following will be used in the descriptions in this operating manual:
 

VRF Side	→	Server
Remote Side	→	Client



# Contents


<b>3. Data acquisition application starting flow</b> .....	<b>12</b>
<b>3-1 Screen transition</b> .....	<b>12</b>
<b>3-2 Data acquisition application starting (at initial starting)</b> .....	<b>13</b>
3-2-1 User registration .....	13
3-2-2 Login .....	14
3-2-3 Site data selection .....	15
3-2-4 Name master database file selection screen .....	16
■ Name master database file (.CSV) preparation .....	17
3-2-5 Scanning .....	19
■ Scanning setting screen .....	19
■ Scanning progress screen .....	22
3-2-6 Mismatched unit list .....	23
<b>3-3 Data acquisition application starting (automatic starting)</b> .....	<b>24</b>

# 3. Data acquisition application starting flow

## 3-1 Screen transition

By default, Data acquisition application of Web Monitoring Tool will start automatically upon power up of PC. Data acquisition application may be accessed by a right click menu of an icon in a task tray. The application may be terminated from this right click menu also. Refer Section 3.3 and 4 for detail.

### User Registration

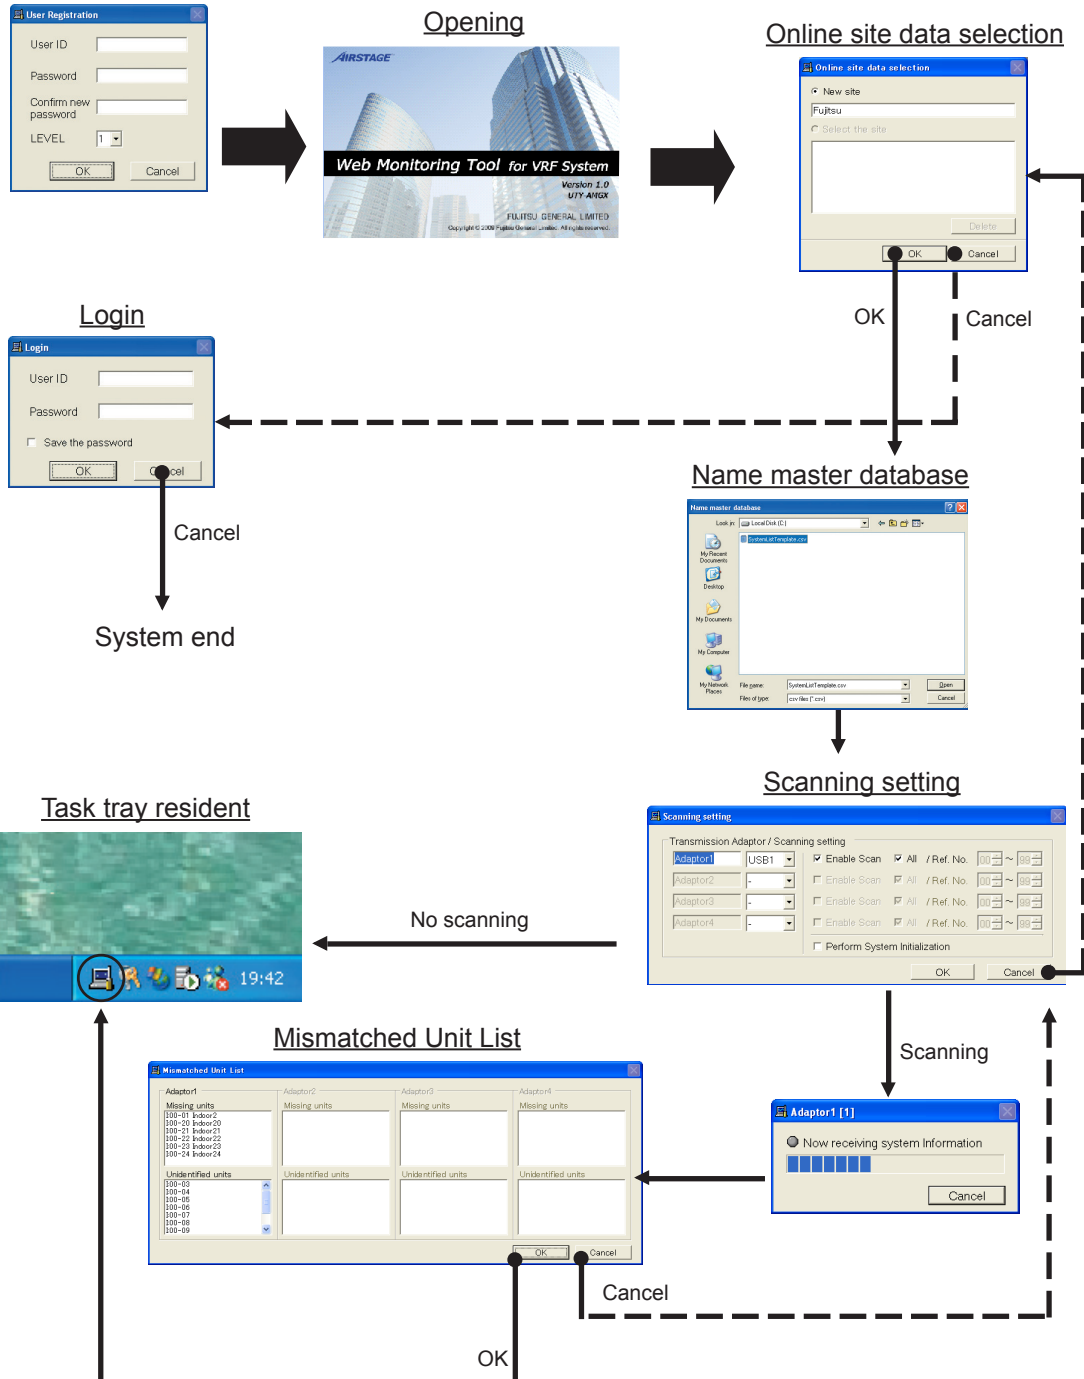


3. Data acquisition application starting flow

## 3-2 Data acquisition application starting (at initial starting)

### 3-2-1 User registration



User registration, change, and deletion can also be performed at 5-13 others screen (Setting). The use of this software is restricted to authorized person. User ID and password is used for authentication. When you start this software for the first time, you will be prompted to register User ID, Password, and Level of the User using this screen.

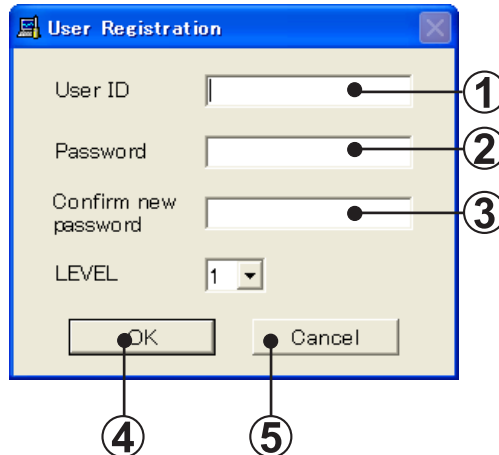

- ① User ID input field  
Input the user ID. (Up to 20 alphanumeric characters) (\*1)
- ② Password input field  
Input the password. (Up to 20 alphanumeric characters) (\*1)
- ③ Password confirmation input field  
Input the password again for confirmation. (Up to 20 alphanumeric characters) (\*2)

  - ④ User level selection  
Sets user level. Depending on the user level, function that may be performed varies. For details, refer to section 5-1-1 "Web application starting conditions and function change."




- ⑤ OK button  
When the  button is clicked, the inputted data is saved.  
The opening screen is displayed, and operation advances to site data selection processing.
- ⑥ Cancel button  
When the  button is clicked, user registration stops and the Web Monitoring Tool ends.

- Note**
- \*1 When the user ID and password input fields are not inputted, an error message is displayed.
  - \*2 When the password and password confirmation input contents are different, an error message is displayed.

## 3-2-2 Login

When user registration is completed, the login screen is displayed.

Login by registered user. The login screen is also displayed when security is necessary for certain actions.

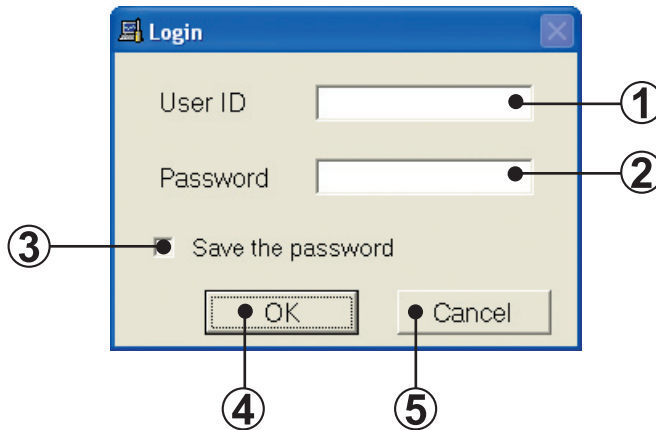

**1** User ID input field  
Input the ID of the user to be logged in. (Up to 20 alphanumeric characters) (\*1)

**2** Password input field  
Input the password of the user to be logged in. (Up to 20 alphanumeric characters) (\*1)

**3** Save the password check box  
When the Save the password check box was checked, the same user ID and password are automatically displayed the next time the Web Monitoring Tool is started.

When the Save the password check box is not checked, the next time the Web Monitoring Tool is started, the user ID and password are not displayed and must be manually inputted.

**4** OK button  
When the  button is clicked, the opening screen of the Web Monitoring Tool is displayed, and then operation advances to site data selection processing.




**5** Cancel button  
When the  button is clicked, the Web Monitoring Tool ends.

**Note** \*1 When the user ID and password input fields are not inputted, an error message is displayed.




### 3-2-3 Site data selection

This screen is displayed when registering a new site at initial starting. Only one site managed by Web Monitoring Tool can be registered.

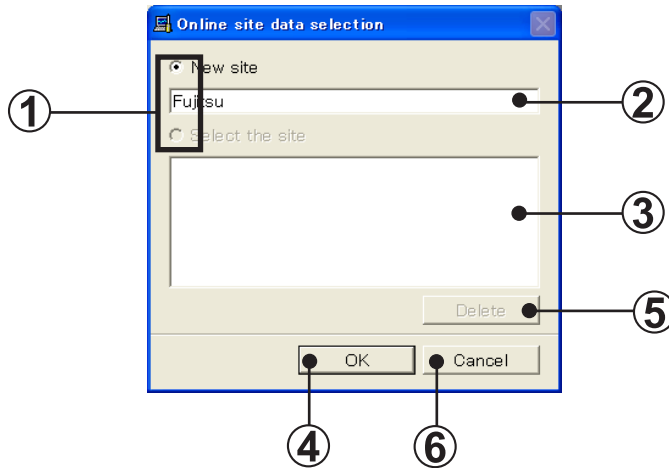

- ①** Site data selection item  
To register a new site, select “New site”. To select an already registered site data, select “Select the site”.
- ②** New site name input field  
When “New site” was selected at step ①, input the site name to be registered. Only alphanumeric characters and spaces may be used for the site name. (Up to 20 alphanumeric characters and spaces) (\*1)
- ③** Site data selection display field  
Displays the site names already registered.  
When “Select the site” was selected at step ①, select the objective site name. (\*2)
- ④** OK button  
When the  button is clicked, the name master database file selection screen is displayed.
- ⑤** Delete button  
Can be used only when the objective site name was selected at step ②.  
When the  button is clicked, all the data of the selected site is deleted.  
Before deletion processing, a confirmation screen is displayed.
- ⑥** Cancel button  
When the  button is clicked, the program returns to the login screen.

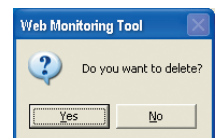


**Note** \*1 When deleting site data, execute the following batch file.  
C:\Program Files\VRF System\Web Monitoring Tool\Deletesite.bat  
This batch file exist in the Web Monitoring Tool software installation directory. The above directory shows the case where the software installation was performed using the default installation directory. When this batch file is executed, all the site data, including past unit data, is deleted and the site selection screen can be displayed the next time the Web Monitoring Tool is started. It is strongly recommended that you save the data for the current site before deletion.

\*2 When a site is not selected, an error message is displayed.

## 3-2-4 Name master database file selection screen

When scanning is performed by specifying a name master database file (.CSV), the specified file and the unit data actually scanned are collated, and the mismatched unit list of par. 3-2-6 can be performed.

Create the name master database file in advance and specify it from this screen.

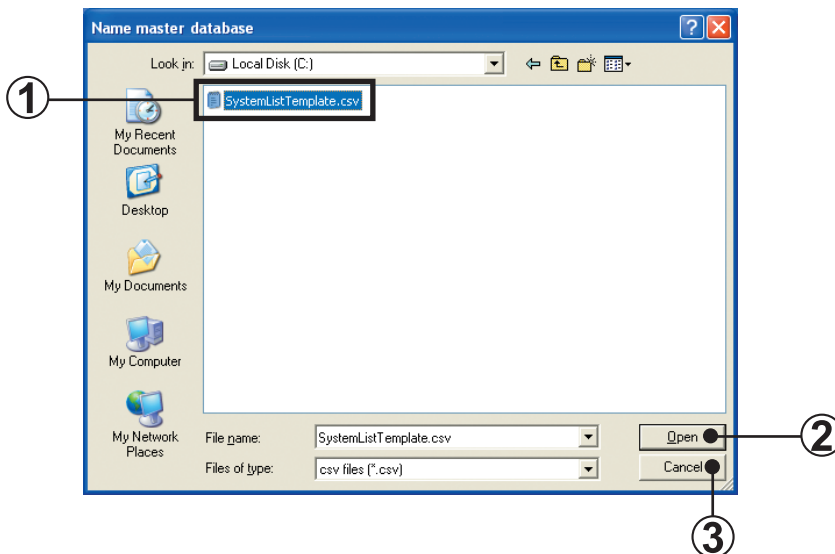

- 1** CSV file selection  
Select a name master database file (.CSV) containing the unit data. (\*1)
- 2** Open button  
When the  button is clicked, the scanning setting screen is displayed, and after the end of scanning, the differences between the name master database file and actual scanning result can be confirmed.
- 3** Cancel button  
When scanning is performed without selecting a name master database file (.CSV), click the  button. (The scanning setting screen is displayed.) In this case, the mismatched unit list screen is not displayed after scanning. (\*2)

**Note** \*1 Files other than CSV files cannot be selected and displayed.




\*2 When not selected, an error is not displayed even if there are units which cannot receive the address information normally.

### ■ Name master database file (.CSV) preparation


The address, name, and other information which becomes the comparison source during scanning are saved beforehand in CSV format.


- ① Since the template [SystemListTemplate.xls] is C:\Program Files\VRF System\Web Monitoring Tool\, open that file with Excel. (\*1) (\*2)
- ② Since the following screen is displayed, set a value at each item.

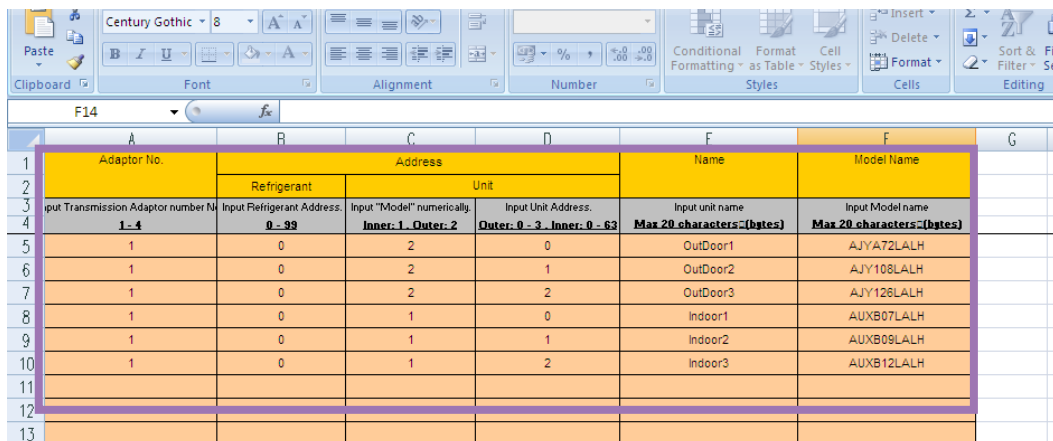

#### Input contents

Adaptor No.	Enter the Adaptor No. (Range: 1 ~ 4)	
Refrigerant	Enter the refrigerant system No. (Range: 0 ~ 99)	
Unit	Input "Model" numerically	Enter the unit model. (Inner: 1, Outer: 2)
	Input Unit Address	Enter the unit No. (When "1" is inputted in "Model" field, input within the 0 ~ 3 range. When "2" is inputted in "Model" field, input within the 0 ~ 63 range.)
Name	Enter a name which allows easy classification of units. When a name is entered in this field, it is displayed on the Web Monitoring Tool. Entry is not always necessary. When nothing is entered, the name is displayed as a blank. Only alpha-numeric characters and spaces may be used for the unit name.	
Model Name	Enter a correct model name for each unit, using alphanumeric characters, "-" and "#". If the model name is unknown, keep the cell blank.	

- 3 Select “Microsoft® Excel workbook (\*.CSV)” at Save as type. Confirm that the file name extension is [.CSV] and then click the  button. (\*3)

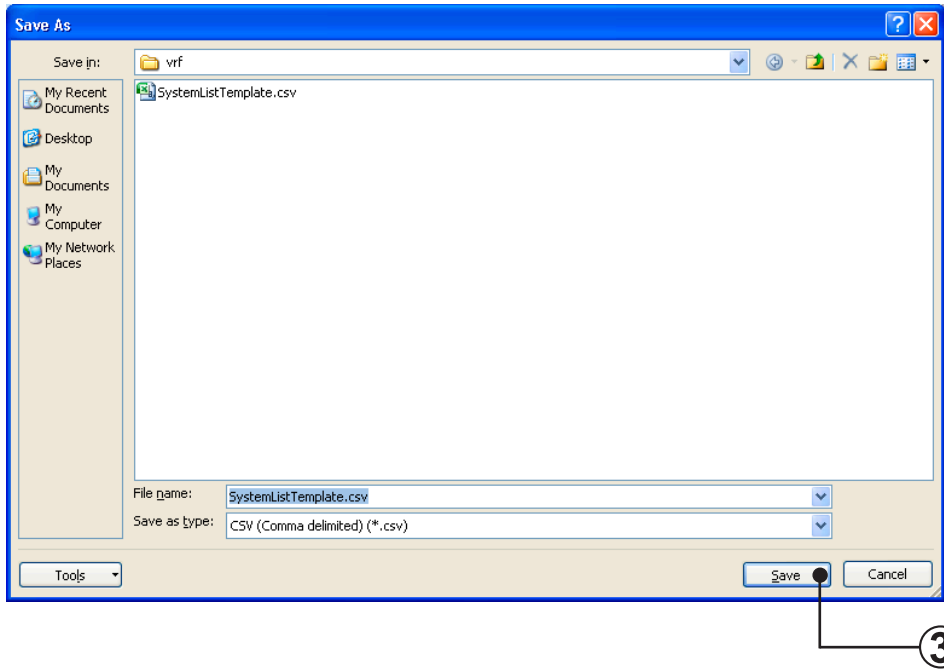


- Note**
- \*1 This template is created by spreadsheet program Excel. Excel must be purchased separately.
  - \*2 [SystemListTemplate.xls] is in the folder specified when installing the Web Monitoring Tool. When an address other than the default installation address was specified, check that folder.
  - \*3 Since a CSV file is not created in formats other than “Microsoft® Excel workbook (\*.CSV)” at Save as type, it cannot be used at the name master database file selection screen.

## 3-2-5 Scanning


### ■ Scanning setting screen

The air conditioner indoor units and outdoor units are connected by a transmission bus line and each have unique address information. Scanning collects this information.

Since the Web Monitoring Tool can connect up to 4 transmission adaptors, each adaptor must be set before scanning is performed.

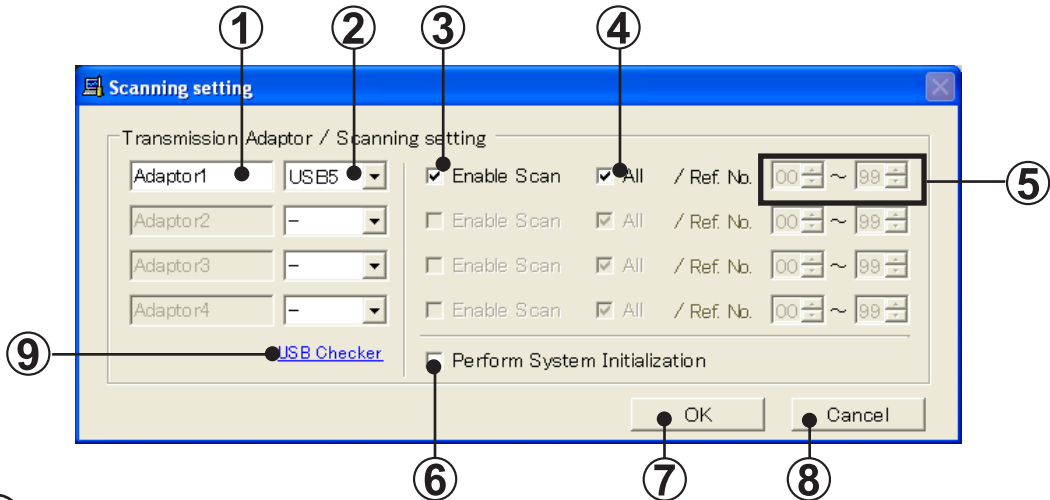

- ① **Transmission adaptor entry field**  
The transmission adaptors which can be currently used are displayed. Enter the name to identify the transmission adaptor (up to 10 alphanumeric and spaces).
- ② **USB port selection field**  
Select the USB port which connects the transmission adaptor.
- ③ **Scan execution setting check**  
Check to execute scanning.  
Do not check when using existing site data which is currently being read. (\*2)
- ④ **Ref. No. range (ALL) check**  
Check to scan all the refrigerant systems.  
At this time, the range of refrigerant numbers to be scanned is automatically set to 00 ~ 99.
- ⑤ **Ref. No. range input field**  
When ALL is not checked at step ④, input the refrigerant system numbers to be scanned within the 00 ~ 99 range.  
Input the start refrigerant system No. ~ end refrigerant system No. range.
- ⑥ **Perform System Initialization check**  
Can be used only when ③ is checked.  
Check when you want to acquire more detailed information by scanning. (\*1)  
When checked, a confirmation screen is displayed. When all the units in the VRF System may be temporarily stopped, click the  button.  
When the  button was clicked, the check mark is removed.

 

## 7 OK button

- When “Enable Scan” checked

When the  button is clicked, scanning starts and scanning progress is displayed on the scanning progress screen.

Before scanning starts, whether or not scanning is to be performed is displayed on a confirmation screen.

When re-scanning, dialog box will appear after selecting the start of scan, confirming whether the existing indoor/outdoor units data (operation data, etc.) may be deleted.

Yes ... delete the data after scanning, No ...  
Keep the data,

- \* When performing scanning selecting “No” and number of units before and after scanning mismatches, following symptom may be encountered. Therefore, when selecting “No”, be sure to have the correct number of units before and after scanning in mind.


- Transmission error may occur for the units that ceased to exist after scanning.
- Delay may occur for collecting data for each unit.

- When “Enable Scan” not checked

When the  button is clicked, the system list screen is displayed without scanning. But when CSV formatted Name master file (3-2-4) has been already read, the corresponding Name of the unit will be updated.

## 8 Cancel button

When the  button is clicked, the online site selection screen is displayed.

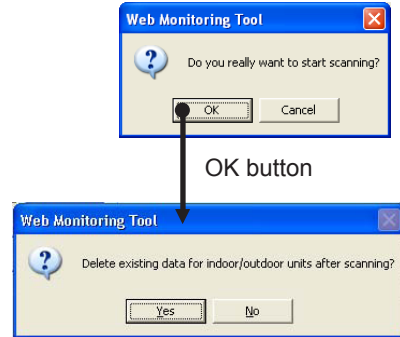


## 9 USB Checker

This will be used to detect the actual USB port where transmission adaptor is inserted. Note that this will not be displayed if the driver for the U10 USB Network Adaptor is not installed. This will not be displayed for re-scanning.

### <Detection Mechanism>

- Insert the transmission adaptor (U10 Network Interface) into the USB port. (This requires that software installation is already completed).
- When clicking the [USB Checker] in the scanning setting screen, following screen will be displayed.
- In this screen, click the [USB Adaptor] pull-down list box and select any USB port, then push the [Light] button.
- If the selected USB port is the actual porting connecting the USB adaptor, [SVC] in this screen and LED (SVC) of the transmission adaptor will flicker 4 times. (If the port differs, there will be no flicker).
- When the USB port No. is confirmed, close the screen and set the USB No. port in the above procedure ② (USB port selection field) the USB port number where USB adaptor was detected.

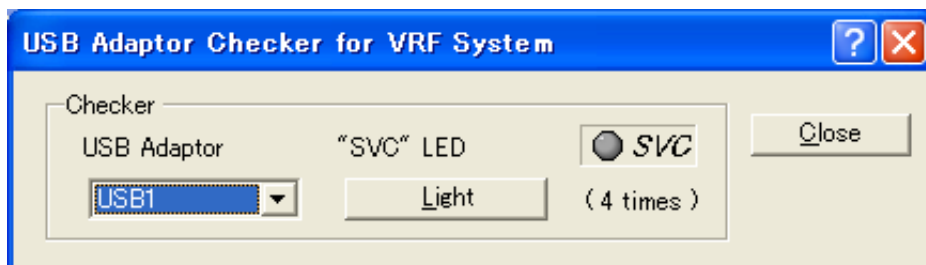

### Note \*1 • When Perform System Initialization checked



Normally, perform bus priority mode scanning. Full scanning which can receive detail data is performed. However, since each unit performs scan dedicated special operation, the units of the entire VRF System temporarily stop. To start scanning, check if the VRF System can be completely stopped, then execute scanning. Since the units remain stopped even when scanning is finished, a restart command must be sent from the control unit.

### • When Perform System Initialization not checked


Use when scanning at sites at which the VRF System cannot be stopped. In this mode, scanning can be performed without affecting the operating status of the VRF System. However, since R.C group data cannot be received, it is not full scanning. Operation is not controlled in R.C. group units.

### • When Single-Split Adaptor (UTR-YRDA) is connected within the VRF system, be sure to check the "Perform System Initialization" when performing scanning in order to recognized the equipment and display correct information.

\*2 When not checked, since scanning is not performed, the scanning objective refrigerant system No. cannot be set.

### ■ Scanning progress screen

Scanning is started and the scanning progress is displayed.

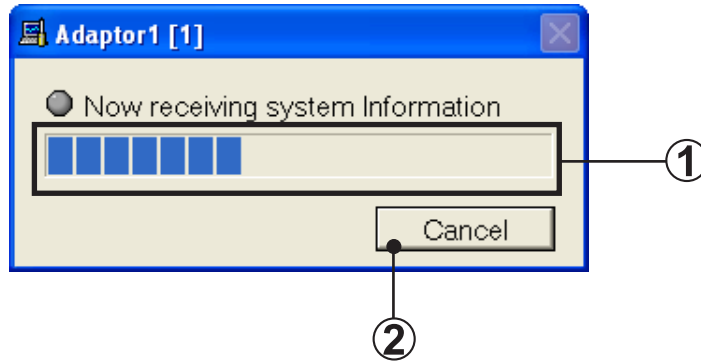


① Scanning progress display field  
Displays the progress of scanning.

② Cancel button  
When the  button is clicked, scanning stops and the program returns to the scanning setting screen.

## 3-2-6 Mismatched unit list


When a name master database file is specified at par. 3-2-4, the unit data of the database file and the unit data actually scanned are collated. If there is a mismatch, that unit address is displayed. Therefore, correct the address setting on the board of the displayed unit and then re-scan. Repeat this work until a mismatched unit is not displayed.

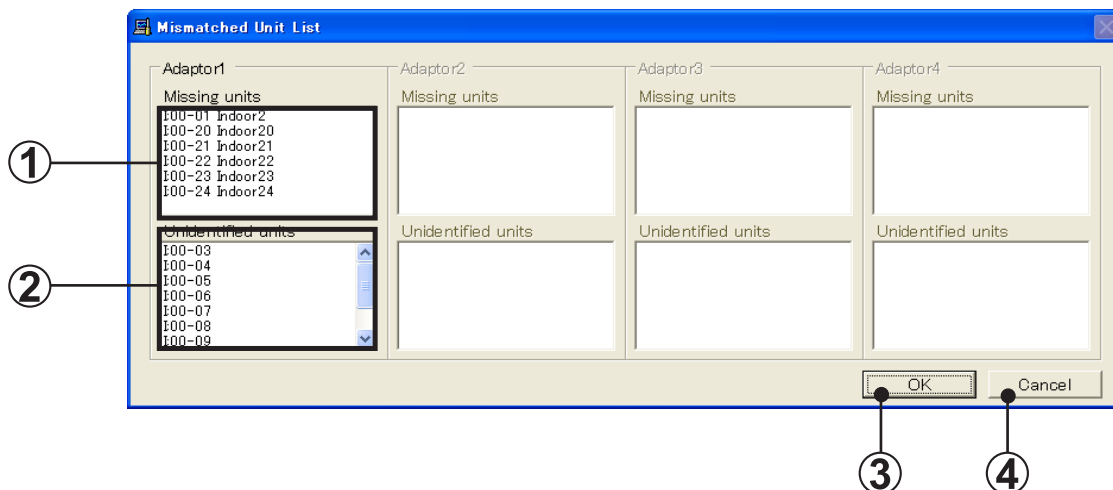

- ① **Missing units address display field**  
This field displays the unit addresses and unit names whose unit data is defined by name master database, but the relevant data could not be acquired during scanning.
- ② **Unidentified units address field**  
This field displays the unit address and unit model (indoor unit, outdoor unit) whose address was received during scanning, but whose unit data is not defined by name master database file.
- ③ **OK button**  
When the  button is clicked, the scanning acquisition data is stored and the system list screen (see par. 5-4) is displayed. The application icon is also displayed at the task tray.


If there is a unit mismatch, return to the scanning setting screen by clicking the  button and repeat collation with the scanning acquired data until there are no mismatches. After confirming that there are not mismatches, click the  button. If the  button was clicked when there is a mismatch, the unit data acquired by scanning is displayed on the system list screen unchanged.

- ④ **Cancel button**  
When the  button is clicked, the program returns to the scan setting screen.

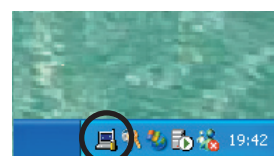

### 3-3 Data acquisition application starting (automatic starting)

When initial setting (user registration, site registration) was already completed, the data acquisition application is automatically started and the application icon is displayed on the task tray at the 2nd and subsequent startings. (The data acquisition application of the Web Monitoring Tool is also started automatically when the PC was automatically restored from a power failure, etc.)

When you want to perform each type of operation of the Web Monitoring Tool in the state in which the data acquisition application was already started, perform operation from the right click menu of the application icon of the task tray  .

You may also start the Web Monitoring Tool manually when it is not running. When you do so, select “Web Monitoring Tool” in the “VRF System” folder in the “Start Menu”.

You must be logged in as a user that belongs to an “Administrators Group” in order to be able to start the Web Monitoring Tool.


# Contents


<b>4. Data acquisition application right click menu .....</b>	<b>26</b>
<b>4-1 Outline.....</b>	<b>26</b>
4-1-1 Menu .....	26
4-1-2 Screen transition (online) .....	27
<b>4-2 Web browser starting (menu screen).....</b>	<b>28</b>
<b>4-3 Environment setting .....</b>	<b>29</b>
4-3-1 Display setting.....	29
4-3-2 Transmission mode setting .....	31
4-3-3 Error notification email setting.....	32
4-3-4 Room temperature display setting .....	33
<b>4-4 Re-scanning .....</b>	<b>34</b>
<b>4-5 Manual Setting .....</b>	<b>34</b>
<b>4-6 Exiting .....</b>	<b>35</b>

# 4. Data acquisition application right click menu

## 4-1 Outline

### 4-1-1 Menu


A menu is displayed and various operations can be performed by right-clicking the  application icon on the task tray.

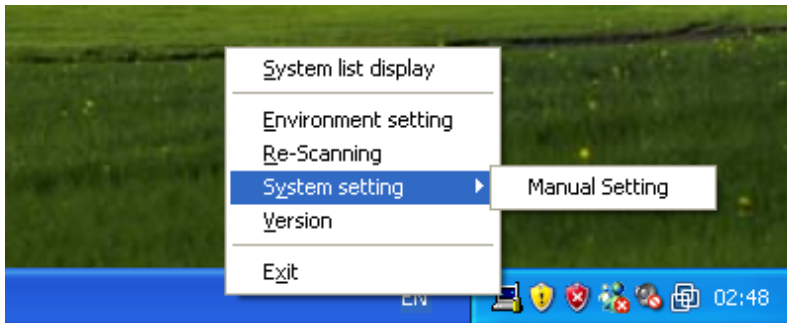

System list display	The login screen is displayed.
Environment setting	After user authentication was performed at the login screen, environment setting screen is displayed.
Re-Scanning	After user authentication was performed at the login screen, name master database selection screen is displayed.
System Setting	System setting sub-menu is displayed.
Manual Setting	Manual setting screen is displayed.
Version	Version information screen is displayed.
Exit	Exit confirmation screen is displayed.


## 4-1-2 Screen transition (online)

The following shows transition of the screens which are started from the right click online menu.

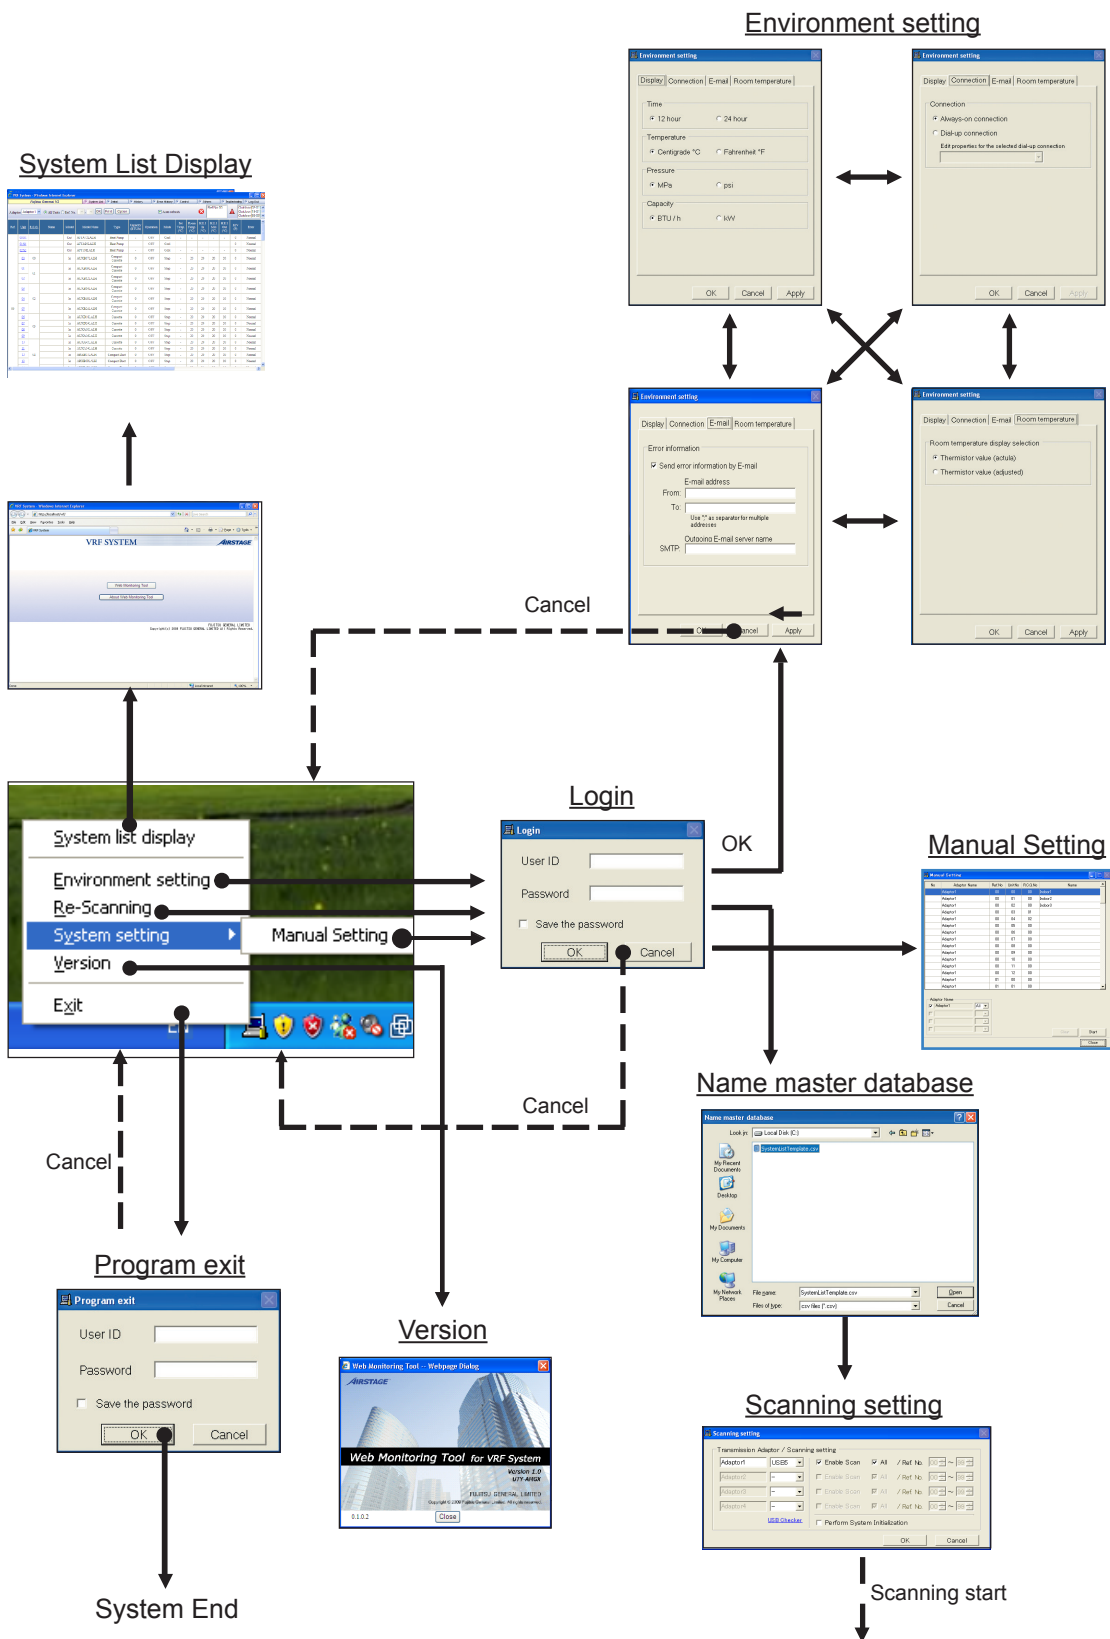

## 4-2 Web browser starting (menu screen)

This is the initial screen. It displays Web Monitoring Tool starting and version information.

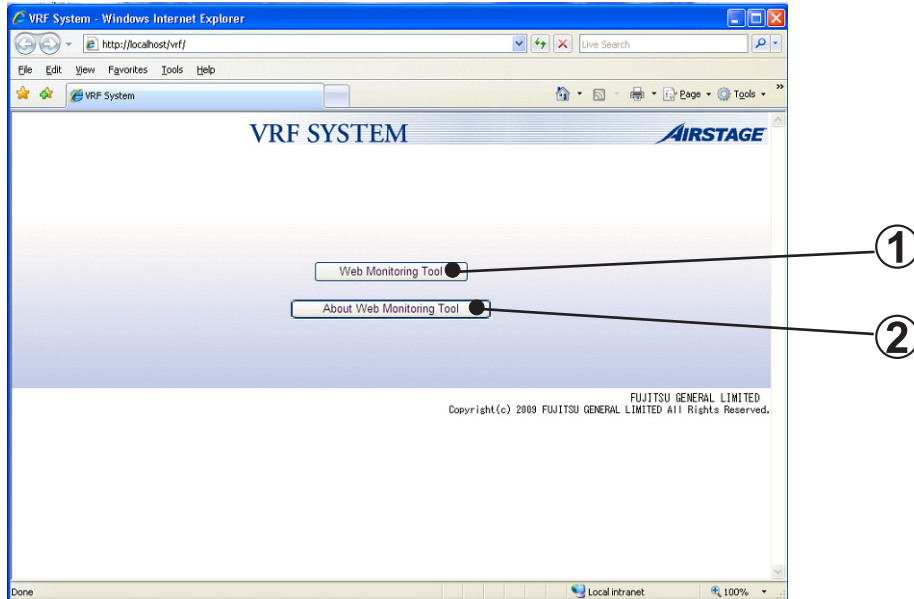

- ① Displays the login screen.
- ② Displays the version information.

### Note



\* For details, refer to par. 5-2 Menu.

## 4-3 Environment setting

Various settings related to the operating environment are performed.

Display tab: Sets the Time/Temperature/Pressure/Capacity display method.


Connection tab: Sets the transmission mode.

E-mail tab: Sets the notification destination email address when an error occurs.

Room temperature tab: Sets the room temperature display method.


### 4-3-1 Display setting

Sets the display method of the Time/Temperature/Pressure/Capacity to be displayed by the Web application.

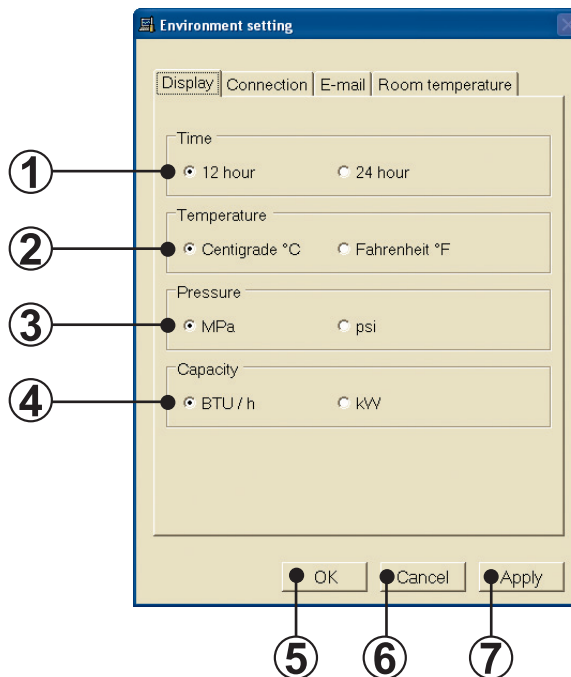


- ①** Time display selection item  
Sets the time display format.  
For 12-hour display format, select “12 hour”. For 24-hour display format, select “24 hour”.
- ②** Temperature selection item  
Sets the temperature display units.  
When you want to display the temperature in centigrade, select “Centigrade °C”.  
When you want to display the temperature in fahrenheit, select “Fahrenheit °F”.
- ③** Pressure selection item  
Select the pressure display units from “MPa” or “psi”.
- ④** Capacity selection item  
Select the capacity display units from “BTU/h” or “kW”.

⑤ OK button

When the  button is clicked, the set contents are saved and the screen is closed.

⑥ Cancel button

When the  button is clicked, environment setting stops and the screen closes.

⑦ Apply button

When the  button is clicked, the set contents are saved.

**Note**




After changing the display settings, the changes will take effect only from the Web application newly started from the Menu screen.

In order for the changes to take effect, re-display the Web application from the Menu Screen (Refer to section 5-2).

## 4-3-2 Transmission mode setting

The transmission mode with the internet connection provider is set. When sending error notification email, connection to the internet and transmission of the email are performed by the method set here. Set the transmission mode to match the usage environment. When dial-up connection was selected, email transmission processing is performed after the dial-up connection name set here is automatically dialed and connected to the internet. (\*1) When constant connection was selected, email transmission processing is performed unchanged.

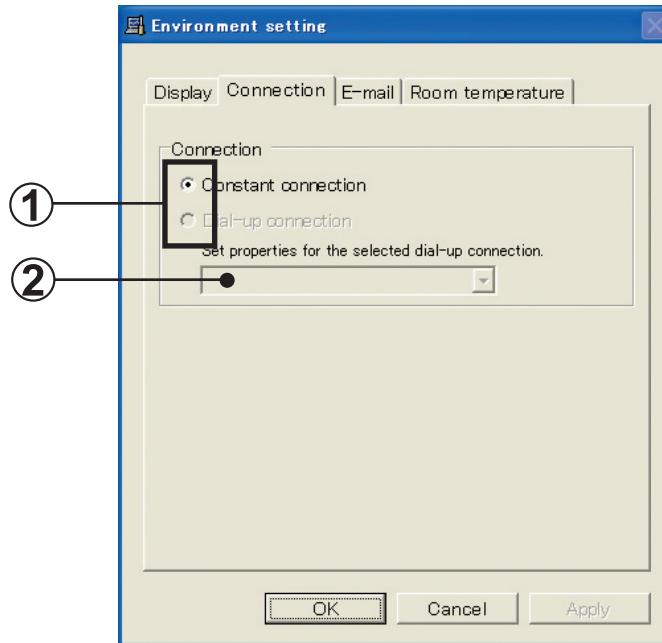

### ① Connection mode selection items

When the connection mode is constant connection, select “Constant connection”. For dial-up connection, select “Dial-up connection”.

### ② Dial-up selection field


When “Dial-up connection” was selected at ①, select the dial-up connection name to be used.

**Note** (\*1) When using dial-up connection, it necessary set the Windows network setting so that line disconnects automatically.  
For the dial-up connection in use;  
Open “Properties” window, select “Option” tab, then set “Idle time before hanging up” to 1 minutes

### 4-3-3 Error notification email setting

By performing setting, email can be sent to a pre-registered place when an error was generated at the air conditioner. (\*1) The notification destination email address when an error occurs is set at this screen.

When setting was performed, check whether or not an error is generated at a 5 minutes interval. When a new error was generated, or an error was not sent, the data is collected and sent as one email.

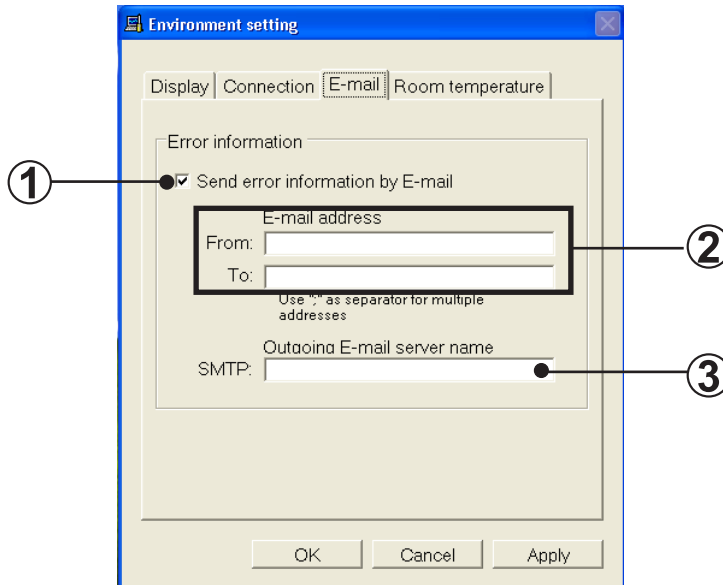


- ① **Error notification check**  
Check to send a notification email when an error is generated.  
When not checked, error email is not sent.
- ② **Transmission address input field**  
When “Send error information by E-mail” was checked at ①, input the error notification Sender & receiver email address. (\*2)
- ③ **E-mail server name input field.**  
Input the E-mail (SMTP) server name.

#### Note




(\*1) A contract with the internet connection provider is necessary. In addition, perform par. 4-3-2 Transmission mode setting based on the transmission mode with the internet connection provider.

(\*2) Email is sent under the title InformationVRF (Error Notice).

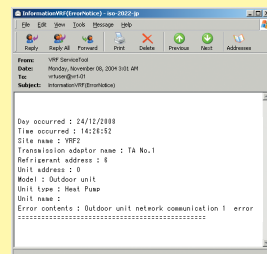

## 4-3-4 Room temperature display setting

Sets the display method of the room temperature to be displayed by the Web application.

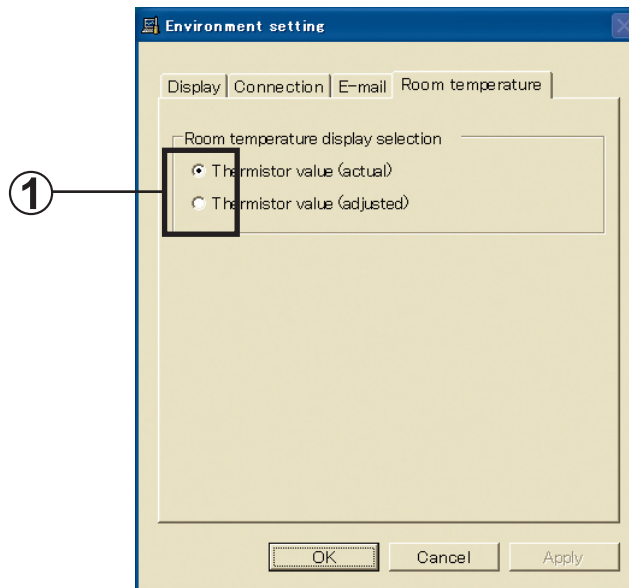

### ① Room temperature selection item

When you want to display the room temperature detected by sensor unchanged, select "actual". When you want to display the room temperature corrected (used in control) by the unit, select "adjusted".

#### Note




After changing the display settings, the changes will take effect only from the Web application newly started from the Menu screen.  
In order for the changes to take effect, re-display the Web application from the Menu Screen (Refer to section 5-2).

## 4-4 Re-scanning

Before re-scanning is performed, the login screen of par. 3-2-2 is displayed. After user authentication is performed, perform operation by the procedure described in par. 3-2-4. For the scanning method, refer to par. 3-2-5.

## 4-5 Manual Setting

Manual unit name registration by manual setting can be performed. Manual setting enables you to register the names for each scanned unit, by operating each unit ON, one by one.

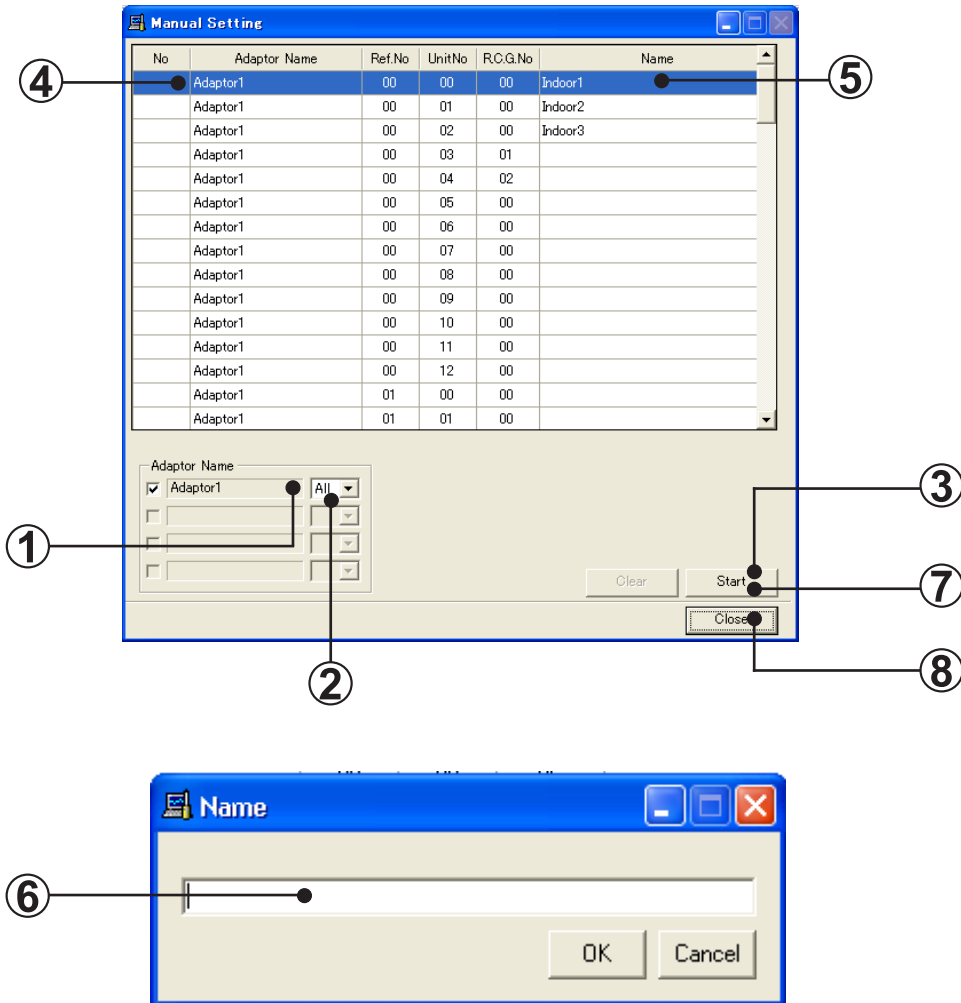

- ① Adaptor selection  
Select the network to which manual setting operation is to be performed, by checking the corresponding adaptor.
- ② Select "All" or the desired No. of refrigerant system to perform manual setting operation.

- ③ **Start registration**  
Press to start. When manual setting operation starts, this button changes to “Stop”.
- ④ **Unit operation**  
Go to the unit location and start the unit operation with a remote controller. The units started will be listed in the order they are started on this list and will be numbered in that order.
- ⑤ **Selecting units**  
When units are recognized and numbered, double click on the unit. The name registration dialog box will appear.
- ⑥ **Naming units**  
Enter the name for the unit and press “OK”.
- ⑦ **Stop registration**  
Press “Stop” when finished with the registration.
- ⑧ **End registration**  
Press “Close” to end manual setting registration.

**Note**



Instead of registering names for each start operation, you may operate all the units and name all the units at once after stopping registration.

## 4-6 Exiting

To exit the Web Monitoring Tool, user authentication is necessary. This is a measure so that the Web Monitoring Tool is not exited improperly by a user other than the related user. Since the login screen of par. 3-2-2 is displayed when Exit is selected, input the user ID/password.

The Web Monitoring Tool can be exited only when the user was authenticated.



# Contents

<b>5. WEB application</b> .....	<b>39</b>
<b>5-1 Screen transition</b> .....	<b>39</b>
5-1-1 Web application starting conditions and functions change .....	39
5-1-2 Screen transition .....	41
<b>5-2 Menu</b> .....	<b>43</b>
<b>5-3 Login screen</b> .....	<b>44</b>
<b>5-4 Main menu</b> .....	<b>45</b>
<b>5-5 System list screen</b> .....	<b>46</b>
5-5-1 Name and function of each area.....	46
5-5-2 System list display .....	49
5-5-3 System list printing.....	50
<b>5-6 Detail screen (Diagram)</b> .....	<b>53</b>
5-6-1 Name and function of each area.....	53
5-6-2 Schematic specification method .....	63
<b>5-7 Detail screen (Status List)</b> .....	<b>64</b>
5-7-1 Name and function of each area.....	65
<b>5-8 Commissioning tool</b> .....	<b>68</b>
5-8-1 Name and function of each area.....	68
5-8-2 Operating procedure .....	71
5-8-3 Commissioning report generation.....	74
<b>5-9 Operation history screen</b> .....	<b>76</b>
5-9-1 Name and function of each area.....	76
5-9-2 Operation history specification.....	81
5-9-3 Operation history printing.....	82

<b>5-10</b>	<b>Error history screen</b> .....	<b>85</b>
5-10-1	Name and function of each area.....	85
5-10-2	Error history display method .....	86
5-10-3	Error history printing.....	87
5-10-4	Unit Memory.....	89
5-10-5	Request Error History .....	90
<b>5-11</b>	<b>Control screen</b> .....	<b>91</b>
<b>5-12</b>	<b>Others screen</b> .....	<b>93</b>
<b>5-13</b>	<b>Others screen (Setting)</b> .....	<b>94</b>
5-13-1	User registration.....	95
5-13-2	User change.....	96
5-13-3	User deletion.....	97
5-13-4	Demand interval setup .....	98
<b>5-14</b>	<b>Others screen (Download)</b> .....	<b>99</b>
5-14-1	Name and function of each area.....	999
5-14-2	Procedures for Creating Download Files .....	100
5-14-3	Data file download/deletion.....	101
<b>5-15</b>	<b>Others screen (Display setting)</b> .....	<b>102</b>
<b>5-16</b>	<b>Troubleshooting screen</b> .....	<b>103</b>
5-16-1	Name and functions of each area .....	103
<b>5-17</b>	<b>Log out</b> .....	<b>104</b>
<b>5-18</b>	<b>When error generated</b> .....	<b>105</b>
5-18-1	Scanning other units .....	105
5-18-2	Data acquisition application shutdown.....	105

# 5. WEB application

## 5-1 Screen transition

### 5-1-1 Web application starting conditions and functions change

The functions of the Web application depend on the starting location of the user and login user level.

The functions which must be performed (operation control, commissioning tool, setting) while actually grasping the state of the air conditioner are restricted so that operation can only be performed from the Server (on the site installation PC on which the Web Monitoring Tool is installed).

Login User level	Starting location	
	Server	Client
Level1	○	△
Level2	△	△

○ : All functions are usable.

△ : All functions except control, commissioning tool, and setting screen are usable.

#### ■ Web application setting method

- Starting by Server

The Web application is started from the right click menu of the resident application by a PC which is operated by the Web Monitoring Tool. For the starting method, refer to Chapter 4.

- Starting from Client

To connect to the Server and use the functions of the Web Monitoring Tool from a remote PC, start the browser and specify the Service installed on-site at the address specification field as follows:


"<http://<IP address>/vrf/>" or "<http://<computer name>/vrf/>"

Example)

When the IP address is 192.168.100.100, it is specified by http://192.168.100.100/vrf/.

The <IP address> and <computer name> specification method depends on the connection environment.

Connection environment	Specification method
LAN	Private IP address or computer name
Internet	Specifies the global IP address which subscribed to fixed IP service or the DNS name which subscribed to DNS service as the computer name.
Internet (VPN)	Private IP address or computer name
Incoming connection	IP address or computer name allocated by RAS

**Note** "<" and ">" do not have to be input at <IP address> and <computer name>.  
 For the global IP and private IP concept, refer to the documentation and network related books from the provider.

### ■ User level


With the Web Monitoring Tool, the functions which can be used can be restricted by setting authority to the user.

Level1 : All functions can be used when started from the data acquisition application.

Level2 : All functions except control, commissioning tool, and setting can be used.

For the user Level modification method, refer to par. 5-13-2.

# 5-1-2 Screen transition

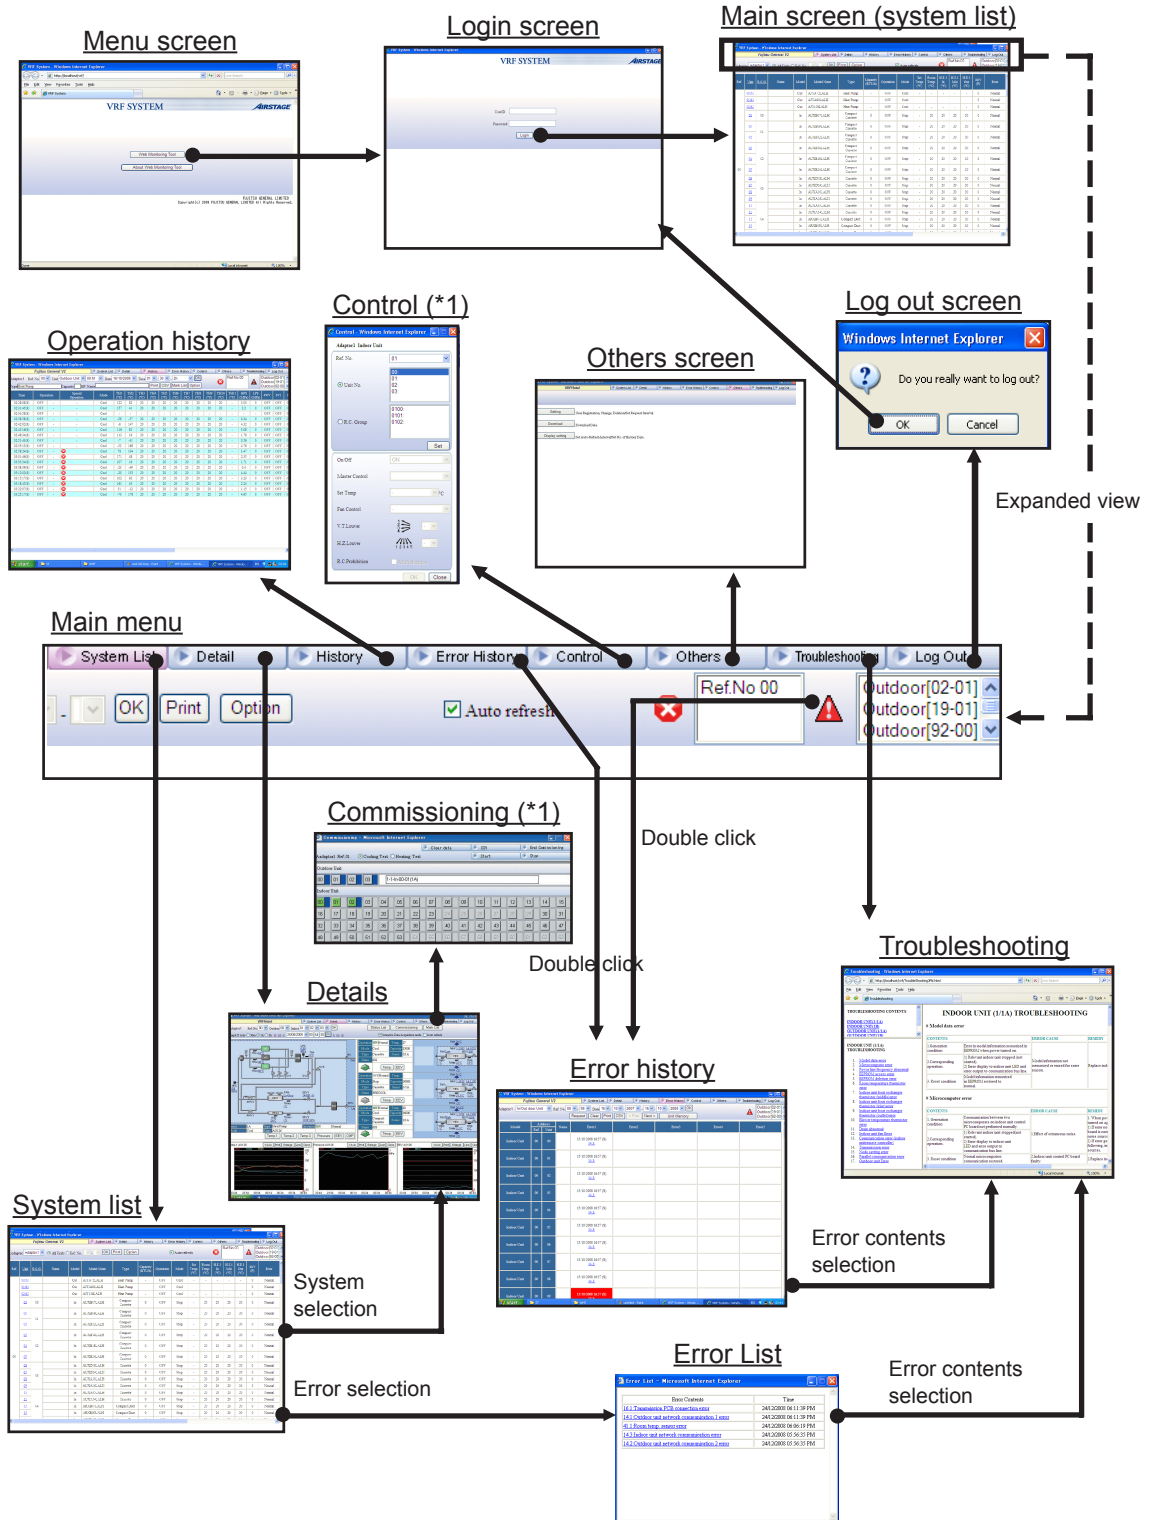


**Note** \*1 For starting from Client and when logged in by Level 2 user, since functions are restricted, they cannot be used.

Screen	Function	Page
Menu screen	Initial screen. Starts the Web Monitoring Tool and displays the version information	43
Login screen	Inputs and logs in the relevant user ID and password.	44
System list screen	Lists the status of each unit and the overall operating status can be grasped. This screen is displayed when shifting from the menu screen.	46
Details screen	Performs normal operation check and cause specification when an error was generated from the detailed status display of the units.	53
Commissioning tool	Test run instructions and commissioning data storage can be performed.	68
Operation history screen	Displays the indoor units or outdoor unit operating history information for each unit.	76
Error history screen	Displays the error information for each unit.	85
Control screen	Operation of each refrigerant system, indoor unit, or R.C. group can be controlled.	91
Others screen	<ul style="list-style-type: none"> <li>• Performs new user registration, user password change, registered user deletion, and demand interval setup.</li> <li>• Save/Download data</li> <li>• Setting Auto-refresh interval and maximum No. of lines per page.</li> </ul>	93
Troubleshooting screen	Displays the error contents and corrective action	103
Log out screen	Logs out.	104

## 5-2 Menu


It starts the Web Monitoring Tool and displays the version information.

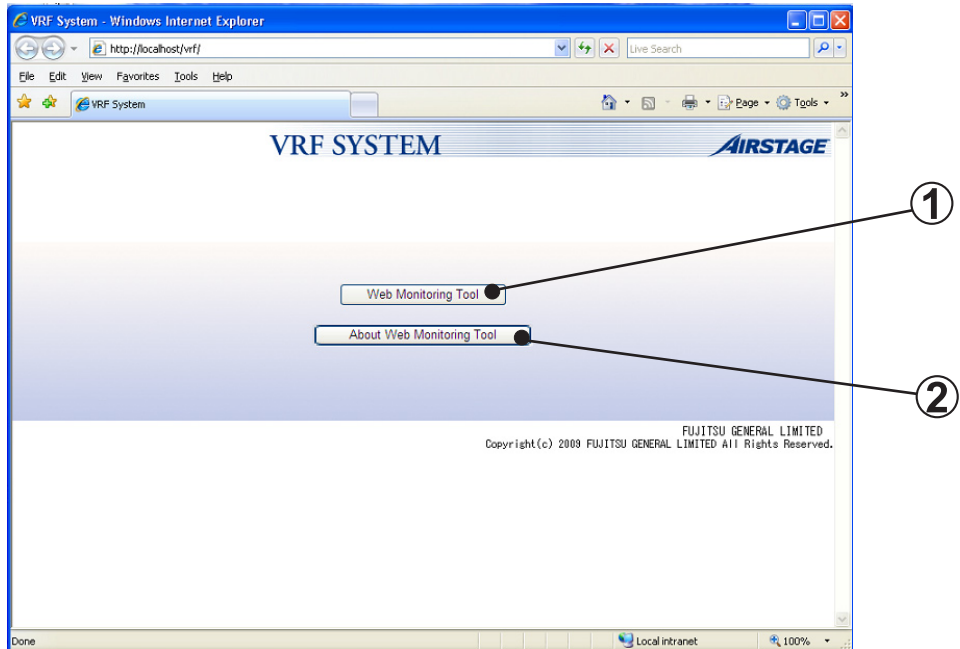

- ① Web Monitoring Tool button  
Starts the Web Monitoring Tool, and displays the detail screen.
- ② About Web Monitoring Tool button  
Displays the version information.

## 5-3 Login screen

Inputs and logs in the relevant user ID and password.

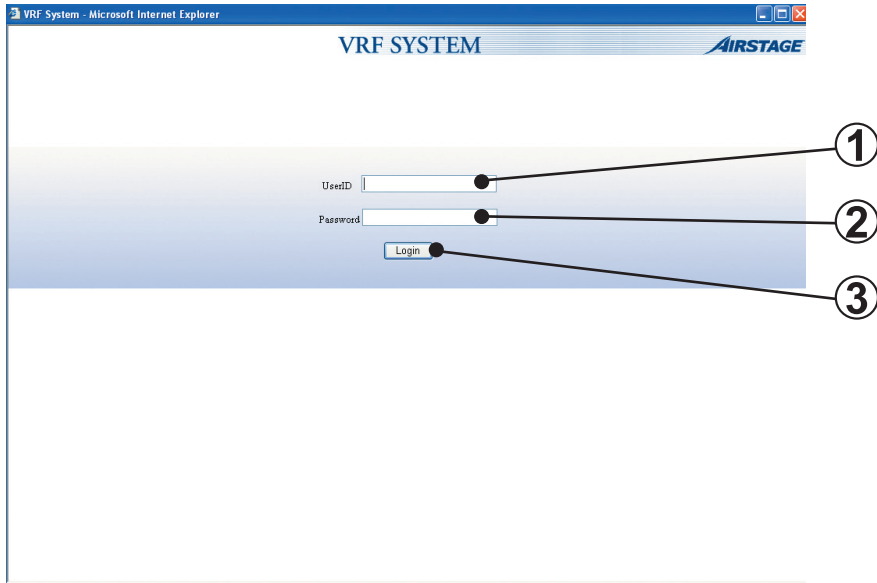


- ① **User ID input field**  
Input the ID of the user to be logged in. (Up to 20 alphanumeric characters) (\*1)
- ② **Password input field**  
Input the password of the user to be logged in. (Up to 20 alphanumeric characters) (\*1)
- ③ **Login button**  
When the  button is clicked, the system list screen is displayed. (\*2)



**Note** \*1 When the user ID and password entry field are not input, an error message is displayed.

**i** \*2 When the entered user ID and password are not registered, an error message is displayed and that user cannot log in.

## 5-4 Main menu

 Menu which is displayed at the top of the screen. Each time the button is clicked, the display shifts to the screen of the next function.



System List	Shifts to the system list screen.
Detail	Shifts to the detail screen.
History	Shifts to the operation history screen.
Error History	Shifts to the error history screen.
Control	Displays the control screen. (*1)
Others	Shifts to the others screen. (*1)
Troubleshooting	Displays the troubleshooting screen.
Log Out	Logs out
 (Emergency Stop)	Displays refrigerant system where emergency stop is activated.
 (ERROR)	Up to 20 addresses of units currently generating an error can be displayed, beginning from the newest unit. Shift to the error history screen by double clicking the unit.

**Note** \*1 For starting from client and when logged in by Level 2 user, since functions are restricted, they cannot be used.



## 5-5 System list screen

This screen grasps the overall operating status from a list of the status of each unit. When an error unit is detected at this screen, shift to the system detail screen (refer to 5-6) and then check the detailed status. This screen can also be printed.

### 5-5-1 Name and function of each area

Control area

Ref.	Unit	R.C.G.	Name	Model	Model Name	Type	Capacity (BTU/h)	Operation	Mode	Room Temp. (°C)	Room Temp. (°C)	Room In (°C)	Room Mid (°C)	Room Out (°C)	EEV (P)	Error
00.01				Out	AJYA72LALH	Heat Pump	-	ON	Cool	-	-	-	-	-	0	Normal
01.01				Out	AJYA90LALH	Heat Pump	-	ON	Cool	-	-	-	-	-	0	Normal
02.02				Out	AJY108LALH	Heat Pump	-	ON	Cool	-	-	-	-	-	0	Normal
00	00			In	AUXB07LALH	Compact Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
01	01			In	AUXB09LALH	Compact Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
02	01			In	AUXB12LALH	Compact Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
03	01			In	AUXB14LALH	Compact Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
04	02			In	AUXB18LALH	Compact Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
05	02			In	AUXB24LALH	Compact Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
06	02			In	AUXD18LALH	Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
07	03			In	AUXD24LALH	Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
08	03			In	AUXA30LALH	Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
09	03			In	AUXA36LALH	Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
10	03			In	AUXA45LALH	Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
11	03			In	AUXA54LALH	Cassette	0	OFF	Stop	-	20	20	20	20	0	Normal
12	04			In	ARXB07LALH	Compact Duct	0	OFF	Stop	-	20	20	20	20	0	Normal
13	04			In	ARXB09LALH	Compact Duct	0	OFF	Stop	-	20	20	20	20	0	Normal


Display item

#### Control area

Adaptor	Displays the name of the transmission adaptor being used.
All Units	Displays all the units.
Ref. No.	Specifies the refrigerant system No. (narrow down display)
OK	Specified condition. Refreshes the display screen.
Print	Prints the currently displayed list.
Option	Set whether the column should be displayed or hidden.
Auto refresh	Specifies automatic refreshing of the display data. Checked: Automatically refresh the screen at a 30 seconds interval. Unchecked: Do not automatically refresh the screen.

#### Display items

Ref.	Displays the refrigerant system No.
Unit	Displays the unit No. and master / slave operation for outdoor unit. Shifted to unit detail screen of the selected unit No. by click operation.

R.C.G.	Displays the R.C. Group No.
Name	Displays the unit name.
Model	Displays the unit model (Indoor/Outdoor).
Model Name	Displays the model name of the unit. If the model name is with "[ ]" brackets, the name was written after shipment. If the model name is with "( )" brackets, the name was read from the Name master data-base file.
Type	Displays the unit type.
Capacity	Displays the indoor unit capacity. Indoor unit capacity is displayed in [BTU/h] or [kW] units. (*1)
Operation	Displays the operating status.
Mode	Displays the operating mode.  icon, if displayed, signifies that mode mismatch has occurred due to illegal operation. When "(Auto)" is displayed, operation is linked to the "Auto" mode of the master indoor unit of the refrigerant system.
Set Temp.	Displays the setting temperature. (*1)
Room Temp.	Displays the room temperature. (*1)
H.E.1. In	Displays the heat exchanger inlet temperature. (*1)
H.E.1. Mid	Displays the heat exchanger middle temperature. (*1)
H.E.1. Out	Displays the heat exchanger outlet temperature. (*1)
EEV	Displays expansion valve. Units display is [Pulse].
Error	When a unit is currently generating an error, displays [Error]. The troubleshooting screen (refer to 5-15) is displayed by clicking.
Special Operation	Displays special operation with icon. Refer "List of icon for special operation" below.
Fan	Displays the fan status. (*3)
V.T. Louver	Displays vertical louver position.
H.Z. Louver	Displays horizontal louver position.
R.C. Prohibition	Displays the R.C. Prohibition setting. * Display whether the "All prohibition" is enabled or disabled.
Time	Displays the newest receiving time of a transmission packet received by the Web Monitoring Tool. (12-hour display or 24-hour display) (*2) • For summer time, (S) is displayed. Whether or not network communication is performed normally is made the judgment standard.









 
**Note**












- \*1 Units display is [°C] or [°F]. The display format depends on the setting at the data acquisition application. (Refer to 4-3 Environment setting.)
- \*2 The display format depends on the setting at the data acquisition application.
- \*3 Sometimes, it may take time for the FAN status display to be updated in the System List screen. The delay time is proportional to the number of existing indoor units and may take approximately 2 minutes for 100 indoor units (the time does not have anything to do with the number of indoor units being controlled). In any case, the actual control operation to the indoor units are performed immediately after control operation from the Control screen, only the display delays.

## ■ List of icon for special operation

### Outdoor unit


ICON	EXPLANATION
	Oil recovery operation
	Oil recovery operation ended
	Maintenance mode
	Emergency stop
	Outdoor unit stopped
	Defrost operation
	Defrost operation ended
	Night mode operation
	Power save operation

### Indoor unit

ICON	EXPLANATION
	Freeze prevention operation
	Anti-freeze operation
	Anti-freeze setting
	Maintenance mode
	Master indoor unit
	Operation mode controlled by master outdoor unit
	Operation mode controlled by master indoor unit
	Emergency stop
	Energy save operation

## 5-5-2 System list display

Only the necessary units can be displayed by specifying the refrigerant system range. This is convenient when you want to display only the objective unit in the state in which a large number of units are connected to the system.

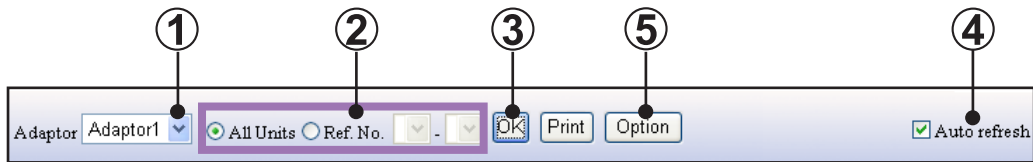

- ① Select the displayed transmission adaptor.  
Up to 4 transmission adaptors can be connected at the Web Monitoring Tool. Select the transmission adaptor which connects the system whose system list you want to display.
- ② Select the range of the displayed refrigerant system. (\*1)
- ③ When the  button is clicked, the display data is refreshed.
- ④ The system list is automatically refreshed every 30 seconds by clicking  Auto refresh .
- ⑤ Set whether Display item (column) should be displayed or hidden.  
Items to be set in the option screen is as follows. When display items are set, they will be displayed right-wise.  
Checked ...display, Unchecked ...hidden

**Note** \*1 When "All Units" is selected, the entire refrigerant system is displayed.  
When "Ref No." is selected, a list of only the refrigerant systems of the specified range is displayed. Specify the range of the refrigerant systems you want to display.  
Select the refrigerant system from . The refrigerant systems currently registered are displayed.

## 5-5-3 System list printing

A print window of the currently displayed system list is displayed by clicking the **Print** button of the system list screen.

List area                      Header item

\*\*\*\* System List \*\*\*\*


Site : Fujitsu General VJ                      Current Date: 16/10/2008  
 Adaptor: Adaptor1                      Authorizer :  
 Ref.No. : All                      Creator :

Address	Name	Model	Model Name	Type	Capacity (BTU/h)	Operation	Mode	Set Temp. (°C)	Room Temp. (°C)	H.E. In (°C)	H.E. Mid (°C)	H.E. Out (°C)	EEV (P)	Error	Special Operation	Fan	V.T. Louver	H.Z. Louver	R.C. Prohibition	Time	
00:M		Out	AJYA72LALH	Heat Pump	-	ON	Cool	-	-	-	-	-	0	Normal	-	Onpm	-	-	-	16/10/2008 00:10:14 (S)	
01:S1		Out	AJYA80LALH	Heat Pump	-	ON	Cool	-	-	-	-	-	0	Normal	-	Onpm	-	-	-	16/10/2008 00:10:14 (S)	
02:S2		Out	AJY108LALH	Heat Pump	-	ON	Cool	-	-	-	-	-	0	Normal	-	Onpm	-	-	-	16/10/2008 00:10:14 (S)	
00	00	In	AUXB07LALH	Compact Cassette	0	OFF	Step	-	20	20	20	20	0	Normal	-	-	-	-	OFF	16/10/2008 00:10:14 (S)	
01	01	In	AUXB09LALH	Compact Cassette	0	OFF	Step	-	20	20	20	20	0	Normal	-	-	-	-	OFF	16/10/2008 00:10:14 (S)	
02		In	AUXB12LALH	Compact Cassette	0	OFF	Step	-	20	20	20	20	0	Normal	-	-	-	-	OFF	16/10/2008 00:10:14 (S)	
03		In	AUXB14LALH	Compact Cassette	0	OFF	Step	-	20	20	20	20	0	Normal	-	-	-	-	OFF	16/10/2008 00:10:14 (S)	
00	04	02	In	AUXB18LALH	Compact Cassette	0	OFF	Step	-	20	20	20	20	0	Normal	-	-	-	-	OFF	16/10/2008 00:10:14 (S)
05		In	AUXB24LALH	Compact Cassette	0	OFF	Step	-	20	20	20	20	0	Normal	-	-	-	-	OFF	16/10/2008 00:10:14 (S)	


- Printer setup and printing  
Click on the print tool icon on the right upper corner of the screen and select "Page Setup..."

Print...                      Ctrl+P  
 Print Preview...  
**Page Setup...**

In the Page Setup screen, select the size of the paper as “A3” and the Orientation as “Landscape” and press “OK”. If other option is selected, the print may not come up as good.

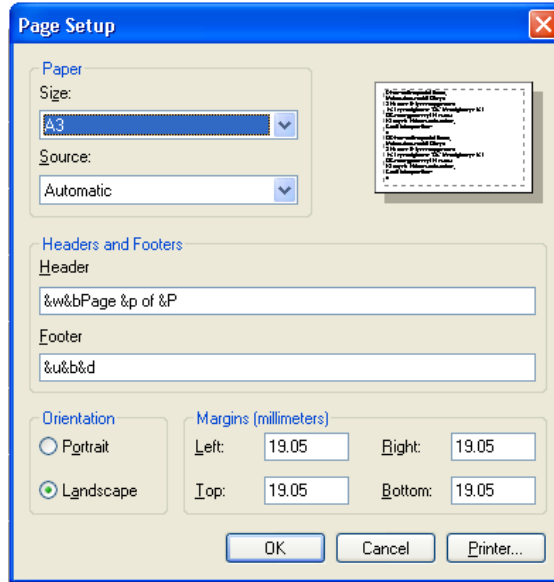

Click on the print tool icon on the right upper corner of the screen again and select “Print...” to start printing.

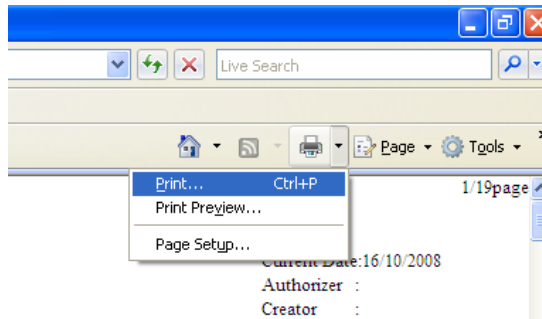

**Note** For Internet Explorer Ver.6 users, use the sub-menu in “File” menu to bring up the “Page Setup” screen and to perform “Print”.



## ② Close button

When the  button is pressed, the print window closes.

### Printing contents

#### Header item

Site	Displays the site name.
Adaptor	Displays the transmission adaptor name.
Ref No.	Displays the specified refrigerant system range.
Current Date	Displays the current date.

#### List area

List	Displays the system list displayed on the screen.
------	---

## 5-6 Detail screen (Diagram)


This screen displays the schematic, sensor values, and electrical components operating status of the selected system. At this screen, normal operation checks and cause specification when an error occurs are performed.

The schematic of 1 outdoor unit and 3 indoor units and three items graph can be simultaneously displayed.

Outdoor unit schematic diagram area

Control area

Indoor unit schematic area

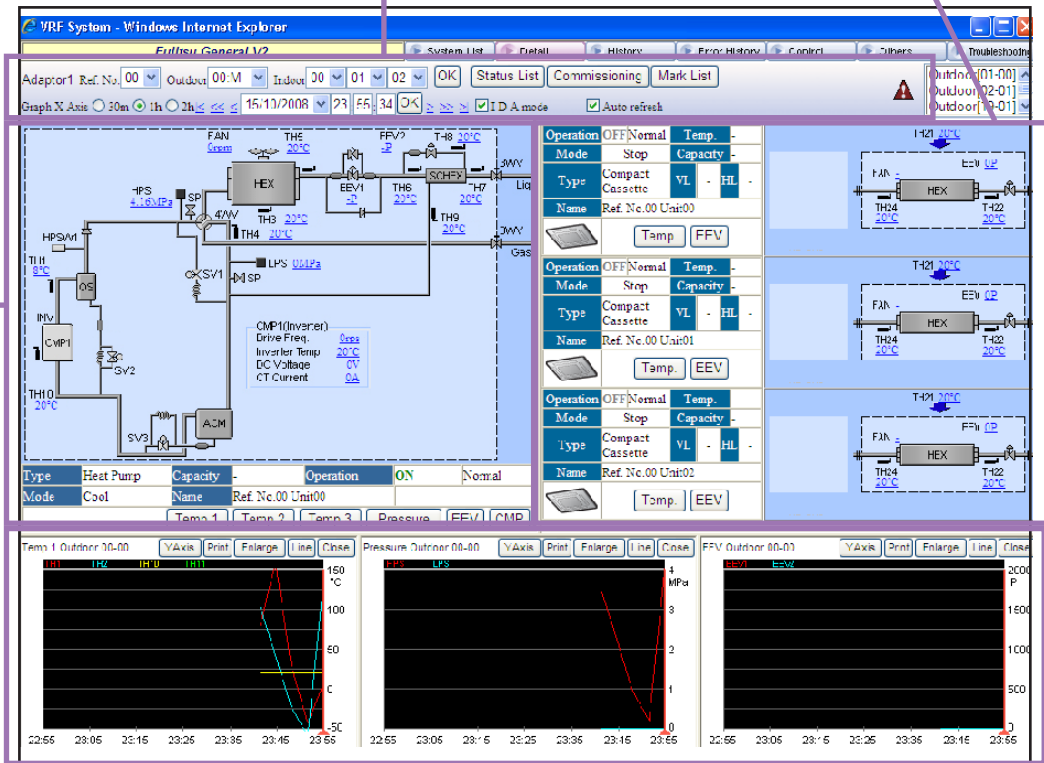

Graph area

### 5-6-1 Name and function of each area

#### ■ Control area

Sets display contents specification and automatic refresh on/off.

Adaptor1 Ref. No. 00 Outdoor 00:M Indoor 00 01 02 OK Status List Commissioning Mark List  
 Graph X Axis 30m 1h 2h << <<< 16/10/2008 00:10:14 OK >>> >>>  ID A mode  Auto refresh

Ref. No.	Displays the refrigerant system No.
Outdoor	Specifies the outdoor unit No. displayed on the schematic.
Indoor	Specifies the indoor unit No. displayed on the schematic. (Up to 3 units can be specified.)
OK	The schematic of the specified unit is reflected on the screen by pressing this OK button after the refrigerant system No. and unit No. were specified. (*1)

Commissioning	Starts the commissioning tool. (Refer to 5-8 Commissioning tool.) (*2)
Status List	Switch to the "Status List screen". (Refer to 5-7 Detail screen (Status List))
Mark List	Displays the list of abbreviations.
Graph X Axis	Specifies the X-axis scale of the graph.
<, <<,  <	Moves the display time. (Refer to 5-6-2 Schematic specification method.)
Date	Specifies the date of the display data.
Time	Displays the acquisition time of the display data. (12-hour display or 24-hour display) (*3) For summer time, (S) is displayed. By inputting time, data for the nearest time will be displayed.
IDA mode	Sets to the Intensive Data Acquisition mode which demands data from the Web Monitoring Tool to each unit. (*4) The demand interval is set at 5-13-4 Demand interval setup. Checked: Demand output only for the displayed refrigerant system. Unchecked: Demand output for the entire system.
Auto refresh	Specifies automatic refreshing of the displayed data. Checked: Refresh screen automatically when refrigerant system status change. Unchecked: Do not automatically refresh the screen.

**Note** \*1 When unchecked (no automatic refresh) at "Auto refresh", each time the OK button is pressed, the screen can be manually refreshed to the newest status.



\*2 Displayed only when Level 1 user was logged in by Server.

\*3 The display format depends on the setting at the data acquisition application. (Refer to 4-3 Environment setting.)

\*4 A data demand is sent from the Web Monitoring Tool at a fixed interval and the data returned by each unit in response to this demand is displayed on the screen.


When checked, since demands are limited to the displayed refrigerant systems, detailed data collection is possible.

Conversely, a demand is not sent for refrigerant systems other than the displayed systems. Select this when you want to monitor a specific refrigerant system.




When unchecked, demands are sent to the entire system. However, instead of the demand range becoming wide, the data density becomes thin. Set when the system is operating normally and you want to monitor the entire system.

## Outdoor unit schematic area

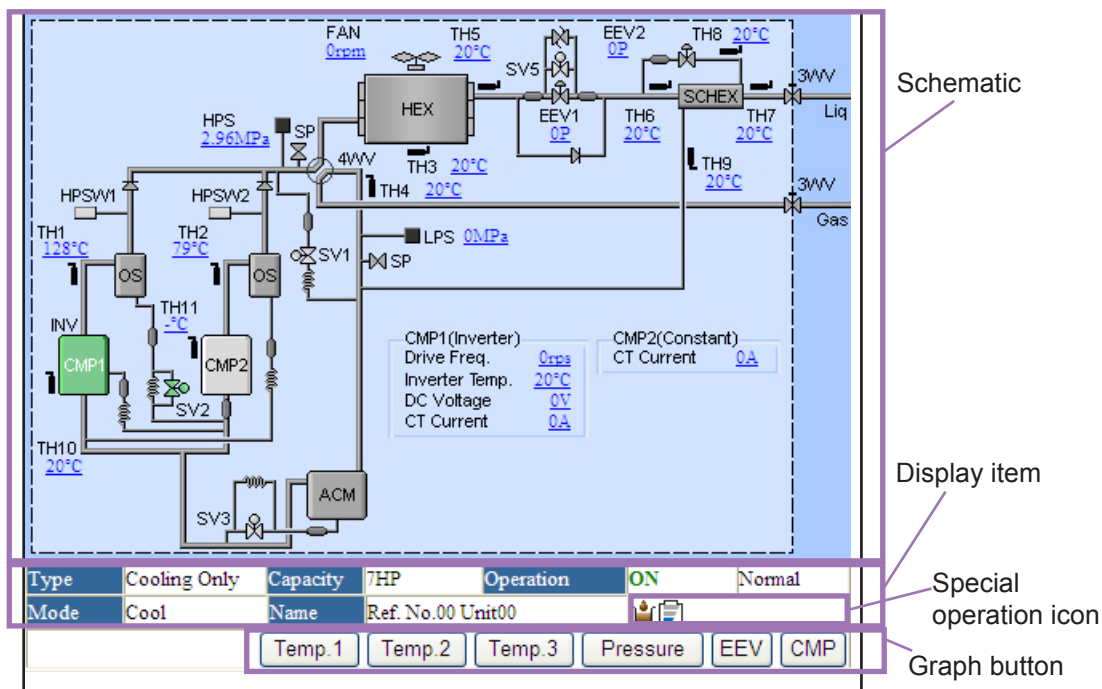This area displays the outdoor unit schematic. For the meaning of each symbol, refer to the “Design & Technical Manual”. For the meaning of each item in the schematic, refer to the later schematic /graph display item.



### Schematic

Schematic	Displays a schematic of the specified unit. • The schematic depends on the unit.
Compressor 	Displays the compressor status. On: Green Off: Gray
4-way valve/solenoid valve  	Displays the 4-way valve/solenoid valve status. On: Green Off: Gray *The outdoor unit of S series (VRF1/1A) does not change of status. (gray display)

### Display items

Type	Displays the unit type.
Capacity	Displays the capacity of outdoor unit.
Operation	Displays the operating status (ON/OFF) and unit status (Normal/Error).
Mode	Displays the operating mode.
Name	Displays the unit name. (*1)
Special operation icon	Displays the special operation status using icon. Refer “List of icon for special operation” in P67.

**Note** \*1 Only when preset (Refer to 3-2-4 Name master database file selection screen.)



#### Graph button

The graph corresponding to the clicked button is displayed. Up to 3 graphs can be displayed at the graph area. When you want to display a new graph, but 3 graphs are already displayed, close one of the graphs beforehand.

Temp.1	Displays discharge temperature graphs 1 ~ 3 at the graph area.
Temp.2	Displays the suction temperature and outdoor temperature graphs at the graph area.
Temp.3	Displays heat exchanger inlet/outlet temperature graphs 1 ~ 3 at the graph area.
Pressure	Displays a pressure graph at the graph area.
EEV	Displays an electrical expansion valve opening rate graph at the graph area.
CMP	Displays the operating status of the compressor at the graph area. For an inverter compressor, the operation frequency is also displayed.

## ■ Indoor unit schematic area

Displays the schematic of up to 3 indoor units selected by control area. For the meaning of each item in the schematic, refer to the later schematic/graph display item.

Display item

The screenshot displays three indoor unit data tables and their corresponding schematic diagrams. Each unit has a data table with the following fields: Operation (ON/Normal), Mode (Auto), Capacity (7000), Type (Universal, Duct, Floor), and Name (Ref. No.00 Unit00, Unit01, Unit02). Below each table is a 'Graph button' with 'Temp.' and 'EEV' options. To the right of the data tables is a 'Schematic' area showing three identical diagrams for each unit. Each schematic diagram shows a HEX (Heat Exchanger) with FAN Auto and EEV OP (Electronic Expansion Valve Open) components, and temperature sensors TH21, TH22, and TH24. A 'Special operation icon' is shown next to the schematic diagrams.

Display items

Operation	Displays the operating status (ON/OFF) and unit status (Normal/Error).
Mode	Displays the operating mode. (Refer to 5-5-1 Name and function of each area.)
Type	Displays the unit type.
Name	Displays the unit name. (*1)
Temp	Displays the setting temperature. Units display is [°C] or [°F]. (*2)
Capacity	Displays the capacity. Units display is [BTU/h] or [kW]. (*2)
VL	Displays the vertical louver position.
HL	Displays the horizontal louver position.
Indoor Unit Icon	Displays the status of the indoor units. The display color depends on the status. On: Green Off: Gray Test: Orange On (Error): Green Off (Error): Gray Test (Error): Orange.



**Note** \*1 Only when preset. (Refer to 3-2-4 Name master database file selection screen.)

\*2 The display format depends on the setting at the data acquisition application. (Refer to 4-3 Environment setting.)

### Graph button

The graph corresponding to the clicked button is displayed. Up to 3 graphs can be displayed at the graph area. When you want to display a new graph, but 3 graphs are already displayed, close one of the graphs beforehand.


Temp	Displays a temperature graph at the graph area.
EEV	Displays an electrical expansion valve pulse value at the graph area.

### Schematic

Schematic	Displays the schematic of the specified units. Up to 3 units can be displayed. The R.B. unit status will only be displayed beside the refrigerant circuit when the system type is heat recovery.
Special operation icon	Displays the special operation status using icon. Refer "List of icon for special operation in P67."

## ■ Graph area

Graphs are displayed by clicking each button of the control item from the indoor unit/outdoor unit schematic area.

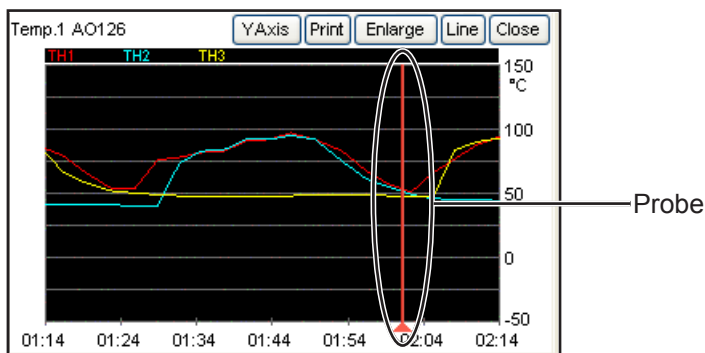

Name	The graph item/unit name (if set) are displayed at the top left-hand corner of the graph area.
YAxis	Upper and lower limit of Y axis of the graph may arbitrary be set (*2). Allowable range for each graph types is as follows. <ul style="list-style-type: none"> <li>• Temp: -75~185 °C/-122~398 °F</li> <li>• Pressure: 0~5 Mpa/0~730 psi</li> <li>• EEV: 0~2000 Pulse</li> <li>• CMP: 0~300 Hz</li> </ul>
Print	Displays the print confirmation window. (*1)
Enlarge	Enlarges and displays a graph. (*1)
Line	Displays the graph line selection screen. (*1)
Close	Closes the graph.
Probe	The probe is moved to the left and right by dragging it with the mouse. The unit status received at the past time at the probe position is reflected on the schematic. When a past unit status is referenced, the “Auto refresh” check mark is automatically removed.

**Note** \*1 For details, refer to the next clause (Graph area details).



\*2 After upper and lower limit is set, scale for the Y axis will evenly be apportioned. Therefore, the scale may slightly be different from the actual value.


## ■ Graph area details

- Graphs can be printed by clicking the **Print** button.


- 1 **OK button**  
Start printing by clicking the **OK** button.

Since a print confirmation screen is displayed, follow the instructions displayed on the screen. Set the printing form in the horizontal direction.

- 2 **Cancel button**  
Close the print window without printing by clicking the **Cancel** button.

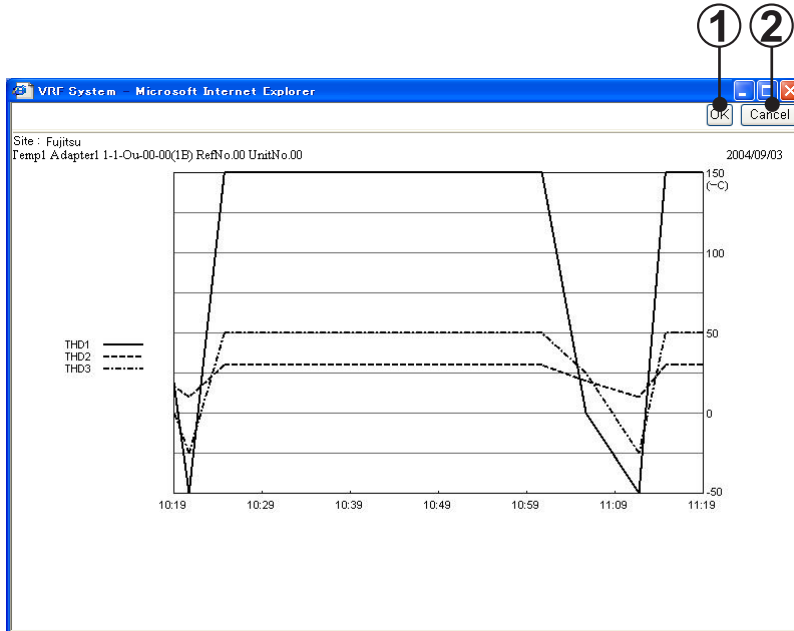

- The graph is vertically enlarged 2 times and displayed by pressing the **Enlarge** button.
- The graph line selection screen is displayed by pressing the **Line** button.  
Graph display/hide can be set by checking/unchecking.  
For the meaning of each item displayed on the graph line selection screen, refer to the later schematic/graph display item.

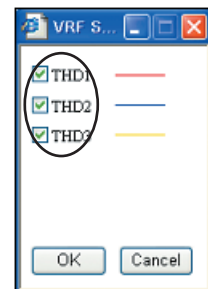

## ■ Schematic/graph display item

Shows the item names and contents displayed on the schematic and graph screens. The items in the graph button field can be graphically displayed with the graph button of the relevant name. However, there are also items which may not be displayed, depending on the unit series (S / V / VII) and unit type (free / cooling only / heat pump).

- Outdoor unit

S	V	VII	Graph button	Description
	CMP1		CMP	Compressor 1
	CMP2		CMP	Compressor 2
	CMP3	—	CMP	Compressor 3
	HEX		—	Heat exchanger
	Fan		—	Outdoor fan
	ACM		—	Accumulator
	RCV	—	—	Receiver tank
	OS		—	Oil separator
—	SCHEX		—	Sub cool heat exchanger
	HPS		Pressure	High pressure sensor
MPS	—		Pressure	Middle pressure sensor
	LPS		Pressure	Low pressure sensor
4WV1	4WV		—	4-way valve 1
4WV2	—		—	4-way valve 2
4WV3	—		—	4-way valve 3
4WV4	—		—	4-way valve 4
	EEV1		EEV	Electrical expansion valve 1
	EEV2		EEV	Electrical expansion valve 2
EEV3	—		EEV	Electrical expansion valve 3
—	SV1		—	Solenoid valve 1
—	SV2		—	Solenoid valve 2
—	SV3		—	Solenoid valve 3
—	SV4	—	—	Solenoid valve 4
—	SV5		—	Solenoid valve 5
—	SV6		—	Solenoid valve 6
—	SV7	—	—	Solenoid valve 7
—	SV8	—	—	Solenoid valve 8
THD1	TH1		Temp.1	Discharge temperature 1
THD2	TH2		Temp.1	Discharge temperature 2
THD3	TH3	—	Temp.1	Discharge temperature 3
THHI1	—	TH5	Temp.3/2	Heat exchanger inlet temperature 1 (S/V) Heat exchanger temperature (VII)
THHI2	—		Temp.3	Heat exchanger inlet temperature 2


THH3	—		Temp.3	Heat exchanger inlet temperature 3
THHO1	TH4	—	Temp.3/2	Heat exchanger outlet temperature 1
THHO2	—		Temp.3	Heat exchanger outlet temperature 2
THHO3	—		Temp.3	Heat exchanger outlet temperature 3
—	TH5	—	Temp.3	Receiver low level temperature
—	TH6	—	Temp.3	Receiver middle level temperature
—	TH7	—	Temp.3	Receiver high level temperature
—	TH8		Temp.3	SCHEX outlet temperature
—	TH9	TH6	Temp.2	Liquid temperature 1
—	TH10	TH7	Temp.2	Liquid temperature 2
THS	TH11	TH4	Temp.2/3	Suction temperature
THO	TH12	TH3	Temp.2	Outdoor temperature
—	TH13	TH9	Temp.3	SCHEX inlet temperature
—	—	TH10	Temp.1	Displays shell temperature (Inverter Comp.)
—	—	TH11	Temp.1	Displays shell temperature (Constant rate Comp.)
3WV			—	3-way valve
BV	—		—	Ball valve
SP			—	Service port
HP	—	HPSW1	—	High-pressure switch1
—	—	HPSW2	—	High-pressure switch2
LP	—		—	Low-pressure switch
—	Drive Freq.(Hz)	Drive Freq.(rps)	CMP	Displays drive frequency
—	Inverter Temp.(°C)		—	Displays IGBT temperature.
—	DC Voltage(V)		—	Displays DC voltage
—	CT Current(A)		—	Displays CT current

- Indoor unit

S	V	VII	Graph button	Description
EEV1	EEV		EEV	Electrical Expansion valve
MAX	—		—	Displays maximum EEV value.
THOA	—		Temp	Outlet temperature
THIA	TH21		Temp	Room temperature
THHI	TH22		Temp	Heat exchanger inlet temperature
THHM	TH23	—	Temp	Heat exchanger middle temperature
THHO	—	TH24	Temp	Heat exchanger outlet temperature
SVD	—		—	Discharge solenoid valve
SVS	—		—	Suction solenoid valve
SVB	—		—	Bypass solenoid valve

## 5-6-2 Schematic specification method

The refrigerant system, outdoor unit, and indoor unit are specified at the control area and the schematic is displayed. The graph X-axis/display date are also changed and the screen is refreshed.

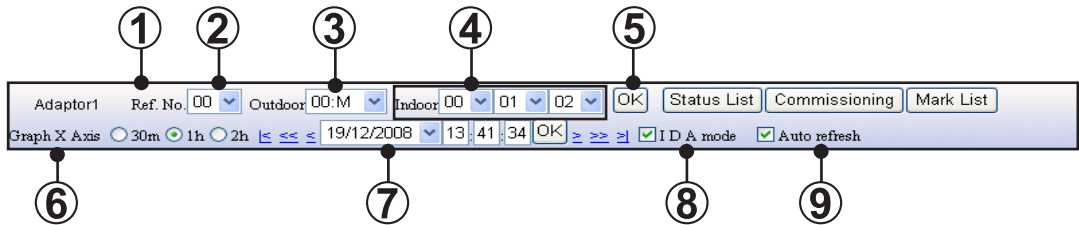

- ① Displays the transmission adaptor names. When you want to change the transmission adaptor, do it at the par. 5-5 System list screen.
- ② Specifies the refrigerant system.
- ③ Selects the outdoor unit.
- ④ Selects the indoor units. (Up to 3 indoor units can be selected.)
- ⑤ When the  button is clicked, the schematic display is refreshed. (\*1)
- ⑥ Changes the X-axis time. Select from  30m  1h  2h . (\*2)
- ⑦ Displays the data of the specified date/time. (\*3)  
Select the date from  .  
Change the time by the following method.

<input type="button" value="← &amp; →"/>	Shift the time 1 graduation.
<input type="button" value="←← &amp; →→"/>	Shift the time 1 axis.
<input type="button" value="⏪ &amp; ⏩"/>	Shift up to the first or last data acquisition time of the specified date.
<input type="text" value="02:58:24"/>	By inputting time, data for the nearest time will be displayed.

- ⑧ Demands are sent to the currently displayed refrigerant system in a concentrated manner by checking  ID A mode . When you want to monitor units at a shorter interval, check mark the box.
- ⑨ Automatically refresh the screen at a 30 seconds interval by checking  Auto refresh .

**Note**

- \*1 The latest date/time are displayed. Only when preset.
- \*2 The X-scale of the graph is changed by selection. (Default 1h)
- \*3 The dates at which there is data are displayed in a list and can be selected. When the date/time was changed and the schematic was displayed, the check mark is removed from "Auto refresh".

## 5-7 Detail screen (Status List)

The Status List is started with the **Status List** button of the detail screen control area. Status list screen will be switched from the diagram screen by pressing the “Status list” button in the detail screen area.

In this screen, detail data for all the units in the specified refrigerant system will be displayed at a certain point of time.

**Control area**

**Outdoor unit status area**

Unit	Name	Type	Operation	Special Operation	Mode	TH1 (°C)	TH2 (°C)	TH3 (°C)	TH4 (°C)	TH5 (°C)	TH6 (°C)	TH7 (°C)	TH8 (°C)	TH9 (°C)	TH10 (°C)	TH11 (°C)	
00.M	Ref. No.00 Unit00.M	Cooling Only	ON	-	-	Cool	23	-26	20	20	20	20	20	20	20	20	-
01.S1	Ref. No.00 Unit01.S1	Cooling Only	ON	-	-	Cool	27	-24	20	20	20	20	20	20	20	20	-
02.S2	Ref. No.00 Unit02.S2	Cooling Only	ON	-	-	Cool	29	-23	20	20	20	20	20	20	20	20	-

**Indoor unit status area**

Unit	Name	Type	Capacity (kW)	Operation	Special Operation	Mode	Set Temp (°C)	TH21 (°C)	TH22 (°C)	TH24 (°C)	EEV (F)	Fan	V.T. Louver	H.Z.L.
00	Ref. No.00 Unit00	Universal	-	OFF	-	-	Stop	-	20	20	20	0	-	-
01	Ref. No.00 Unit01	Duct	-	OFF	-	-	Stop	-	20	20	20	0	-	-
02	Ref. No.00 Unit02	Floor	-	OFF	-	-	Stop	-	20	20	20	0	-	-
03	Ref. No.00 Unit03	Universal	-	OFF	-	-	Stop	-	20	20	20	0	-	-
04	Ref. No.00 Unit04	Wall Mounted	-	OFF	-	-	Stop	-	20	20	20	0	-	-
05	Ref. No.00 Unit05	Duct	-	OFF	-	-	Stop	-	20	20	20	0	-	-
06	Ref. No.00 Unit06	Wall Mounted	-	OFF	-	-	Stop	-	20	20	20	0	-	-
07	Ref. No.00 Unit07	Universal	-	OFF	-	-	Stop	-	20	20	20	0	-	-
08	Ref. No.00 Unit08	Wall Mounted	-	OFF	-	-	Stop	-	20	20	20	0	-	-
09	Ref. No.00 Unit09	Wall Mounted	-	OFF	-	-	Stop	-	20	20	20	0	-	-





## 5-7-1 Name and function of each area

### ■ Control area

Sets display contents specification.

The screenshot shows a control panel with the following elements:
 

- Adaptor1
- Ref. No. 00 (dropdown menu)
- OK button
- Option button
- Diagram button
- Commissioning button
- Mark List button
- Date/Time: 19/12/2008 (dropdown), 13:44:52 (dropdown)
- OK button
- Navigation arrows: left, right, up, down
- Checkboxes:  IDA mode,  Auto refresh

Ref.No.	Displays the refrigerant system No. Also, any refrigerant system No. may be specified and be switched to.
OK	Fix the Ref. No. and the date / time of the data to be displayed.
 & 	Shift up to the first or last data acquisition time of the specified date.
 & 	Shift the time 1 graduation.
Date/Time	Date/time for the data currently displayed will be shown. By specifying specific date and time, any data may be displayed.
Option	Set whether Display item (column) should be displayed or hidden. Items to be set in the option screen is as follows. When display items are set, they will be displayed right-wise. Checked ... display, Unchecked ... hidden
IDA mode	Sets to the Intensive Data acquisition mode which demands data from the Web Monitoring Tool to each unit. Checked: Demand output only for the displayed refrigerant system. Unchecked: Demand output for the entire system.
Auto refresh	Specifies automatic refreshing of the displayed data. Checked: Automatically refresh the screen at a 30 seconds interval. Unchecked: Do not automatically refresh the screen.
Diagram	This will switch to the Diagram screen. (Refer to 5-6 Detail screen (Diagram))
Commissioning	Starts the commissioning tool. (Refer to 5-8 Commissioning tool.)
Mark List	Displays the list of abbreviations.

### ■ Outdoor unit status area

Display the following operation status of each outdoor unit according to the condition given in the Control area.

Unit	Displays the unit No.
Name	Displays the unit name.
Type	Displays the unit type.
Operation	Displays the operating status (ON/OFF) and unit status (Normal/Error).
Special operation	Displays special operation.(*1)
Mode	Displays the operating mode.

\* For other information, refer to the 5-5-1 Name and function of each area, Schematic/graph display item (Outdoor unit).

\*1 For the meaning of the displayed icons, refer, icon list below

### ■ Indoor unit status area

Display the following operation status of each indoor unit according to the condition given in the Control area.










Unit	Displays the unit No.
Name	Displays the unit name.
Type	Displays the unit type.
Capacity	Displays the capacity. Units display is [BTU/h] or [kW].
Operation	Displays the operating status (ON/OFF) and unit status (Normal/Error).
Special operation	Displays special operation.(*1)
Mode	Displays the operating mode. (Refer to 5-5-1 Name and function of each area.)
Set Temp.	Displays the setting temperature. Units display is [°C] or [°F].
Fan	Displays the fan status.
V.T. Louver	Displays vertical louver position.
H.Z. Louver	Displays horizontal louver position.

\* For other information, refer to the 5-5-1 Name and function of each area, Schematic/graph display item (Indoor unit).










\*1 For the meaning of the displayed icons, refer, icon list below

## ■ List of icon for special operation

### Outdoor unit

ICON	EXPLANATION
	Oil recovery operation
	Oil recovery operation ended
	Maintenance mode
	Emergency stop
	Outdoor unit stopped
	Defrost operation
	Defrost operation ended
	Night mode operation
	Power save operation

### Indoor unit

ICON	EXPLANATION
	Freeze prevention operation
	Anti-freeze operation
	Anti-freeze setting
	Maintenance mode
	Master indoor unit
	Operation mode controlled by master outdoor unit
	Operation mode controlled by master indoor unit
	Emergency stop
	Energy save operation

## 5-8 Commissioning tool

The commissioning tool is started with the  button of the detail screen control area.


The commissioning tool can operate only when a Level 1 user was logged in by Server. In other cases, the button is not displayed at the detail screen control part. (Refer to par. 5-6-1.) Test run commands can be executed with the commissioning tool. During test running, the outdoor unit/indoor unit sensor data can be saved (commissioning log data). After the end of test running, this data can be exported in CSV file format.

The exported CSV file can be used in commissioning report generation by reading the CSV file by Excel or other spreadsheet application.

The commissioning screen is automatically refreshed and the latest status is displayed every 30 seconds.

### 5-8-1 Name and function of each area

#### ■ Control area (initial display)

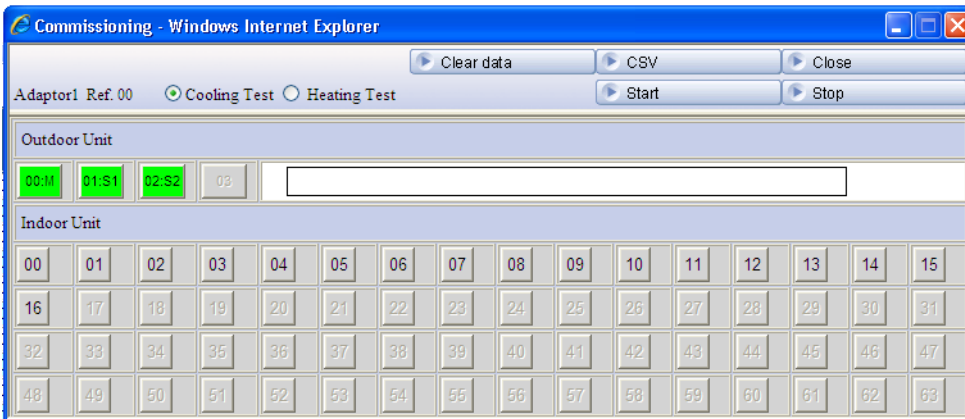

Ref No.	Displays the refrigerant system No.
Test Pattern Select	Selects "Cooling Test" / "Heating Test" . When selection is switched, unit button selections are all reset.
Clear data	Clears all the commissioning log data of the displayed refrigerant system.
CSV	Creates the commissioning log data to an arbitrary file as a CSV file.
Close	Closes the commissioning tool screen. Test running is not stopped at exiting.
Stop	Executes a stop command for all the indoor units of the relevant refrigerant system.
Start	Executes the test run command for the selected unit. After the Start button was pressed, unit button selection cannot be changed. If there is even one indoor unit currently being operated by control, etc. from another unit, test run commands cannot be executed. Use the Stop button and stop all the units in advance.

Unit Name Display Area	When a unit name is registered, and the mouse cursor is aligned with the unit button, that unit name is displayed. (Only when set)
Unit Button (outdoor unit)	Represents the current status by character color and back ground color. (*1) When one outdoor unit button is selected, other outdoor unit buttons can be simultaneously selected.
Unit Button (indoor unit)	Represents the current status by character color and back ground color. (*1) Multiple indoor unit buttons can be simultaneously selected.
Commissioning Log Data Yes/No Display Area	Displays whether or not there is commissioning log data for each unit. (*2)

**Note** \*1 Unit button display status (indoor unit/outdoor unit)




Display		Status
	Character color (black)	Unselected state
	Character color (Red: Bold & italic)	Selected state
	Button color (green)	(Indoor unit) Running (Outdoor unit) Unit running or thermostat on
	Button color (gray)	(Indoor unit) Stopped (Outdoor unit) Unit stopped or thermostat off

\*2 Commissioning log data yes/no display status

Display		Status
	Background color (blue)	Commissioning log data of the unit of the currently selected test pattern.
	Background color (gray)	No commissioning log data of unit of the currently selected test pattern

■ Control area (after run command)

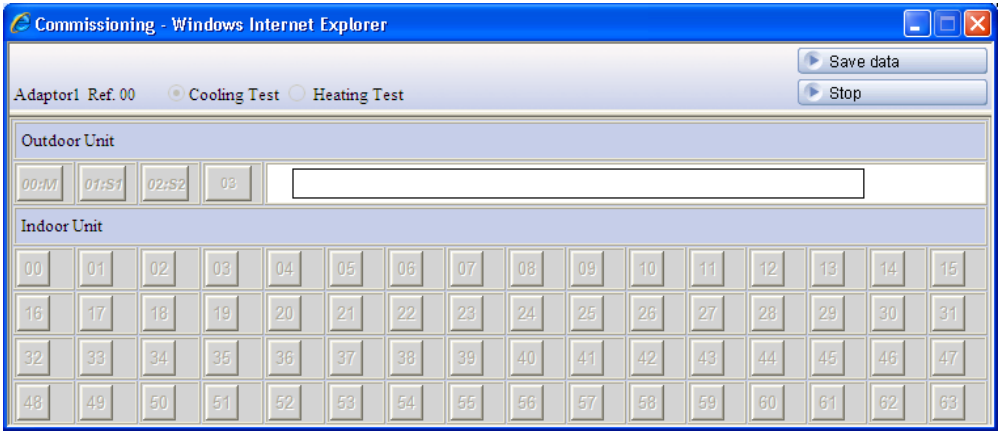


Save data	Saves the sensor data of the test running unit to the commissioning log data. The commissioning log data is saved for each Test Pattern.
Stop	Stops test running of the relevant refrigerant system and returns to the initial display.
Unit Button	After run command, enters the unselectable state. For units which performed a test run, the button color is displayed in green.

## 5-8-2 Operating procedure

Selects the test items and the units to be tested from all the units stopped status.


- ① Check the refrigerant system No. to which the units which are to be test run at “Ref.” on the screen.  
Since the refrigerant system No. specified at the detail screen is displayed here, when making changes, after re-specifying by 5-6 Detail screen and pressing the OK button, start the commissioning tool.
- ② Select the test pattern according to the item to be test run.  
For test run by cooling, select “Cooling Test” and for test run by heating, select “Heating Test”.

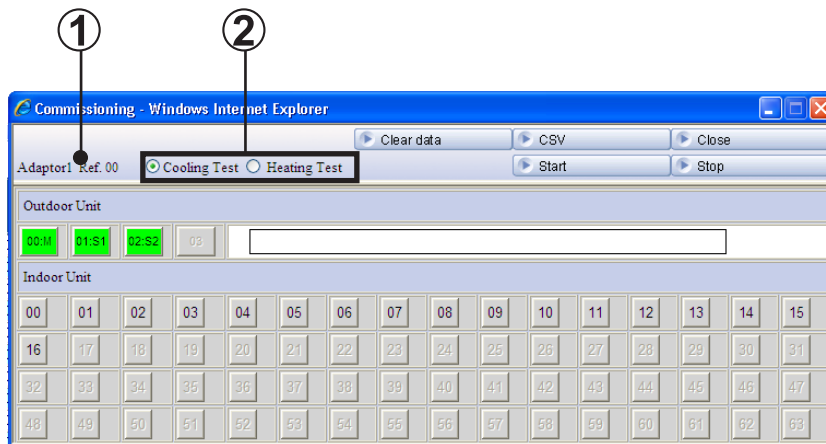

- ③ Select the unit which is to start test run. Select the unit by clicking the button of the relevant unit No.  
The selected unit is displayed by a red italic numeric.


For outdoor units, when any button is selected, all the indoor units also enter the selected state. For indoor units, when any button is selected, all the units that belong to the same R.C. group as the selected unit No. also enter the selected state.

- ④ When the  button is clicked in the units selected state, test run is started.

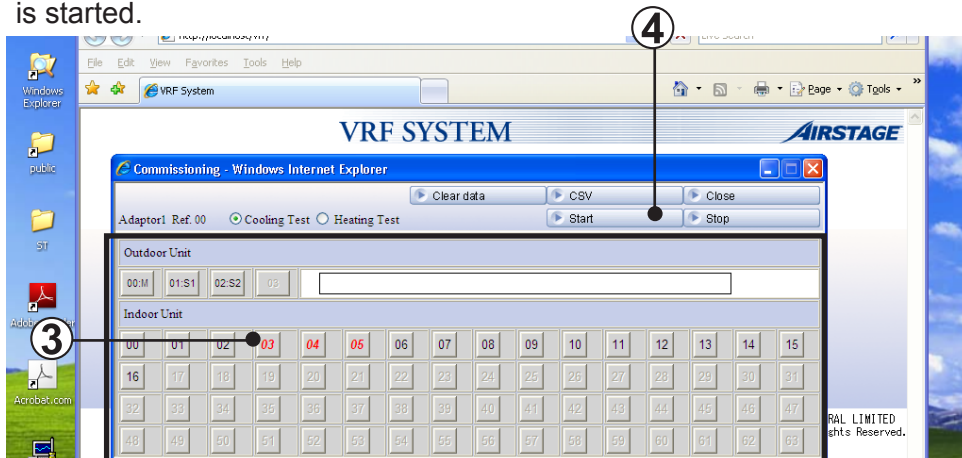


- ⑤ The button of units that have entered the test run state is displayed in green. When an indoor unit was selected and started, the selected indoor units enter the test run state. When an outdoor unit was selected and started, all the indoor units enter the test run state.


After test run starts, new test run objective units cannot be added. Perform test run stop of ⑦, clear the commissioning log data of ⑨, as required, and repeat operation from the initial state.

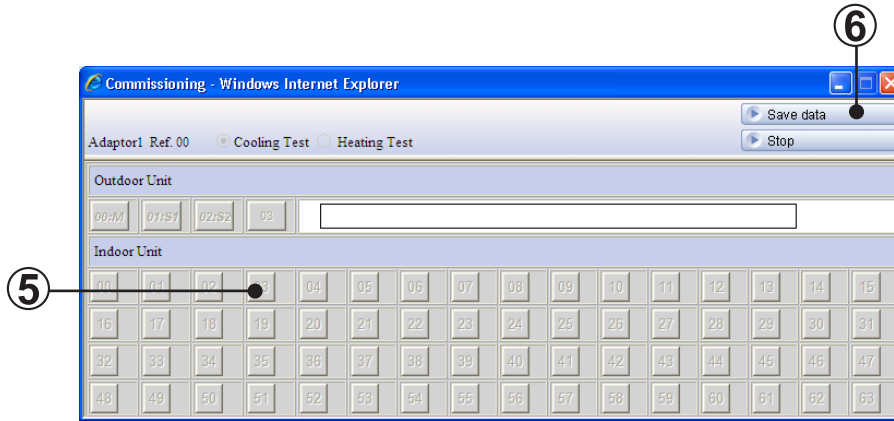

- ⑥ The commissioning log data of the selected units (italic bold characters) is saved by clicking the  button. On the screen, the background color of the unit No. that generated the commissioning log data changes to blue.

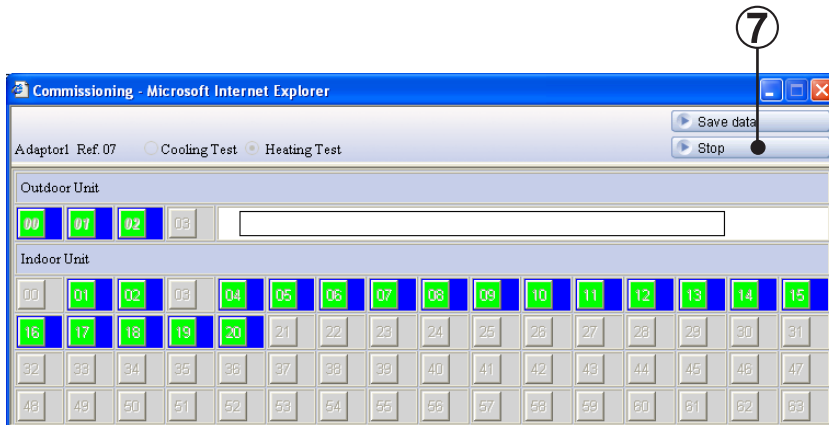

- ⑦ Test run can be stopped by clicking the  button. The display returns to the initial screen, but the commissioning log data cannot be cleared. (The background color of the unit Nos. at which there is commissioning log data remains blue.)

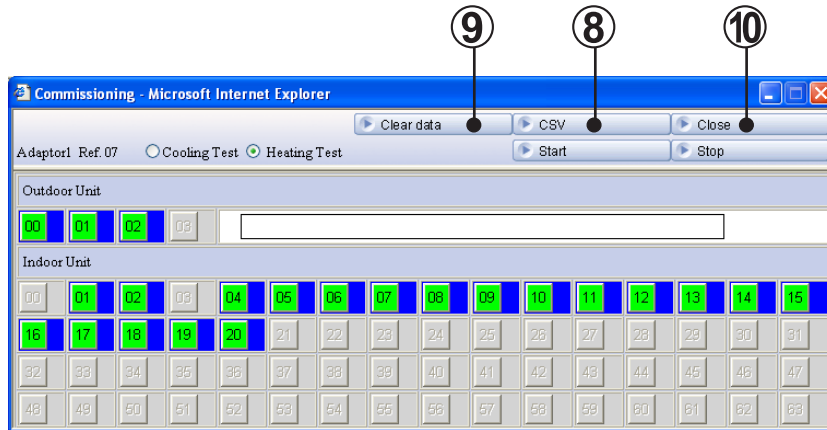


- ⑧ A CSV file for generating a commissioning report can be saved to an arbitrary folder by clicking the  button in the state of the unit which generated the commissioning log data. (For the commissioning report generation method, refer to 5-8-3 Commissioning report generation.)
- ⑨ The commissioning log data can be cleared by clicking the  button. When the commissioning log data is cleared, the background color returns to gray.
- ⑩ End the commissioning tool by clicking the  button. However, units which are test running are not stopped.

## 5-8-3 Commissioning report generation

There is a template to easily generate a commissioning report. (\*1)


A commissioning report can be easily generated by reading the CSV file generated by the commissioning tool to this template.

- ① Since there is a template named “CommissioningReport.xls” at C:\Program Files\VRF System\Web Monitoring Tool, open that file with Excel. (\*1)
- ② Display the started Excel “Creation” sheet.  
A screen like that shown below is displayed. (\*2)

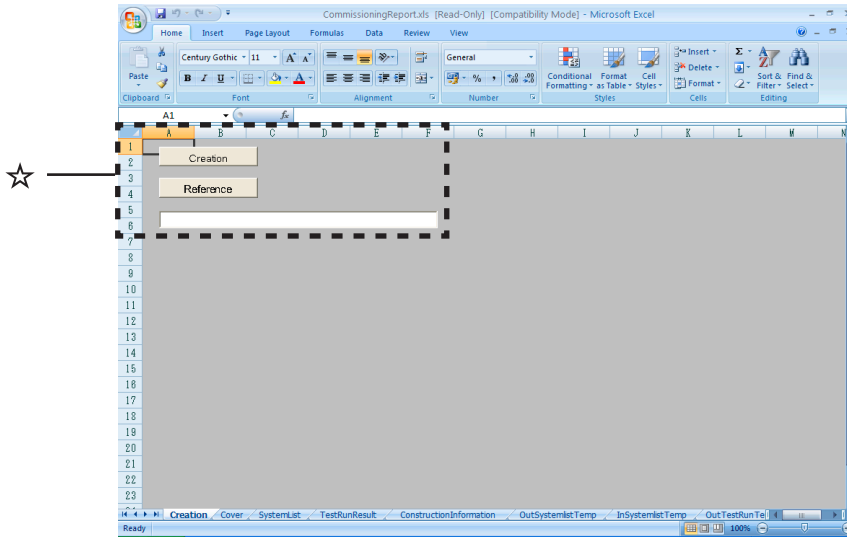

### Overview of each sheet

Creation	This screen is used to specify the read CSV file and execute commissioning report generation.
Cover	Commissioning report cover (*3)
SystemList	System list
TestRunResult	Test run result
ConstructionInformation	Construction information (*3)
OutSystemListTemp	System list template (outdoor unit)
InSystemListTemp	System list template (indoor unit)
OutTestRunTemp	Test run result template (outdoor unit)
InTestRunTemp	Test run result template (indoor unit)
DataSheet	Temporarily saves the CSV data. This sheet is used in report generation processing.

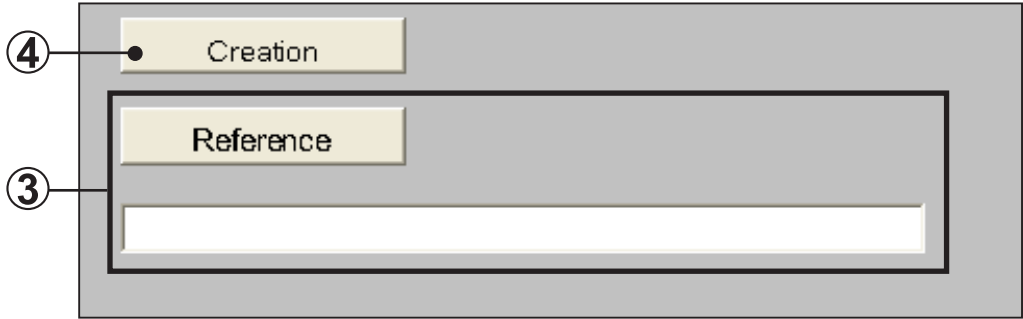

- ③ Specify the read CSV file by full path.  
A file reference dialog box is displayed by clicking the **Reference** button.

When a file other than a CSV file created by commissioning tool was specified when the path is incorrect, a commissioning report is not generated.

Specify the correct file.

- ④ Create “SystemList” and “TestRunResult” which read the CSV file specified at ③ by clicking the **Creation** button.


**Note** \*1 This template is created by Excel spreadsheet program.



Excel must be purchased separately.

When opening the file, you may be asked if you want to enable macro, depending on the security level set within Excel. In such cases, select “Enable Macros”.

- \*2 When you want to change the displayed sheet, click the sheet heading at the bottom of the screen. (See the following figure.)

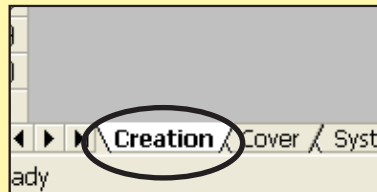

- \*3 Since generation is not automatic, the necessary items are inputted manually.

## 5-9 Operation history screen

The indoor units or outdoor unit operation history is displayed for each unit.

The displayed operation history can be printed and saved to a CSV file.

History display can display up to 500 items for the specified period.

### 5-9-1 Name and function of each area

#### ■ Control area (common)

Adaptor1 Ref. No. 00 Unit Indoor Unit 00 Date 16/10/2008 Time 00:00 - 2h OK  
Type Compact Cassette Name Print CSV Mark List Option

Adaptor	Specifies the transmission adaptor.
Ref. No.	Specifies the refrigerant system No.
Unit	Switches outdoor unit/indoor unit and selects the unit No.
Date	Specifies the date of the history data to be displayed.
Time	Specify the time range of the history data to be displayed.
OK	Displays the data of the unit of the specified conditions.
Type	Displays the unit type.
Capacity	Displays the capacity of outdoor unit.
Name	Displays the unit name.
Print	Displays a print window.
CSV	Displays the CSV save window.
Mark List	Displays the list of abbreviations.
Option	Set whether Display item (column) should be displayed or hidden.

## Outdoor unit

YRP System - Windows Internet Explorer

Fujitsu General V2

System List | Detail | History | Error History | Control | Troubleshoot

Addressport1 Ref.No.03 Util Outdoor Unit DC M Date 16/10/2008 Time 00:00 2h

Type Heat Pump Report H/F Name

Time	Operation	Special Operation	Mode	TH1 (°C)	TH2 (°C)	TH3 (°C)	TH4 (°C)	TH5 (°C)	TH6 (°C)	TH7 (°C)	TH8 (°C)	TH9 (°C)	TH10 (°C)	TH11 (°C)	HPS (kPa)	LPS (kPa)	HVI	OVI
00:01(3)	ON	-	Cool	82	1	20	20	20	20	20	20	20	20	20	1.77	0	OFF	OFF
00:03(3)	ON	-	Cool	-7	-41	20	20	20	20	20	20	20	20	20	-4.56	0	OFF	OFF
00:04(3)	ON	-	Cool	37	-19	20	20	20	20	20	20	20	20	20	-1	0	OFF	OFF
00:04(3)	ON	-	Cool	76	2	20	20	20	20	20	20	20	20	20	-1.43	0	OFF	OFF
00:04(3)	ON	-	Cool	143	34	20	20	20	20	20	20	20	20	20	-2.07	0	OFF	OFF
00:05(3)	ON	-	Cool	176	55	20	20	20	20	20	20	20	20	20	-2.48	0	OFF	OFF
00:05(3)	ON	-	Cool	124	76	20	20	20	20	20	20	20	20	20	-7.61	0	OFF	OFF
00:06(3)	ON	-	Cool	66	68	20	20	20	20	20	20	20	20	20	-1.55	0	OFF	OFF
00:06(3)	ON	-	Cool	48	119	20	20	20	20	20	20	20	20	20	-7.56	0	OFF	OFF
00:06(3)	ON	-	Cool	4	141	20	20	20	20	20	20	20	20	20	-2.2	0	OFF	OFF
00:07(3)	ON	-	Cool	-56	171	20	20	20	20	20	20	20	20	20	-4.2	0	OFF	OFF
00:07(3)	ON	-	Cool	-53	64	20	20	20	20	20	20	20	20	20	-0.11	0	OFF	OFF
00:07(3)	ON	-	Cool	-8	-42	20	20	20	20	20	20	20	20	20	-0.55	0	OFF	OFF
00:08(3)	ON	-	Cool	32	-21	20	20	20	20	20	20	20	20	20	-0.56	0	OFF	OFF
00:08(3)	ON	-	Cool	75	0	20	20	20	20	20	20	20	20	20	-1.59	0	OFF	OFF
00:09(3)	ON	-	Cool	117	21	20	20	20	20	20	20	20	20	20	-1.3	0	OFF	OFF
00:09(3)	ON	-	Cool	159	42	20	20	20	20	20	20	20	20	20	-2.25	0	OFF	OFF
00:09(3)	ON	-	Cool	180	63	20	20	20	20	20	20	20	20	20	-1.64	0	OFF	OFF
00:20(3)	ON	-	Cool	103	93	20	20	20	20	20	20	20	20	20	-3.24	0	OFF	OFF
00:20(3)	ON	-	Cool	26	115	20	20	20	20	20	20	20	20	20	-3.68	0	OFF	OFF
00:20(3)	ON	-	Cool	14	136	20	20	20	20	20	20	20	20	20	-4.11	0	OFF	OFF
00:21(3)	ON	-	Cool	-28	157	20	20	20	20	20	20	20	20	20	-4.72	0	OFF	OFF
00:21(3)	ON	-	Cool	-70	178	20	20	20	20	20	20	20	20	20	-4.95	0	OFF	OFF
00:22(3)	ON	-	Cool	-39	-57	20	20	20	20	20	20	20	20	20	-0.24	0	OFF	OFF
00:22(3)	ON	-	Cool	5	135	20	20	20	20	20	20	20	20	20	-0.68	0	OFF	OFF
00:22(3)	ON	-	Cool	47	-14	20	20	20	20	20	20	20	20	20	-1.11	0	OFF	OFF
00:22(3)	ON	-	Cool	47	-14	20	20	20	20	20	20	20	20	20	-1.11	0	OFF	OFF

Page area



Display item

### • Display item

S	V	VII	Description
	Time		Displays the data acquisition time. (*1) For summer time, (S) is displayed.
	Operation		Displays the operating status/unit status
	—	Special operation	Displays special operation in icon. Refer "Icon list for special operation" below.
	Mode		Displays the operating mode.
THD1		TH1	Displays discharge temperature 1. (*2)
THD2		TH2	Displays discharge temperature 2. (*2)
THD3	TH3	—	Displays discharge temperature 3. (*2)
THHI1	—	TH5	Displays heat exchanger inlet temperature 1. (S/V) Displays heat exchange temperature (VII). (*2)
THHI2		—	Displays heat exchanger inlet temperature 2. (*2)
THHI3		—	Displays heat exchanger inlet temperature 3. (*2)
THHO1	TH4	—	Displays heat exchanger outlet temperature 1. (*2)
THHO2		—	Displays heat exchanger outlet temperature 2. (*2)
THHO3		—	Displays heat exchanger outlet temperature 3. (*2)
—	TH5	—	Displays receiver low level temperature. (*2)
—	TH6	—	Displays receiver middle level temperature. (*2)
—	TH7	—	Displays receiver high level temperature. (*2)
—		TH8	Displays the SC HEX outlet temperature. (*2)
—	TH9	TH6	Displays liquid temperature 1. (*2)
—	TH10	TH7	Displays liquid temperature 2. (*2)
THS	TH11	TH4	Displays the suction temperature. (*2)
THO	TH12	TH3	Displays the outdoor temperature. (*2)
—	TH13	TH9	Displays the SCHEX inlet temperature. (*2)
—	—	TH10	Displays shell temperature (Invertor comp.)
—	—	TH11	Displays shell temperature (Constant rate comp.)
	HPS		Displays high pressure. (*3)

LPS		Displays low pressure. (*3)	
MPS	—	Displays middle pressure. (*3)	
—	4WV	Displays 4-way valve status.	
—	SV1	Displays solenoid valve 1 status.	
—	SV2	Displays solenoid valve 2 status.	
—	SV3	Displays solenoid valve 3 status.	
—	SV4	—	Displays solenoid valve 4 status.
—	SV5	Displays solenoid valve 5 status.	
—	SV6	Displays solenoid valve 6 status.	
—	SV7	—	Displays solenoid valve 7 status.
—	SV8	—	Displays solenoid valve 8 status.
CMP1		Displays compressor 1 status.	
CMP2		Displays compressor 2 status.	
CMP3	—	Displays compressor 3 status.	
—	HPSW1	Displays high pressure switch 1	
—	HPSW2	Displays high pressure switch 2	
Fan		Displays the fan status.	
EEV1		Displays electrical expansion valve 1 status.	
EEV2		Displays electrical expansion valve 2 status.	
EEV3	—	Displays electrical expansion valve 3 status.	
—	Inverter CMP (Hz)	Inverter CMP (rps)	Displays drive frequency of inverter comp.
—	Inverter CMP (°C)		Displays IGBT temperature of inverter comp.
—	Inverter CMP (V)		Displays DC voltage of inverter comp.
—	Inverter CMP (A)		Displays CT current of inverter comp.
—	CT current	Displays CT current of costant rate comp.	

- Page area  
Page will be displayed, if number of items to be displayed exceeds 1 page.  
(Refer to 5-14 Others screen (Display setting))

	Page may be shifted back and forth every 10 page.
	Signifies that there are no more page.
Page No.	Displays data corresponding to the page.

**Note** \*1 12-hour or 24-hour display. The display format depends on the setting at the data acquisition application.



\*2 Units display is [°C] or [°F]. The display format depends on the setting at the data acquisition application.

\*3 Units display is [Mpa] or [psi]. The display format depends on the setting at the data acquisition application.

\* For setting at the data acquisition application, refer to 4-3 Environment setting.

## ■ Indoor unit

Display item

Page area



Time	Operation	Special Operation	Mode	Set Temp (°C)	TH21 (°C)	TH22 (°C)	TH24 (°C)	EEV (F)	Fan	V.T. Louver	H.Z. Louver
120011	OFF	-	Stop	-	20	20	20	0	-	-	-
120029	OFF	-	Stop	-	20	20	20	0	-	-	-
120048	OFF	-	Stop	-	20	20	20	0	-	-	-
120107	OFF	-	Stop	-	20	20	20	0	-	-	-
120126	OFF	-	Stop	-	20	20	20	0	-	-	-
120145	OFF	-	Stop	-	20	20	20	0	-	-	-
120204	OFF	-	Stop	-	20	20	20	0	-	-	-
120223	OFF	-	Stop	-	20	20	20	0	-	-	-
120242	OFF	-	Stop	-	20	20	20	0	-	-	-
120300	OFF	-	Stop	-	20	20	20	0	-	-	-
120320	OFF	-	Stop	-	20	20	20	0	-	-	-
120338	OFF	-	Stop	-	20	20	20	0	-	-	-
120357	OFF	-	Stop	-	20	20	20	0	-	-	-
120416	OFF	-	Stop	-	20	20	20	0	-	-	-
120435	OFF	-	Stop	-	20	20	20	0	-	-	-
120454	OFF	-	Stop	-	20	20	20	0	-	-	-
120513	OFF	-	Stop	-	20	20	20	0	-	-	-
120532	OFF	-	Stop	-	20	20	20	0	-	-	-
120551	OFF	-	Stop	-	20	20	20	0	-	-	-
120610	OFF	-	Stop	-	20	20	20	0	-	-	-
120629	OFF	-	Stop	-	20	20	20	0	-	-	-
120648	OFF	-	Stop	-	20	20	20	0	-	-	-
120707	OFF	-	Stop	-	20	20	20	0	-	-	-
120726	OFF	-	Stop	-	20	20	20	0	-	-	-
120745	OFF	-	Stop	-	20	20	20	0	-	-	-
120803	OFF	-	Stop	-	20	20	20	0	-	-	-
120822	OFF	-	Stop	-	20	20	20	0	-	-	-


- Display item

S	V	VII	Description
Time			Displays the data acquisition time. (*1) For summer time, (S) is displayed.
Operation			Displays the operating status/unit status.
—		Special operation	Displays special operation.
Mode			Displays the operating mode. (Refer to 5-5-1 Name and function of each area.)
Set Temp			Displays the setting temperature. (*2)
THIA	TH21		Displays the room temperature. (*2)
THHI	TH22		Displays heat exchanger inlet temperature. (*2)
THHM	TH23	—	Displays the heat exchanger middle temperature. (*2)
—	TH24		
THHO	—		Displays the heat exchanger outlet temperature. (*2)
THOA	—		Displays the outlet temperature. (*2)
EEV			Displays electrical expansion valve status.
MAX EEV	—		Displays maximum EEV value.
SVD	—		Displays discharge solenoid valve status.
SVS	—		Displays suction solenoid valve status.
SVB	—		Displays bypass solenoid valve status.
—	Fan		Displays fan volume.
—	V.T. Louver		Displays vertical fan position.
—	H.Z. Louver		Displays horizontal fan position.

- Page area







 


Page will be displayed, if number of items to be displayed exceeds 1 page.  
(Refer to 5-14 Others screen (Display setting))

	Page may be shifted back and forth every 10 page.
	Signifies that there are no more page.
Page No.	Displays data corresponding to the page.










- Note**  \*4 12-hour or 24-hour display. The display format depends on the setting at the data acquisition application.
- \*5 Units display is [°C] or [°F]. The display format depends on the setting at the data acquisition application.
- \* For setting at the data acquisition application, refer to 4-3 Environment setting.

### ■ List of icon for special operation

Outdoor unit

ICON	EXPLANATION
	Oil recovery operation
	Oil recovery operation ended
	Maintenance mode
	Emergency stop
	Outdoor unit stopped
	Defrost operation
	Defrost operation ended
	Night mode operation
	Power save operation

Indoor unit

ICON	EXPLANATION
	Freeze prevention operation
	Anti-freeze operation
	Anti-freeze setting
	Maintenance mode
	Master indoor unit
	Operation mode controlled by master outdoor unit
	Operation mode controlled by master indoor unit
	Emergency stop
	Energy save operation

## 5-9-2 Operation history specification


The screenshot shows a web-based interface for specifying operation history. It includes several input fields and buttons. Callout 1 points to the 'Adaptor1' field, which contains 'Compact Cassette'. Callout 2 points to the 'Ref. No.' dropdown menu, which is set to '00'. Callout 3 points to the 'Unit' dropdown menu, which is set to 'Indoor Unit'. Callout 4 points to the 'Date' field, which is set to '16/10/2008'. Callout 5 points to the 'Time' field, which is set to '00:00:2h'. Callout 6 points to the 'OK' button. Callout 7 points to the 'Print' button. Callout 8 points to the 'CSV' button. Callout 9 points to the 'Option' button. There is also a 'Name' field and a 'Mark List' button.

- ①** Transmission adaptor display field  
The selected transmission adaptor is displayed on the par. 5-5 System list screen.  
When you want to change the transmission adaptor, do it from the par. 5-5 System list screen.
- ②** Refrigerant system selection field  
Specifies the refrigerant system No.
- ③** Unit selection field  
Switches the unit to be displayed. (Select from “Indoor Unit” / “Outdoor Unit”.)
- ④** Date specification field  
Specifies the date of the history data to be displayed.
- ⑤** Display time range specification field  
Specifies the range of the history time to be displayed.  
  
\* By specifying “One day”, the range will be 24 hours from the starting time. If range other than “One day” is specified, only data for that day (till midnight) will be displayed.
- ⑥** OK button  
Displays the history by specified condition.
- ⑦** Print button  
Prints the displayed data.
- ⑧** CSV button  
Displays the CSV save widow.
- ⑨** Set whether Display item (column) should be displayed or hidden.  
Items to be set in the option screen is as follows. When display items are set, they will be displayed right-wise.  
  
Checked ... display, Unchecked ... hidden




**Note** For Windows®XP SP2 and later versions,  
in order to save CSV files, set Internet Explorer as follows;  
from [Tool] menu, select [Pop-up Blocker], [Turn Off Pop-up Blocker]

### 5-9-3 Operation history printing


The operation history currently being displayed can be printed by clicking the  button.

#### 1 Printer setup and printing


Click on the print tool icon on the right upper corner of the screen and select “Page Setup...”.

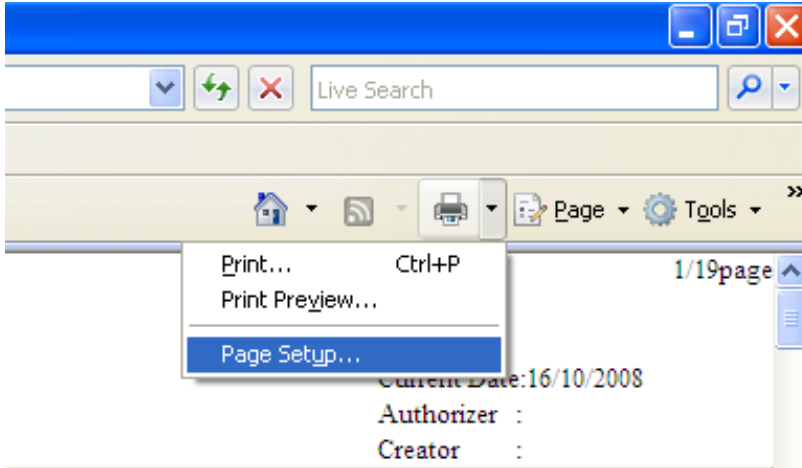


In the Page Setup screen, select the size of the paper as “A3” and the Orientation as “Landscape” and press “OK”. If other option is selected, the print may not come up as good.

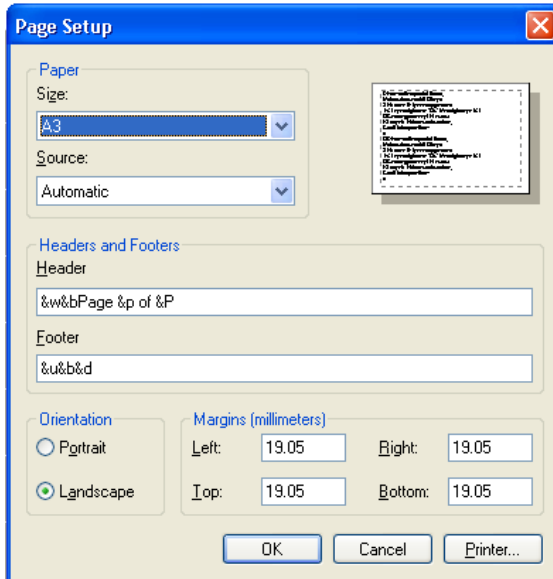

Click on the print tool icon on the right upper corner of the screen again and select “Print...” to start printing.

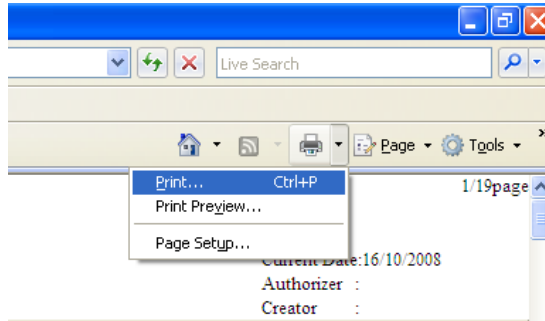

**Note** For Internet Explorer Ver.6 users, use the sub-menu in “File” menu to bring up the “Page Setup” screen and to perform “Print”.

② Close button  
When the  button is pressed, the print window closes.

The screenshot shows the 'HistoryOuter2Print' application window in Internet Explorer. The window title is 'HistoryOuter2Print - Windows Internet Explorer'. The address bar shows 'http://localhost/~/asp/historyOuter2Print.aspx'. The page content includes a header section with the following information:

\*\*\*\* Operation History (Outdoor Unit) \*\*\*\*  
 Site : Fujitsu General Y2  
 Adaptor : Acaptor1 Ref. No. : 00 Unit No. : 900M  
 Type : Heat Pump Capacity : HP  
 Name :  
 Current Date : 16/10/2008  
 Authorizer :  
 Creator :

Below the header is a table with the following columns: time, Operation, Special Operation, Mode, TR1 (°C), TR2 (°C), TR3 (°C), TR4 (°C), TR5 (°C), TR6 (°C), TR7 (°C), TR8 (°C), TR9 (°C), TR10 (°C), TR11 (°C), HPR (G/24h), LPR (G/24h), SW1, SW2, SW3, SW4, SW5, SW6, CO2P, HPSW, and Item. The table contains 10 rows of data, each representing a different time point and operation status.

Callout 1 points to the 'Close' button (X icon) in the top right corner of the browser window. Callout 2 points to the 'Print' button (printer icon) in the top right corner of the browser window. A purple box highlights the main content area, with a callout labeled 'List' pointing to the table. Another callout labeled 'Header' points to the text above the table.

## Printing contents

### Header

Site	Displays the site name.
Adaptor	Displays the transmission adaptor name, refrigerant system No., and indoor unit No.
Type	Displays the unit type.
Date	Displays the date and time of the display list.
Max EEV	Displays the maximum of the electrical expansion valve of the relevant unit. (*1)
Current Date	Displays the current date.
Ref. No	Displays the refrigerant No.
Unit No	Displays the unit No.
Capacity	Displays the capacity. (Only for outdoor unit)

### List

List	Displays the operation history currently being displayed.
------	---

#### Note



\*1 Only indoor unit of S series is displayed.

## 5-10 Error history screen

Displays the error information for each unit. The error information can sequentially display up to 50 items beginning from the newest error for each unit. This screen can also be printed and the error information can be saved in CSV format.

### 5-10-1 Name and function of each area

#### Control area

Device Section	Specifies the unit model. Select from "In/Outdoor Unit", "Peripheral Device".
Ref.No.	Specifies the refrigerant system No. (narrow down display)
Date	Specifies the date range to be displayed.
OK	Refreshes the display screen according to the specified conditions.
Request	Request for the latest error information of the specified unit. (Only VII series)
Clear	Clears all the error history data of the selected refrigerant system except for the existing errors.
Print	Prints the list currently displayed.
CSV	Saves the currently specified data to a CSV file.
PREV	Displays errors generated before the time displayed on the screen.
NEXT	Displays errors generated after the time displayed on the screen.
Unit Memory	Displays error names recorded in the indoor / outdoor units.


#### Display item

Model	Displays the unit model.
Address	Displays the address information (refrigerant system No./unit No.) of each unit.
Name	Displays the unit name. (*1)
Error1 ~ 50	Displays the error acquisition time and error contents. Displays currently generated errors in red.

**Note** \*1 Only when preset  
(Refer to 3-2-4 Name master database file selection screen.)



## 5-10-2 Error history display method

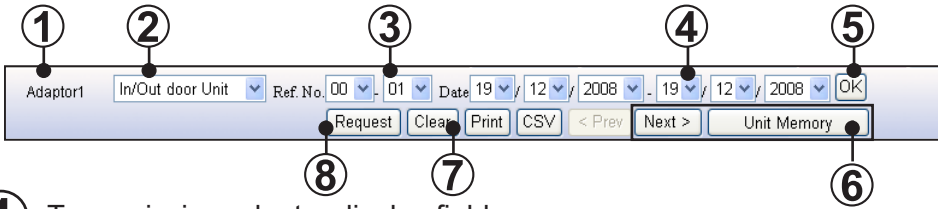

- 1** Transmission adaptor display field  
The selected transmission adaptor is displayed on the par. 5-5 System list screen. When you want to change the transmission adaptor, do it from the par. 5-5 System list screen.
- 2** Display unit model selection field  
Selects the unit model.  
For indoor unit/outdoor unit, select “In/Outdoor Unit” and for centralized remote controller/transmission adaptor, select “Peripheral Device”.
- 3** Refrigerant system selection field  
Specifies the range of the refrigerant system No. to be displayed. (\*1)
- 4** Date selection field  
Selects the range of dates to be displayed. (\*2)
- 5** OK button  
Refreshes the display data according to the selected conditions by clicking the  button. (\*3)
- 6** Display item change button  
The  button displays the next error. (Errors are displayed in groups of 5, such as when Error1~Error5 were displayed, Error6~Error10 are displayed.)  
The  button returns to the previous error.
- 7** Clear button  
Clear the error history data of the selected refrigerant system by pressing the  button. (\*4)
- 8** Request button  
Request error history by clicking the  button.

- Note**
- \*1 If the end refrigerant system No. is smaller than the start refrigerant system No., an error message is displayed.
  - \*2 If the end date is earlier date than the start date, an error message is displayed.
  - \*3 Displays only the units with an error history remaining.  
Troubleshooting screen (refer to 5-16) can be displayed by clicking the error contents of the display. However, excluding “TransmissionAdaptor” errors.
  - \*4 The Clear button can be used only by level 1 users (users who can use all the functions).


## 5-10-3 Error history printing

The currently displayed error history can be printed by clicking the **Print** button on the error history screen.


①

### Printer setup and printing


Click on the print tool icon on the right upper corner of the screen and select “Page Setup...”.

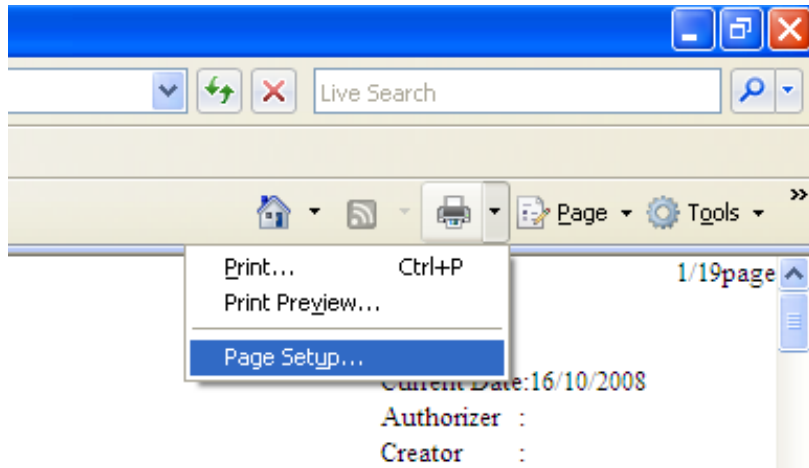


In the Page Setup screen, select the size of the paper as “A3” and the Orientation as “Landscape” and press “OK”. If other option is selected, the print may not come up as good.

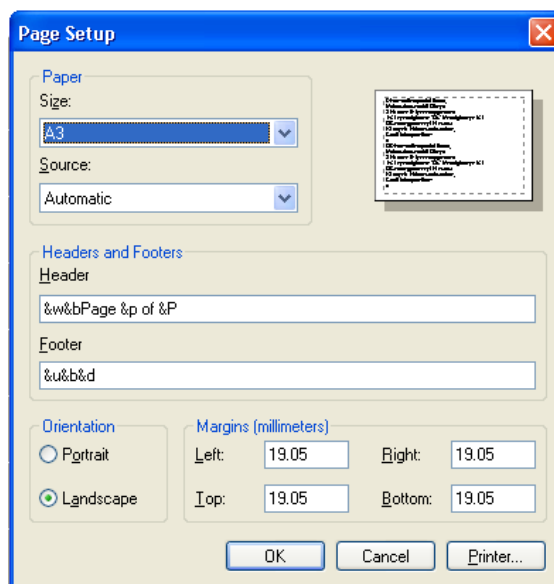


Click on the print tool icon on the right upper corner of the screen again and select “Print...” to start printing.

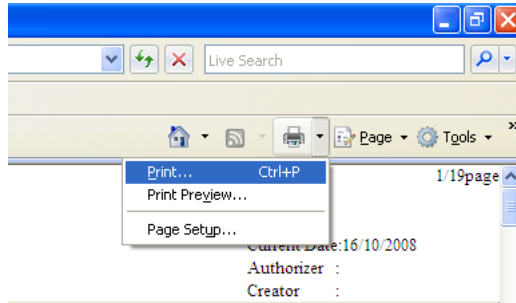

**Note** For Internet Explorer Ver.6 users, use the sub-menu in “File” menu to bring up the “Page Setup” screen and to perform “Print”.

② Close button  
When the  button is pressed, the print window closes.

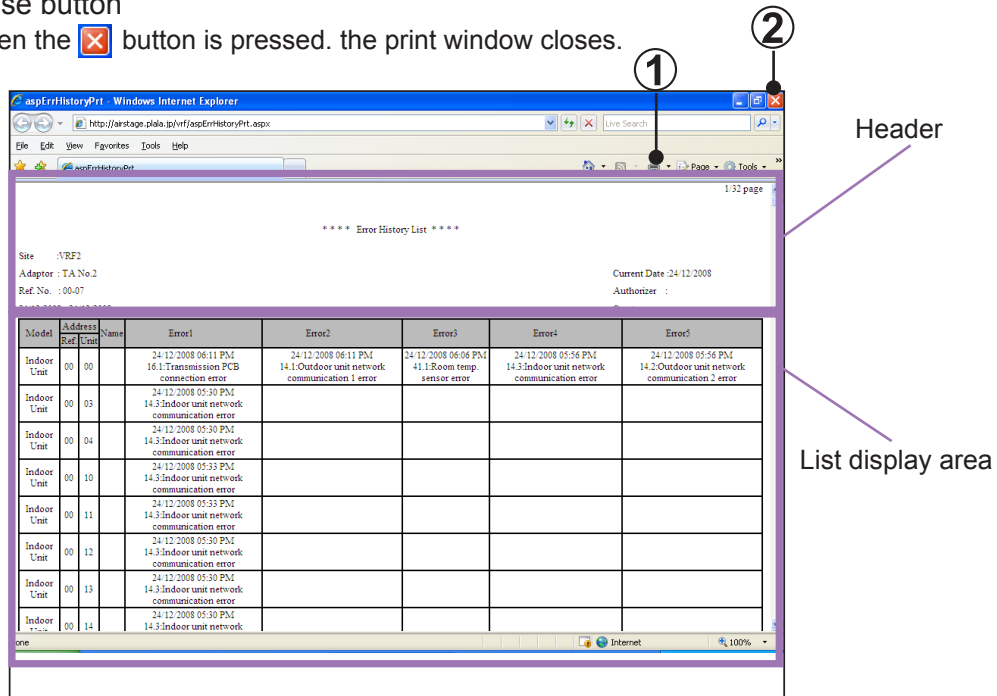

5. Web application

Printing contents  
Header


Site	Displays the site name.
Adaptor	Displays the transmission adaptor name.
Ref. No.	Displays the specified refrigerant system range.
Date	Displays the date range of the specified data.)
Current Date	Displays the current date.

List display area

List	Displays the error history list displayed on the screen.
------	--

## 5-10-4 Unit Memory

By pressing the **Unit Memory** button, the most recent error information recorded in the indoor / outdoor unit will be displayed. Using this screen, you can display the maximum of 20 error information of any specified indoor / outdoor unit.

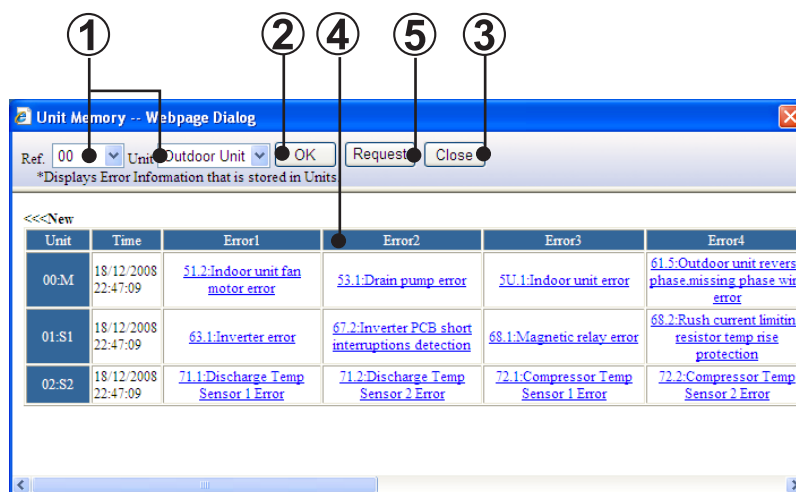

- ① Specify refrigerant system address and unit type whose error records are to be displayed. You may only specify unit for the refrigerant systems of V (Outdoor unit) and VII (Outdoor/Indoor unit) series.
- ② Error information for the refrigerant system address specified in ① are displayed below.
- ③ Close this screen.
- ④ Display error information as described below.

Unit	Displays unit address.
Time	Displays the date & time when the error information was acquired from the unit.
Error n n=20 for V series n=10 for VII series	Error n displays error names acquired from the unit. When blank, no error exists. Errors will be sorted by time, [Error1] being the most recent error.

- ⑤ Request error history.  
Error history may be acquired for any unit.


### Note



- This is a supplementary screen to the Error History Screen. Use This screen to check errors not confirmed in the Error History Screen.
- There are cases where the information in this screen and that of Error History Screen do not match. This is because of the differences in the information between the 2 screens.
  - a) Error History Screen displays errors real-time and the data may be deleted at will.
  - b) This screen displays errors recorded in the indoor / outdoor unit at one time.
- Errors in this screen do not have information on dates.

## 5-10-5 Request Error History

By pressing the **Request** button, the most recent error information will be acquired for the specified units. The acquired information can be displayed as previously explained in “Error history display method” section. You may only use this function for VII series.

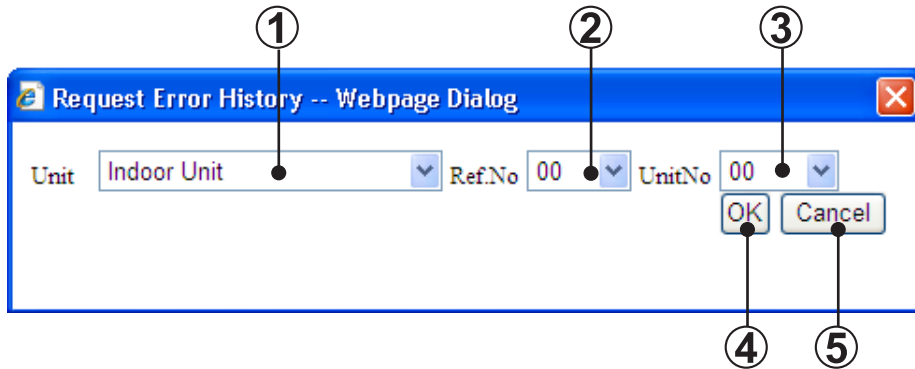


- ① Specify unit type whose error information is to be requested.
- ② Specify refrigerant system address whose error information is to be requested.
- ③ Specify unit No. whose error information is to be requested.
- ④ Perform request.
- ⑤ Cancel request



**Note** Requesting error of particular unit using this screen may become necessary when immediately after connecting Web Monitoring Tool to a system and you need the latest error information.

## 5-11 Control screen

Operation of each refrigerant system No., indoor unit No. or each R.C. Group can be controlled.

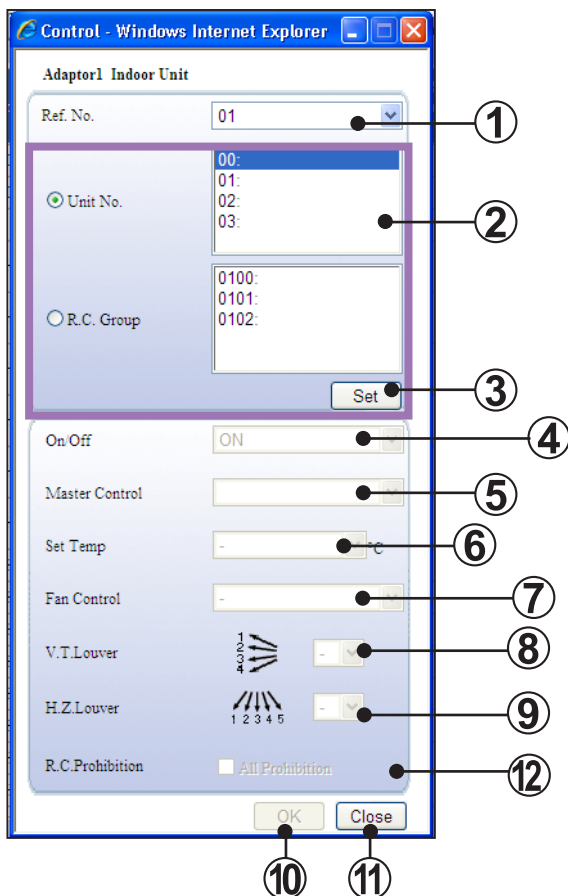

- ① Ref No. selection field  
Selects the refrigerant system No. (The refrigerant system No. to be registered can be selected.)
- ② Control objective selection field  
When specifying in unit units, select "Unit" and when specifying in R.C. Group units, select "R.C. Group". (Unit No and R.C. Group cannot be selected simultaneously.)  
Multiple units can be selected by pressing "ctrl" key while selecting.
- ③ Set button  
Fix the unit selection
- ④ On/Off selection field  
Selects the operating status. (Select from On/OFF/On (Test).)
- ⑤ Master Control selection field  
Selects the operating mode. (Select from Cool/Heat.)
- ⑥ Set Temp selection field  
Selects the temperature. (\*1)

- ⑦ Fan Control selection field  
Selects the air flow. (Select from Auto/S-Low/Med/High.)
- ⑧ V. T. Louver  
Select the vertical louver position.
- ⑨ H. Z. Louver  
Select the horizontal louver position.
- ⑩ OK button  
Controls operation according to the specified contents.
- ⑪ Close button  
Closes the screen without taking any action.
- ⑫ R.C. Prohibition  
Specify that all operation using remote controller will be prohibited. \*2  
Checked ... Operation prohibited, Unchecked ... Not prohibited.

**Note** \*1 Displayed in Celsius or Fahrenheit depending on the data acquisition application setting.



The settable range depends on the series.

Mode	Series	Celsius	Fahrenheit
Cool	All	18~30°C	64~88°F
Heat	S	16~30°C	60~88°F
	V / VII	10~30°C	48~88°F

\*2 When setting the R.C. Prohibition, be sure to release the prohibition afterward.

## 5-12 Others screen


Various setting may be performed and any existing data may be downloaded. When the Others button is clicked from the main menu, the following Others menu is displayed at the bottom of the main menu.

Setting	User Registration, Change, Deletion/Set Request Interval
Download	Save/Download Data
Display setting	Set Auto-Refresh Interval/Set Number of History Data

Setting	Performs new user registration, user password change, registered user deletion, and demand interval setup. (Refer to 5-13 Others screen (Setting))
Download	Any unit data currently displayed can be saved. (Refer to 5-14 Others screen (Download))
Display setting	Setting Auto-refresh interval and maximum No. of lines per page. (Refer to 5-15 Others screen (Display setting))

## 5-13 Others screen (Setting)

Performs user registration, user password change, registered user deletion, and demand interval setup. When the Setting button is clicked from the Others screen, the following setting menu is displayed at the bottom of the main menu. Each setting processing can be performed only when a Level 1 user was logged in by Server. In other cases, buttons are not displayed at the main menu. (Refer to par. 5-4 Main menu.)

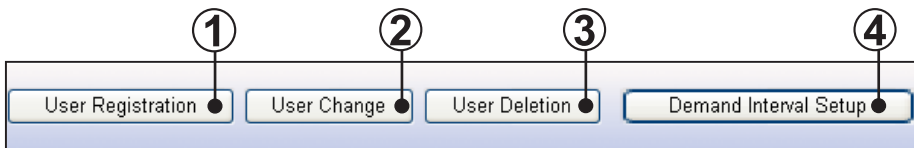

- ① User registration button  
Shifts to the user registration screen.
- ② User change button  
Shifts to the user change screen.
- ③ User deletion button  
Shifts to the user deletion screen.
- ④ Demand interval setup button  
Shifts to the demand interval setup screen.

## 5-13-1 User registration

Registers new user ID and password. A data acquisition application start user can be added.

The screenshot shows a web browser window titled "VRF System - Microsoft Internet Explorer". The page has a navigation bar with "VRF" and buttons for "System List", "Detail", "History", and "Error". Below the navigation bar are four buttons: "User Registration", "User Change", "User Deletion", and "Demand Interval Setup". The "User Registration" button is selected. The main content area is titled "UserRegistration" and contains the following form elements:

- New UserID:** A text input field with a callout 1 pointing to it.
- New Password:** A text input field with a callout 2 pointing to it.
- Confirm New Password:** A text input field with a callout 3 pointing to it.
- Level:** A dropdown menu showing "1" with a callout 4 pointing to it.
- OK:** A button with a callout 5 pointing to it.

- ①** User ID input field  
Input the user ID. (Up to 20 alphanumeric characters) (\*1)
- ②** Password input field  
Input the password. (Up to 20 alphanumeric characters) (\*1)
- ③** Password confirmation input field  
For confirmation, input the password again. (Up to 20 alphanumeric characters) (\*2)
- ④** User level selection field  
Select the user level. Level 1 or level 2 can be selected.  
Level1 : All functions can be used.  
Level2 : All functions except control, commissioning tool, and setting can be used.
- ⑤** OK button  
Registers the inputted contents. (\*3)

**Note**

- \*1 If the user ID and password input fields are not inputted, an error message is displayed.
- \*2 If there is a difference in the password and password confirmation input contents, an error message is displayed.
- \*3 If the same user ID is already registered, an error message is displayed.

## 5-13-2 User change

The password of a registered user can be changed.

The screenshot shows a web browser window titled "VRF System - Microsoft Internet Explorer". The page has a navigation bar with "VRF" and buttons for "System List", "Detail", "History", and "Error". Below this are buttons for "User Registration", "User Change", "User Deletion", and "Demand Interval Setup". The "User Change" section contains the following form elements:

- 1** UserID selection field: A dropdown menu with "vrf" selected.
- 2** Password input field: A text box.
- 3** New Password input field: A text box.
- 4** Confirm New Password input field: A text box.
- 5** User level selection field: A dropdown menu with "1" selected.
- 6** OK button: A button labeled "OK".

- 1** User ID selection field  
Select the user to be changed.  
The currently registered users can be displayed and selected with .
- 2** Password input field  
Input the password of the user to be changed. (Up to 20 alphanumeric characters) (\*1)
- 3** New password input field  
Input the password to be newly registered. (Up to 20 alphanumeric characters) (\*1)
- 4** New password confirmation input field  
For confirmation, input the password again. Input the same password as the new password. (\*2)
- 5** User level selection field  
Select the user level. Level 1 or level 2 can be selected.  
Level1 : All functions can be used.  
Level2 : All functions except control, commissioning tool, and setting can be used.
- 6** OK button  
Performs change processing according to the inputted contents. (\*3)

- Note**
- \*1 When the password and new password input fields are not inputted, an error message is displayed.
  - \*2 When the contents input at the new password and new password confirmation input fields do not match, an error message is displayed.
  - \*3 When the password of the selected user ID is incorrect, an error message is displayed.

## 5-13-3 User deletion

Deletes registered users.

The screenshot shows a web browser window titled "VRF System - Microsoft Internet Explorer". The page has a yellow header with "VRF" and navigation buttons for "System List", "Detail", and "History". Below the header are four buttons: "User Registration", "User Change", "User Deletion", and "Demand Interval Setup". The "User Deletion" button is active. The main content area is titled "User Deletion" and contains the following form elements:


- User ID:** A dropdown menu with "vrf" selected. A callout '1' points to this field.
- Password:** A text input field. A callout '2' points to this field.
- OK:** A button. A callout '3' points to this button.

- 1** User ID selection field  
Select the user to be deleted.  
The currently registered users can be displayed and selected with  .
- 2** Password input field  
Input the password of the user to be deleted. (Up to 20 alphanumeric characters) (\*1)
- 3** OK button  
Deletes the selected user. (\*2)

**Note** \*1 When the password input field is not inputted, an error message is displayed.  
\*2 When the selected user ID and password do not match, an error message is displayed.

## 5-13-4 Demand interval setup

Specifies the interval at which the temperature, pressure information, and electrical components operating status is specified for each unit in the VRF System. The refresh interval of the data displayed at the system list, operation history, and unit detail screens is changed by changing this setting. When the demand interval is set to a small value, the data refresh interval becomes shorter, but the data may be received correctly by an error. At this time, set this interval to a large value.

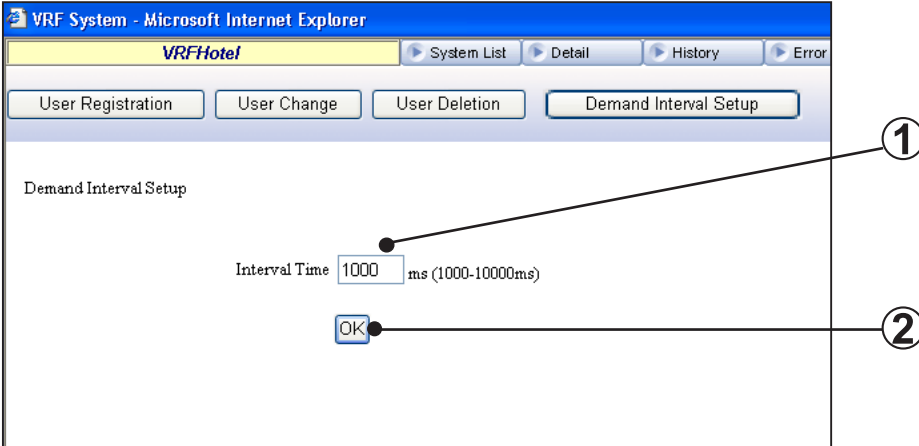


- ① Interval time input field  
Set the demand interval time. (\*1)
- ② OK button  
Refreshes the demand interval time according to the inputted time.

**Note** \*1 The currently set time is displayed by default. Only the numerics 1000 to 10000 (ms) can be inputted. When input is incorrect or there is no inputted, an error message is displayed.

## 5-14 Others screen (Download)

Any unit data currently displayed can be saved. The saved data may be displayed as offline data for Service Tool Ver. 1.0.

When the Download button is clicked from the Others screen, the following setting menu is displayed at the bottom of the main menu.

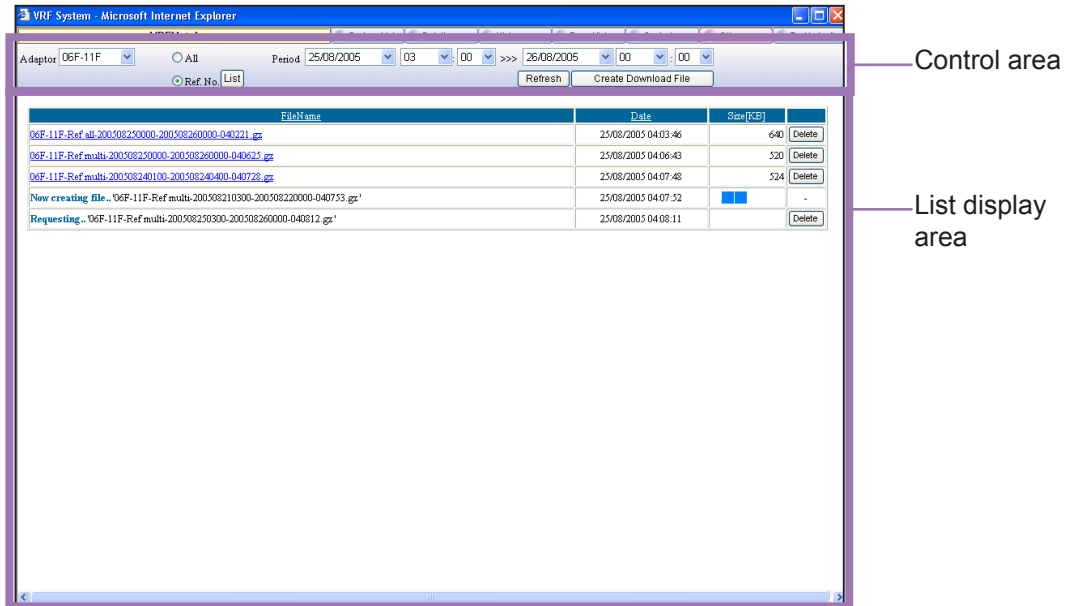

### 5-14-1 Name and function of each area

#### ■ Control area

Specify the conditions and creation of data file to be downloaded.


Adaptor	Displays the transmission adaptor name.
All & Ref.No.	Specify the refrigerant address of the data file.
Period	Specify the period of the data file.
Refresh	Update the contents of "List display area".
Create Download File	Create data files.

#### ■ List display area


Display the list of created data files. Also, any data files may be specified for download and/or deletion.

FileName	Display the file names created in the Control area. Also any data file may be downloaded.
Date	Display date of creation of the data files.
Size	Display the size (in KB) of the data files created. When creation is in progress, display the status of progress.
Delete	Delete any data file.

# 5-14-2 Procedures for Creating Download Files

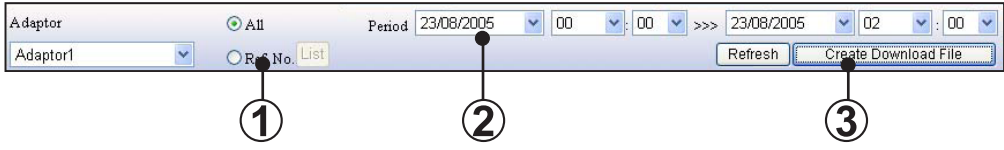

- 1** All & Ref. No.  
 Specify the range of refrigerant system of the data files to be created by one of the following methods. If Ref. No. is specified, refrigerant address selection screen will be show up by pressing the List button. Specify the desired refrigerant address here.
- All ..... All refrigerant addresses are specified.
  - Ref. No ..... Refrigerant address selected in the refrigerant address selection screen will be specified.

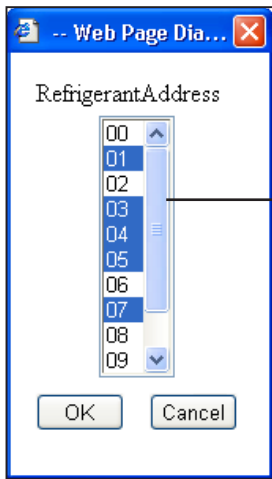

Refrigerant Address selection screen

- 2** Period  
 Specify the period (Start >>> End) of the data file to be created by date and time.
- 3** Create Download File  
 Start creating data files using the condition specified by **1**, **2**. Creation progress may be checked with the FileName in the "List display area".
- FileName format is as follows;  
 [Transmission adaptor name - Ref all or Ref multi \*- Period - time]  
 →The operation data files created by specifying arbitrary conditions.  
 [--Error- - Transmission adaptor name - Ref all or Ref multi \*- creating time - index]  
 →Operation data file created automatically for the refrigerant system address where any of the unit belonging to that refrigerant system has caused error. This file is created at 2 AM every night for errors that occurred the previous day.  
 \* Ref all ... All / Ref multi ... Ref.No.
  - There 3 progress status.
    - Completed ... Only File name (File name will be underlined)
    - Creating ... Now creating file ... File name
    - Waiting ... Requesting ... File name

## 5-14-3 Data file download/deletion

FileName	Date	Size[KB]	
<a href="#">06F-11F-Ref all-200508250000-200508260000-040221.gz</a>	25/08/2005 04:03:46	640	Delete
<a href="#">06F-11F-Ref multi-200508250000-200508260000-040625.gz</a>	25/08/2005 04:06:43	520	Delete
<a href="#">06F-11F-Ref multi-200508240100-200508240400-040728.gz</a>	25/08/2005 04:07:48	524	Delete
New creating file.. '06F-11F-Ref multi-200508210300-200508220000-040753.gz'	25/08/2005 04:07:52		-
Requesting ..'06F-11F-Ref multi-200508250300-200508260000-040812.gz'	25/08/2005 04:08:11		Delete

① points to the first file name in the table.

② points to the Delete button in the last row of the table.

### ① Download

Click on the (underlined) file name that you want to download.

### ② Delete

Click on the "Delete" button on the same line as the file name that you want to delete.

## 5-15 Others screen (Display setting)

Make display setting for the “Detail” screen and “Operation history” screen.

When the Display setting button is clicked from the Others screen, the following setting menu is displayed at the bottom of the main menu.

Detail			
Auto-Refresh Interval	5	sec (1-60sec)	①
History			
Maximum Number of Lines per Page	50	lines (50-500lines)	②
		OK	③

- ① Auto-Refresh Interval (\*1)  
Set “Detail” screen update interval. This defines not the screen update interval but interval for checking the existence of updated data. The check will be performed in this interval and if the data is updated, the screen display will be updated.
- ② Maximum number of Lines per Page (\*1)  
Defines the maximum number of data that can be displayed in a page of Operation history screen.
- ③ OK  
Register the data set in ①, ②.


**Note** \*1 Depending on the performance spec. of personal computer used, operation of this software may become slow. In such case, re-adjust the value set and check the operation.



## 5-16 Troubleshooting screen

Displays the error contents and corrective action. Display is performed from the main menu and error history screen.


### 5-16-1 Name and functions of each area

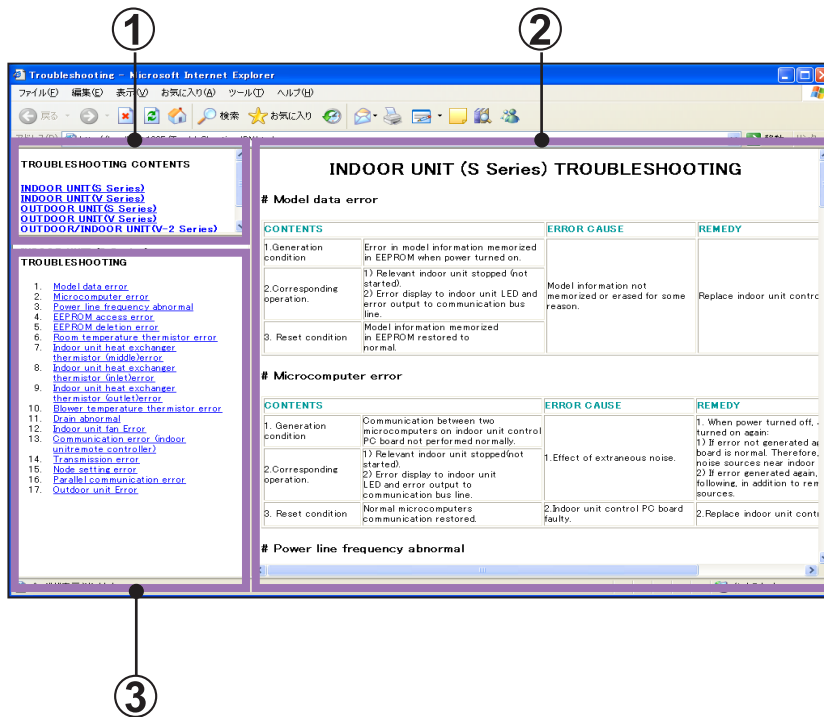

① Contents area by type  
When contents are clicked, the contents of the error contents are displayed.


② Troubleshooting contents display area  
Displays the error details.  
For VII series, this area will be displayed full screen.

③ Contents data area for each error contents  
When contents are clicked, those contents are displayed.  
This area will not be displayed for VII series.

**Note**  When VII series is selected, trouble shooting section from service manual will be displayed. This will give you a precise and detailed instruction on trouble shooting.

## 5-17 Log out

Logs out. When par. 5-4 Main menu is clicked, a confirmation message is displayed.

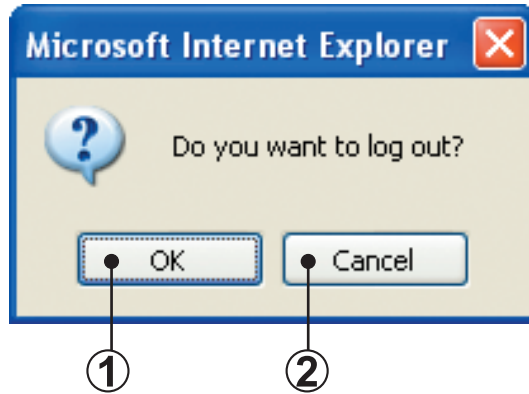

- ① OK button  
Logs out. Closes the main screen and shifts to the login screen.
- ② Cancel button  
Returns to the original screen without logging out.


## 5-18 When error generated

When the Web Monitoring Tool (WEB application) cannot be used, the following screen is displayed.

### 5-18-1 Scanning other units


Displays when bus priority processing was generated at another unit (Touch Panel Controller, other System Controller). In this case, all operations which perform communication become impossible. When scanning ends, the display automatically returns to the processing screen and operation becomes possible.

- ① Message  
The unit name being scanned is displayed.

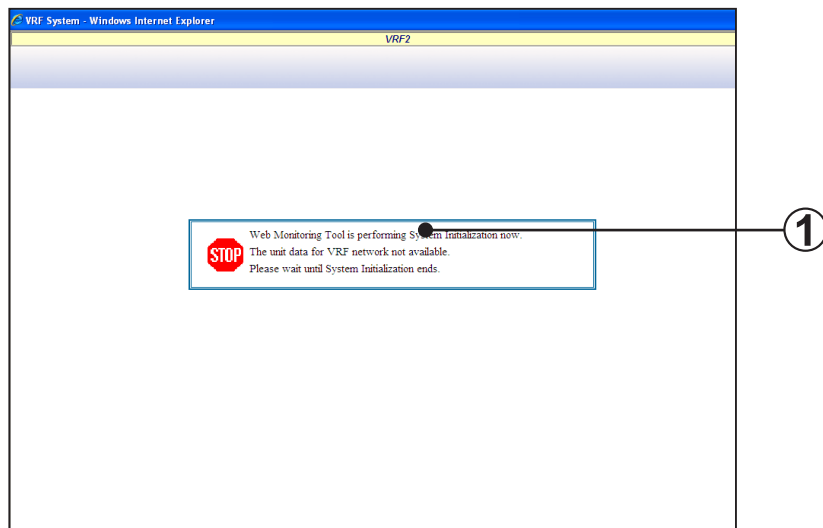

### 5-18-2 Data acquisition application shutdown

Displays when the data acquisition application is shut down. All operations are impossible. Start the data acquisition application.

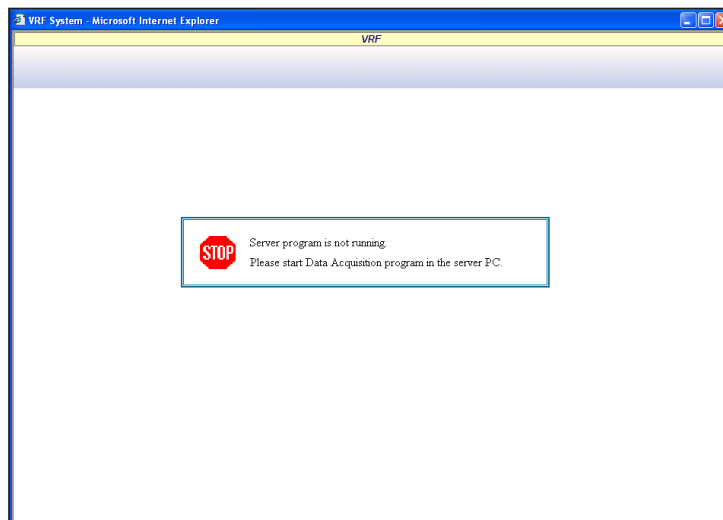



# Contents

<b>6. Troubleshooting</b> .....	<b>108</b>
---------------------------------	------------

---


# 6. Troubleshooting

When a problem occurred during operation, refer to this section. This section describes assumed problems and how to solve them.

T-1 A transmission adaptor connection error was generated.

### Cause

- ① Driver is not installed.
- ② Power is not supplied to the transmission adaptor.

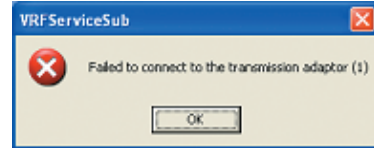

### Countermeasure

- ① To use this product, install necessary drivers/software for this product following the \*\*\*QUICK START\*\*\* enclosed with this product.
- ② Make sure that USB equipment (USB hub, etc.) that this product is connected to, is not overloaded (power supplied thru the interface does not exceeds the maximum limit).

T-2 Forms cannot be printed.

### Cause

- ① Printer power is not ON.
- ② Printer cable between PC and printer is not properly connected.
- ③ Printer driver is not correctly installed.

### Countermeasure

- ① Check if the printer power is ON.
- ② Check if the printer cable is connected.
- ③ Print forms by performing printing processing by Windows® setting. Refer to Windows® printing troubleshooting, and check whether or not the Windows® printer setting is correct.

T-3 “Master Abnormality.” message was displayed by the browser.

**Cause**

There is an abnormality in the master data.

**Countermeasure**

The database backed up last time is automatically restored. This software cannot be used until completion of restore processing. Since restore processing takes several minutes, wait a while before performing operation. The data backed up the previous time and subsequently is lost. After recovery, check the data.

T-4 “Can not control this transmission adaptor.” message was displayed by the browser.

**Cause**

The system entered a state in which it cannot control operation because the name master data was not received.

**Countermeasure**

Wait until the Web Monitoring Tool automatically acquires each name master data, and then scan by detailed information scanning setting. For details, refer to par.

3-2-5

Scanning.

T-5 “No data existing.” message was displayed by the browser.

**Cause**

Data cannot be displayed because the unit data which is the display objective was not received.

**Countermeasure**

Wait until the Web Monitoring Tool automatically acquires each unit data, and then set Intensive Data Acquisition (IDA) Mode at the system detail screen. For details, refer to par. 5-6-1 Name and function of each area.

T-6 “Server access error occurred.” message was displayed by the browser.

### Cause

- ① Error was generated when accessing the database.
- ② The database may have been stopped by some cause.
- ③ The database may have been destroyed.
- ④ PC memory is used up.

### Countermeasure

- ① Close the browser and redo from log in.
- ② Restart the PC and then restart the Web Monitoring Tool.
- ③ The database backed up last time is automatically restored. This software cannot be used until completion of restore processing. Since restore processing takes several minutes, wait a while before performing operation. The data backed up the previous time and subsequently is lost. After recovery, check the data.
- ④ Close all applications and stop unnecessary services of the PC in order to free memory. Add extra memory if possible (refer “3-2 Recommended specs” of Setting Manual).

T-7 During scanning, PC power was dropped by a power failure or erroneous operation and operation became unstable.

### Countermeasure

At a power failure, incomplete data remains and operation may be performed with this incomplete data at the next starting. Repeat scanning. When the power was interrupted during another operation, the operation may return to normal by the same operation after resetting.

To permanently prevent these, installation of a UPS is recommended.

T-8 Email was not received at the set address.

### Cause

- ① Email address setting is incorrect.
- ② Transmission mode setting at environment was not set to match the usage environment.
- ③ Dial-up connection setting is incorrect.
- ④ Service was temporarily stopped due to line congestion or provider maintenance.

### Countermeasures

- ① Check the email address setting.  
⇒ Check par. 4-3-3 Error notification email setting.

- ② Check the transmission mode setting.  
⇒ Check par. 4-3-2 Transmission mode setting.
- ③ Check the dial-up connection setting.  
Refer to the documentation of the contracted provider and check the setting.
- ④ The provider used may not be in an unusable state. Since the system tries to send every 5 minutes, wait until the provider recovers.

T-9 Air conditioner is not controlled in R.C. group units.

**Cause**

R.C group data cannot be acquired.

**Countermeasure**

Repeat scanning by detailed information scanning setting.

T-10 Displayed text is garbled.

**Cause**

PC regional setting is incorrect.

**Countermeasure**

Set \*\* Setting Manual \*\* par. 6-1-1 Regional option to “English (United Kingdom)”.

T-11 Cannot connect from client to server.

**Cause**

- ① Connection environment between server and client is not created.
- ② Network setting is incorrect.
- ③ Specification at connection is incorrect.

**Countermeasures**

- ① Inspect and check the following contents regarding the connection environment.
  - Check the physical connection. (Cable not connected? Connection point correct?)
  - Check the operation status by network device error lamps, etc.
  - Contact the telephone company and check the state of the line.
  - Ask the provider about the trouble status.
- ② Check the network settings.
  - Check the IP address/subnet mask settings.  
⇒ Check the contents specified at item ⑤ of par. 6-3-2 LAN connection of the Setting Manual.
  - Check the connection destination telephone number.  
When connecting to an internet that used dial-up connection

⇒ Check the procedure supplied by the provider.

Incoming connection

⇒ Check the telephone number specified at item ⑨ of par. 6-3-5 Dial-up setting of the Setting Manual.

- Check the firewall setting.

Setting of server itself (Windows® XP SP2 and later)

⇒ Check the par. 6-1-2 Windows® Firewall setting of the Setting Manual.

When Firewall installed

⇒ Check enable port No. 80 connection from the outside setting.

③ Check specification at connection.

- At incoming connection, check the user name/password input by the client.

⇒ Specify the user and password at the screen of step ⑪ of par. 6-3-4 Incoming connection remote connection setting of the Setting Manual.

- Check the connection destination specification (IP address/server name) at input from the browser.

⇒ Check the Web application starting method of par. 5-1-1 Web application starting conditions and functions change of the Operation Manual.

T-12 Suddenly cannot connect to server.

**Cause**

- ① Sever power was tripped.
- ② Web Monitoring Tool application was exited at server.
- ③ Service temporarily stopped due to line congestion, provider maintenance, etc.
- ④ Setting of DNS service at provider takes time.

**Countermeasures**

- ① Supply power to the server PC and restart.
- ② Start the Web Monitoring Tool application.
- ③ After waiting a while, reconnect.
- ④ Perform internet connection and after waiting a while, log in to the server.

T-13 Response was slow when Web Monitoring Tool server was accessed.

**Cause**

- ① Transmission line speed may be slow.
- ② Specifications of installed PC may be slow.

**Countermeasures**

- ① Switch transmission line contract to fast line.

- ② Operate with a PC that satisfies the published specifications.

T-14 Template file for the Commissioning Report (CommissioningReport.xls) can't be opened.

**Cause**

Security level in Excel is set to "High".

**Countermeasure**

Start Excel, from the "Tool" menu;  
Select [Tool], [Macro], [Security] then,  
in the "Security Level" tab, set the level to "Medium" or "Low".

T-15 Pop-up window does not show up in the Web Monitoring Tool screens. (Control screen, Commissioning tool, etc.)

**Cause**

Pop-up Blocker is enabled in the Internet Explorer.

**Countermeasure**

- ① Open Internet Explorer → [Tools] → [Pop-up Blocker] and check [Turn Off Pop-up Blocker]
- ② If any of the search tool bar from various search engines (Yahoo, Google etc.) is installed, disable the Pop-up Blocker.  
(For detail, refer the help of each toolbar.)

T-16 Refrigerant circuit diagram is not displayed for outdoor/indoor unit in the Detail screen (diagram).  
(Message "Cannot display refrigerant circuit diagram" is displayed).

**Cause**

Model name was not acquired from indoor/outdoor unit (VII series only).

**Countermeasure**

- ① Perform scan again (Refer section 3-2-5 Scanning).  
After scanning, check that the model name is displayed in the System List screen.
- ② If the name is not displayed in the System List screen, enter the correct model name for the unit in the Name master database file (Refer section 3-2-4) and select "re-scanning" from the right-circle menu in the task tray.  
When requested for the Name master database file, specify the file, but the following scan may be cancelled.

Q-1 Can the Web Monitoring Tool be restarted by installing it on the same PC as the System Controller or other Software tool and using the same transmission adaptor?

**Answer**

The Web Monitoring Tool can be installed on the same PC, but simultaneous operation is outside the warranty. Also, each application cannot simultaneously share one transmission adaptor.

Q-2 Can a browser other than Internet Explorer be used?

**Answer**

Other browsers cannot be used because they are incompatible.

Q-3 Can multiple servers at a large type site be collectively monitored with one network line contract?

**Answer**

An LAN must be built through a router at the server side. For more information, contact the network administrator or dealer.

Q-4 For internet connection, may not information be read by other users on the network?

**Answer**

The security level can be increased by any of the following methods

- ① Use VPN connection. For more information, refer to the related documents related to Windows®, or contact the dealer.
- ② Change to a connection method that uses incoming connection. The possibility of the leakage of information is lower than for internet connection. For more information, refer to par. 6-3-4 Incoming connection of the \*\* Setting Manual \*\*.

Q-5 Air conditioners cannot be controlled from the client.

**Cause**

Security is emphasized so that the air conditioners cannot be controlled from the client.