

# Air Purifying Filter (Electric Filter) for the Room Air Conditioner

## Model UTR-FA01 Instruction Manual


### 1. Features of the electric filter

The electric filter cleans the air in the room by removing cigarette smoke and minute dust particles that cannot be seen by the eye. In addition, the active charcoal decreases the tobacco smell and other room odors.

### 2. Installing the electric filter

#### (1) Remove the air filter from the indoor unit.


- Open the intake grille, grasp the air filter and move it slightly upward to remove it from the two hooks, then pull the air filter downward. (Remove both the left and right air filters.)

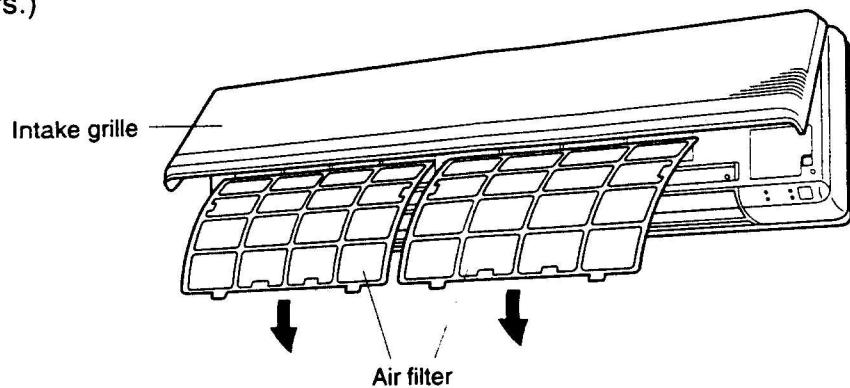


#### (2) Attach the holder (electric filter) and the electric filter to the air filter.

- Fit the electric filter into the holder (electric filter) with the black screen of the electric filter facing upward.
- The hooks on the holder (electric filter) should fit into the notches in the air filter (at eight places).

The black screen should face upward.

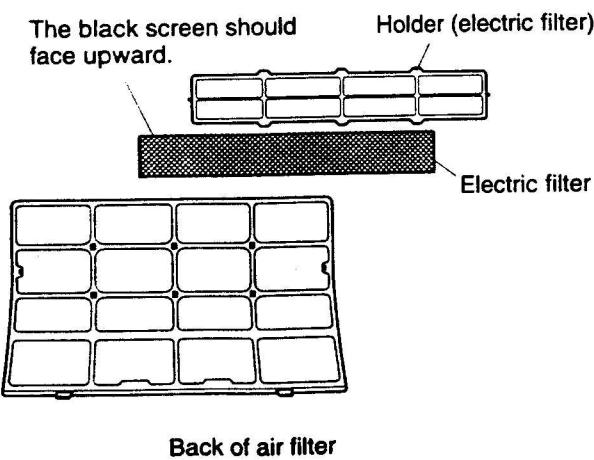

Back of air filter

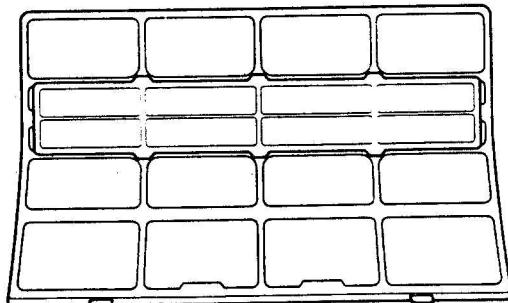

#### (3) Install the air filters with the attached electric filters into the indoor unit.

### **3. Installation precautions**

- Do not wash the electric filter. Doing so will decrease its air cleaning efficiency.
- Do not place the electric filter near a stove or other hot appliance. Otherwise it will deform, decreasing its efficiency.
- When using the electric filter, set the air conditioner's fan speed to "HIGH" in order to increase the efficiency.
- When the electric filter is installed, the amount of air produced decreases, causing a slight decrease in the air conditioners capacity.
- Do not store the electric filter in an extremely hot or humid location. Install the electric filter immediately after opening its package. (Leaving the electric filter unwrapped decreases its air cleaning efficiency.)

### **4. Replacing the electric filter**

- Depending on the size of the room and the conditions in which the air conditioner is used, the normal life of the electric filter is about three months. If the electric filter becomes dirty within three months, replace it as soon as possible. (The electric filter is disposable. Do not reuse it.)
- When replacing the electric filter, purchase a replacement electric filter (UTR-FB01) from your air conditioner parts dealer.